

USER MANUAL

(-MODEL NO:G6-)



FOC ID: 2BL9C-G6 FOC ID: 2BL9C-G8

Unlock the Future with Our Smart Lock: Security Meets Convenience



FOR USERS IMPORTANT

Thank you for choosing DEVO smart lock

In order to ensure the ease of use and safety of our products, we have prepared this manual to help you better understand DEVO. Smart Lock.

Thank you for purchasing a "DEVO" smart lock. Considering the continuous improvement and updating of our products, the actual products may be slightly different from the pictures in this manual, please refer to the actual products!

DEVO smart lock is popular among users for its unique appearance, advanced and reliable technology and considerate after-sales service. Our smart locks have been tested for reliability and functionality. Ambient light test, temperature test, etc. constitute the leading and unique advantages of smart locks.

Our company has established a complete intelligent R&D, manufacturing and sales system. All smart locks are independently developed by the company. We sincerely invite you to share with us your experience of use and opinions of improvement, which will help us to improve our products.

CONTENTS


Hardware Introduction	01-03
•••	
Compatible Doors	04
Parts List	05-06


Product Dimension	07-08

Installation Overview	09-20
Programming Instructions	21-32
•••	
Troubleshooting	33-34
•••	
Product Parameters	35-36

1/Hardware Introduction

(1) Overview

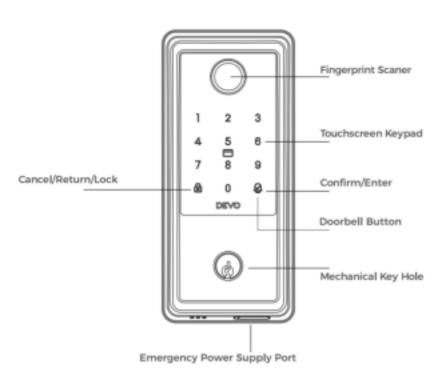


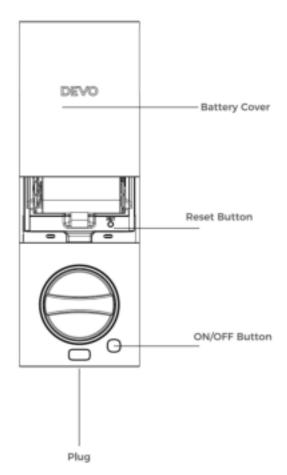


Notes: The "Emergency Power Supply Port" is not for battery charging purpose and can only be used for emergency power supply to the lock.

2/compatible Doors


Compatible Doors

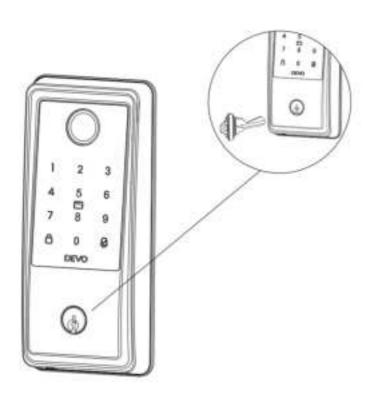


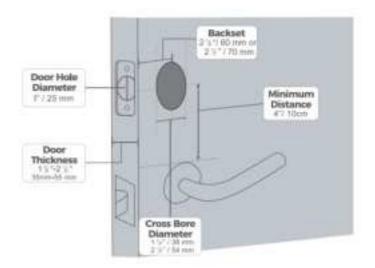


05.

 3 / Parts List

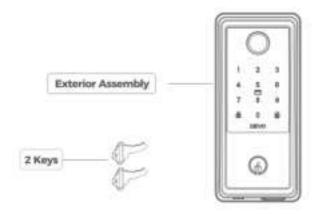




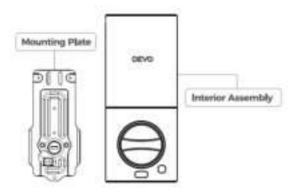




4 / Product Dimension



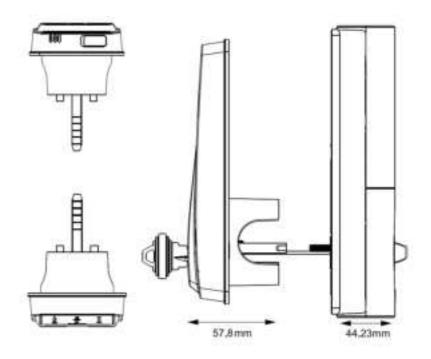

5/Installation Overview

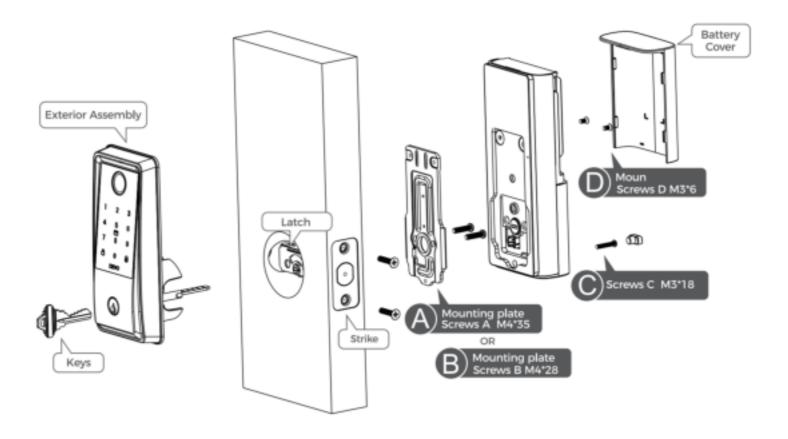



*45-55mm door thickness use@


*35-45mm door thickness use®

Step 1. Install Deadbolt

  
Check your door to see if the deadbolt requires adjustment.
 If the backset is 70mm, turn the faceplate 180' to extend the length.



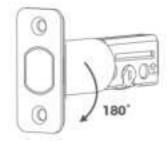




(2) Insert and screw the deadbolt into the doorframe.

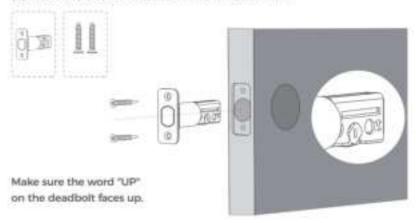

Step 2. Install Strike Plate

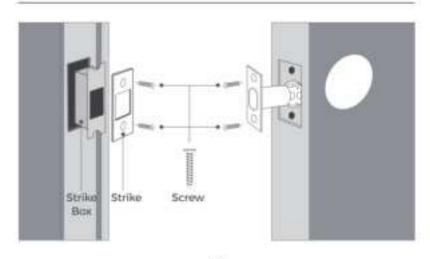


Step 3. Install Exterior Assembly

Remember to attach the rubber gasket to the handle before Installation.


(1). Measure your cross bore dimension and determine the installation steps accordingly

- If the cross bore of your door is 1 ½" /38mm", please remove the adapter.
- If the cross bore of your door is 2 %"/54mm".
 please keep the adapter.

 (2) Route the cable connected on the exterior assembly under the Latch. Make sure the tailpiece is Vertically to the exterior assembly bottom, as







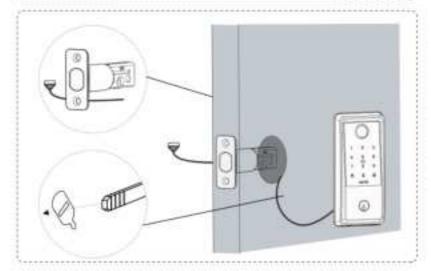

Step 4. Install Interior Assembly

(1), Detach the back cover from the interior assembly.

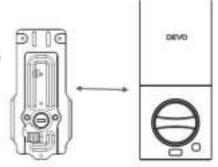

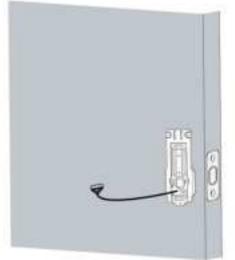

(2) Run the wires through the back cover.



45-55mm door thickness use A




thickness use B.

 
(3). Secure the back cover with screws.

Important:Please select Screw A .Screw B based on the thickness of the door(35mm-55mm)

- 1.Thickness of Screw A compatible doors 45-55mm
- 2.Thickness of Screw B compatible doors:35-45mm


- (5) Fix the exteriorassem blyby the doub le sided tape.
- (6). Wire to the interior assembly.

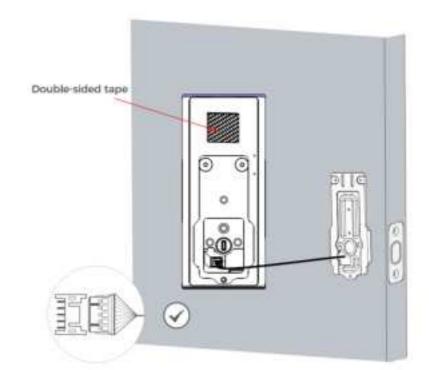






35-45mm door

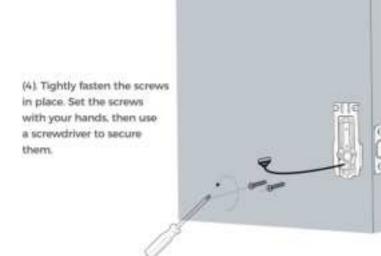


(7) Mount the interior assembly. Make sure the wire is tucked into the cabin on the back of the interior assembly.

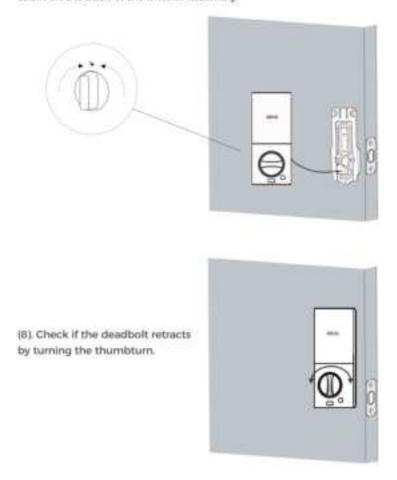




 (9) Install 5 AA batteries into the door lock and it is ready to be used. (5 AA batteries are not included)




(10). Pay attention to the placement direction of the positive and negative poles of the battery when installing it.

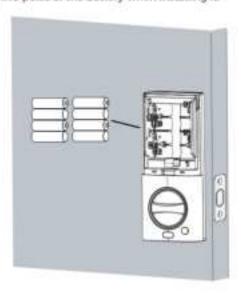

Apart from being able to configure your door lock through the app, you can also directly set the relevant settings on the door lock following the instructions below.

(1). Smart Lock Powered on

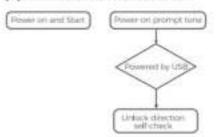


The smart lock self-checks the unlock ing direction when powered on. After the self-check is completed, the lock will be closed.

6/Programming Instructions

(1). User Type

Туре	Capacity	Description
Administrator	1	Sequence ID 1 Unlock Management
Regular User	199	 Sequence ID 2-200, Unlock, (Invalid when the Anti-lock is On)
Total	200	Fingerprint Capacity: 100 Passcode Capacity: 50 IC Capacity: 50


(2). Enter The Function Settings Mode

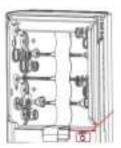


Short press the "Settings" button. You will hear a voice prompt saying. "Please verify administrator user." Enter the correct administrator tor password, then press the "unlock" button to confirm. If the password verification is successful, you will enter the setting mode.

Notes: When the automatic locking is turned on, the lock enters the unlocked state. After the set time, the lock will automatically close.

(3). Setting Mode Function List

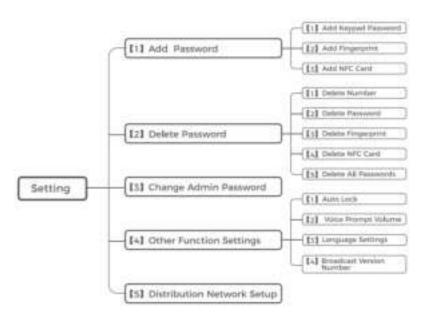

 
(4). Restore Factory Settings



- Press and hold the "Set" button. After 4 seconds, the lock will start to make a "dong" sound (7 times).
- Press and hold the button until you hear a voice prompt To confirm, press the unlock button." 6.
- Press the unfock button within 4 seconds and you will hear a voice prompt: Factory reset successful.



(5), Set Administrator Password

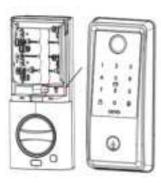

- Step1: Press the setting button. If no administrator password has been set before, you will hear a voice prompt: Please set the administrator password.
- Step2: After input the administrator password, press the unlock button to confirm.
- Step3: Follow the voice prompt instructions, erster the administrator password again, and ones the unlock button to confirm.

25

(6). Others

- There are 5 consecutive trial and error opportunities for fingerprints and passwords within 5 minutes, and will be locked for one minute after exceeding the limit.
- After the ultra-low power alarm, the motor cannot work, load condition if the battery power is lower than 10%, it will report low battery.
- Before configuring the network, please ensure that the power has just been disconnected and plugged in to avoid abnormal pre-operations that may cause the device to fail to enter the network configuration mode normally.
- 4. After entering the network configuration mode, it will remains for 120s. If the network is not configured within the validity period of the network configuration the device will automatically restart and exit this mode. In this mode, no other operations are possible.

Operation	Operation result	Indicator status	Voice broadcast
Forgorphist / Parameted / Remains serticle / Visite up pared	Very secondary	The green indicator light triang lights up unce	Verty successfully, Unfocked
	wellcacion taleat	The red indicator Egine Egints up timetty timbs	Verify successfully
	Locked after exceeding the number of trial and error attempts	6	System by hed
	Statistry N Anal State 2019	1)	Low hattery pieces replace the hattery
	Barriery is about to run out.	λ <u>0</u>	The battery is too kee pleaser use the key or emergently sower aupply
Lincia.	Screwful	E	Locket
Enter the menu.	This button partiell is 1,8y Barrinsteil	1	House enter administrator password
Profit Henry Herr	Repeat the current menu containt	£	V.
factory reset	Press and hold for To	The key panel is N.By Murrinsted during the precess.	Troughts of Young during story? House print the solbick faction to confirm
Prover on the device	Install the bettery and turn on the power	The proved light follows on all the same times	Power on time

(7). App Operation Guidance

1). Connect The Lock To Internet


Following the installation instruction to install the smart lock.



O Download Smart Life App.




 Calibrate the smart lock and Complete Wi-Fi settings in the App.

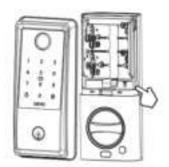



2). Steps to Access System Networking



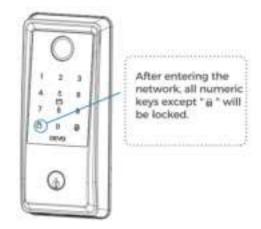

 Register and login to the Smart Life App.



(8). Main Interface Introduction

1). Add Device (Smart Life App For Reference)



Please make sure that your Phone is connected to the 2.4G Wi-Fi network. Please make sure that your Phone 's Bluetooth is turned on







CECKARD Device

Wwiting for divide seach

 Once the device is discovered risch GJ rievos

2). Network Configuration







 Choose the same 2.4G W. Fl. metwork as your phone and enter you paraword

3).Members Management



O Merritor management



Select the corresponding member



 Actd or deline fingerprints and personnels

4). Settings




Notes: In sleep mode the device cannot be writen up from the App and only be triggered from the device which can greatly reduce the power consumption of the device.

5) . Password Settings



6). Device Unbinding

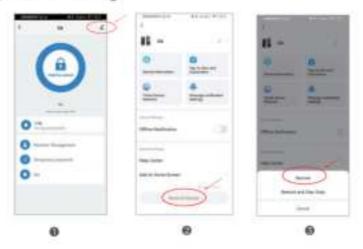

	Answers
for WIFI Door Locks Can't connect to Wi-Fi	This device only supports 2.4 GHz network and does not support 5G network and mixed-band network. When connecting Wi-Fi to the device. Please make sure that the lock is in paring mode (please refer to page28). Please make sure that your phone is connected to the 2.4G Wi-Fi network. Please make sure that your phone's Bluetooth is turned on. When you select the Wi-Fi to the device, you must choose the same 2.4G network Wi-Fi as your phone. (After the lock's Wi-Fi connection is successful, the access network of your phone does not restrict5G or 2.4G).
	 How to test whether the Wifi network meets the requirements: Prepare a phone that provides a hotspot network as a Wifi signal, and connect the lock to the hotspot Wi-Fi according to the above requirements. If the network connection is successful and works properly please log in to the router's background to check the Wi-Fi frequency band and signal stability it provides.
The device is stay offine and cannot reconnect to the network	Please check if the lock has entered dormant mode. While device is sleeping, the APP will be absolutely offline (please refer to page 31.) When the battery power is lower than 10%, the lock will automatically enter low-power mode and disconnect from the network to ensure basic functions such as locking and unlocking. The network connection triggered by the doorbell is not affected by low battery.

8/Product Parameters

Power Supply	4.8V-6V Eight Cell No.5 Battery/2400 mAh
Emergency Power	5V
Fingerprint Capacity	Fingerprints 100MAX, Passcodes 50 MAX, IC Card 50 Max
Identification Speed	0.25 Sec
False Positive Rate	< 0.0001%
Rejiection Rate	< 0.1%
Working Temperature	<-15°-50°C (5°F-122°F)
Working Humidity	0%-85%(No Condensation)
Standby Current	380uA
Dynamic Power Consumption	450mA
Material	Aluminum Alloy
Passcode Length	Supports 6-8 Digits
Energency Power Interface	Type-C
Scramble Passcode	Support Scramble Passcode

3578 123456 65987
Real Passcode
Random Digits

(Add Random Digits Before Or After The Real Passcode)
Random Digits No Length Limit



For any questions, please feel free to contact us, we will send you a reply and solve the problem within 24 hours.



Email: DEVO.services@outlook.com

DEVO reserves the final interpretation right of all terms and conditions in this manual.

MADE IN CHINA

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

For WIFI Door Locks

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

For NFC Door Locks

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.