

Quick Start Guide



Thanks for buying the
nixplay Cloud Frame



Please carefully follow
this Quick Start Guide



Warranty:

This Cloud Frame comes with a full one-year Manufacturer's Warranty. You do not need to register your warranty. In the event your Cloud Frame requires any servicing, you just need to contact us via our website: www.nixplay.com.

Please provide a copy of your original order information as proof of purchase.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

nixplay
www.nixplay.com

2

GET TO KNOW YOUR FRAME

Basic actions
& procedures

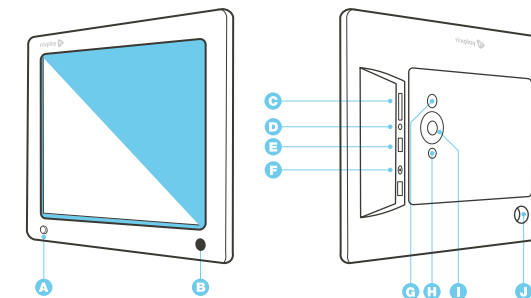

Press & Hold 3 secs approx to turn screen ON

- | | |
|---|---|
| <p>Function</p> <p>A Motion Sensor - Senses movement and turns the Cloud Frame ON and OFF</p> <p>B IR Sensor for Remote - Receives signals from the remote</p> <p>C SD/SDHC Card Slot - Connect your memory card and view photos</p> <p>D Headphone/Speaker Port - Connect your headphones or speakers</p> <p>E USB Port - Connect your USB flash drives and view photos</p> <p>F Power Adapter DC-in (5V) - Plug-in power cable for power</p> | <p>G ON/OFF Button - Press and hold to power on the Cloud Frame</p> <p>H Menu Button - This will allow you to go back a step</p> <p>I 4-way Menu Control and PLAY Button - Helps you navigate and select</p> <p>J Stand screw hole - Screws your stand in</p> |
|---|---|

1

ASSEMBLE FRAME


PART A:
The Frame setup



PART B:
The Web setup



A LIVE FRAME

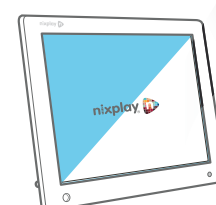

Remote

- A** Delete - Delete selected photo
- B** Rotate and Save - Rotates a selected photo 90 degrees at a time
- C** Share - not implemented yet
- D** WiFi Setting
- E** Slideshow - Starts the slideshow (whenever you are in the Frame's settings or menu)
- F** UP/DOWN/LEFT/RIGHT arrows - Navigate through the Cloud Frame's Menus
- G** OK - Confirms changes made on Cloud Frame
- H** Back - Go back a step in any of the Cloud Frame's menus
- I** Vol- / Vol+ - Adjust the volume if you watch a video
- J** Menu - Goes directly to the main menu
- K** ON/OFF - Turns your Frame on or puts it into standby
- L** Motion Sensor - Turns motion sensor ON/OFF

