



This Manual includes an English Abridgement



Global Standard

V801SH

基本操作編

Abridged English Manual

For more information about handset operations and functions, please go to the Vodafone K.K. Website (www.vodafone.jp) for the full manual* or dial 157 from a Vodafone handset for Customer Service.

Contents

 
Accessories	16-2	■ Forwarding a Call	16-28
Safety Precautions	16-2	■ Calling from Call History	16-29
General Notes	16-10	■ Manner Mode	16-29
Minding Mobile Manners	16-14	■ Driving Mode	16-29
■ Basic Handset Etiquette.....	16-14	Entering Characters	16-30
■ Manner-Related Features.....	16-14	■ Character Types	16-30
Handset Parts & Functions	16-15	■ Key Assignments.....	16-31
■ Handset (Front)	16-15	■ Symbols, Pictographs & Emoticons ...	16-32
■ Handset (Side & Back).....	16-16	Saving to Phone Book	16-33
■ Charging Battery	16-18	■ Phone Book Entry Items	16-33
■ Display.....	16-20	■ New Phone Book Entries	16-34
■ Symbols.....	16-23	■ Editing Phone Book	16-35
■ USIM Card.....	16-24	■ Saving from Call History	16-35
■ USIM PINs	16-25	Dialing from Phone Book	16-36
■ Handset Codes	16-25	■ Entry Number Search	16-36
Basic Handset Operations	16-26	■ Search by Reading.....	16-36
■ Turning Handset On/Off	16-26	Mobile Camera	16-37
■ Display Language	16-26	■ Before Using Camera.....	16-37
■ Your Phone Number	16-26	■ Capturing Still Images	16-37
■ Setting Clock	16-26	Data Folder	16-38
■ Japan/International Mode.....	16-26	■ Data Folder Contents.....	16-38
■ Initiating a Call.....	16-26	■ Opening Data Folder	16-39
■ Redial	16-27	■ VGS Mail Attachments.....	16-39
■ Total Charges & Talk Time ...	16-27	F Function Shortcuts	16-40
■ Incoming Call	16-27	Specifications	16-44
■ Placing a Caller on Hold.....	16-28	Customer Service	16-47
■ Message Recorder & Voice Mail...	16-28		

*Please note that the full manual may not be available in English at time of purchase. In this case, call Customer Service or check Vodafone Website again at a later date.




Accessories


■ Battery (SHBR01)* (Type 1 lithium-ion battery)




■ Rapid Charger (SHCR01)*

 

■ Desktop Holder (SHER01)*

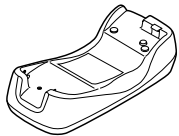 

■ Analog Conversion Cable

 

■ Optical Conversion Plug



■ Stereo Headphones



■ SD Memory Card

■ USB HOST Driver for V801SH (CD-ROM)

*Additional quantities may be purchased separately.

Tip

Address accessory-related inquiries to Customer Service, General Information (P. 16-47).



Safety Precautions

- Read safety precautions before using handset.
- Observe precautions to avoid injury to self or others or damage to property.
- Vodafone is not liable for any damages resulting from use of this product.

Before Using Handset

■ Symbols

Make sure you thoroughly understand these symbols before reading on. Symbols and their meanings are described below:

	DANGER	Great risk of death or serious injury from improper use
	WARNING	Risk of death or serious injury from improper use
	CAUTION	Risk of injury or damage to property from improper use

■ Symbols

	Prohibited Actions
	Compulsory Actions
	Attention Required

DANGER

Handset, Battery & Charger



Use only the specified battery, charger or holder

Using non-specified equipment may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.



Do not short-circuit charger terminals

Keep metal objects away from charger terminals. Keep handset away from jewelry. Battery may leak, overheat, burst or ignite causing injury. Use a case to carry handset.

Battery



Prevent injury from battery leakage, breakage or fire.

Do not:

- Heat or dispose of battery in fire.
- Disassemble, modify or break battery.
- Damage or solder battery.
- Use a damaged or deformed battery.
- Use non-specified charger.
- Force battery into handset.
- Charge or place battery near fire, heat sources or in extreme heat.
- Use battery for other equipment.



If battery fluid gets into eyes, do not rub them. Rinse with clean water and consult a doctor immediately.

Eyes may be severely damaged.

WARNING

Handset, Battery & Charger

-  **Do not insert foreign objects into handset**
Do not put metal or flammable objects in handset, charger or holder. This may cause fire or electric shock. Keep handset out of the reach of children.
-  **Keep handset out of rain or extreme humidity**
Fire or electric shock may occur.
-  **Keep handset away from liquid-filled containers**
Keep handset, charger and holder away from chemicals/liquids. Fire/electric shock may result.
-  **Avoid sources of fire**
Prevent fire or explosion. Do not use handset in the presence of gas or fine particles (coal, dust, metal, etc.).
-  **Do not use Mobile Light near people's faces**
Eyesight may be temporarily affected leading to accidents.
-  **Keep SD Memory Card, Analog Conversion Cable & Optical Conversion Plug out of reach of small children**
If swallowed accidentally, consult a doctor immediately.
-  **Keep handset, charger or holder away from microwave ovens**
Battery or handset may leak, burst, overheat or ignite and cause accidents.
-  **Do not disassemble or modify handset**
 - Do not open handset, battery or holder; may cause electric shock or injury. Contact Vodafone Customer Assistance for repairs.
 - Do not modify handset, charger or holder. Fire or electric shock may result.
-  **Do not subject handset to shocks**
Subjecting handset, charger or holder to shocks may cause malfunction or injury. Should the handset break, remove the battery and contact Vodafone Customer Assistance. Discontinue handset use. Fire or electric shock may occur.
-  **If water or foreign matter should get inside handset:**
Discontinue handset use to prevent fire or electric shock. Turn handset power off, remove battery, unplug charger and contact Vodafone Customer Assistance.
-  **If an abnormality occurs:**
Should there be unusual sound, smoke or odor, discontinue handset use to avoid fire or electric shock. Turn handset power off, remove battery and unplug charger and contact Vodafone Customer Assistance.

Handset

-  **Preventing accidents**
For safety, never use handset while driving. Pull over beforehand.
-  **Do not swing handset by handstrap**
May result in injury or breakage.
-  **Turn handset power off before boarding aircraft**
Using wireless devices aboard aircraft may cause electronic malfunctions or endanger aircraft operation.
-  **Adjust vibration and ring tone settings:**
Select settings carefully if you have a heart condition or pacemaker.
-  **During lightning storms, turn power off and take shelter**
There is a risk of lightning strike or electric shock.

Charger

-  **Use only the specified voltage**
Non-specified voltages may cause fire or electric shock.
 - Rapid Charger
AC 100 V
 - Rapid Charger compatible with AC 100 V - 240 V household currents.
 - Included power cord is for use in Japan only.
 - Do not use included power cord overseas. Purchase power cord with appropriate plug. Vodafone bears no responsibility for problems charging handset abroad.
 - Cigarette Lighter Charger
DC 12 V/24 V
-  **Do not use commercial transformers**
Connecting the Rapid Charger to a commercially available transformer for travel use may cause breakage, fire or electric shock.
-  **Do not use In-Car Charger in cars with a positive earth**
Fire may result. Use In-Car Charger only in cars with a negative earth.
-  **Charger Care**
Do not touch plug with wet hands. Electric shock may occur.
 - Do not use multiple cords in one outlet. May generate excess heat or fire.
 - Do not bend, twist, pull or set objects on cord. Exposed wire may cause fire or electric shock.
-  **Do not short-circuit charger terminals**
Keep metal away from terminals. May cause overheating, fire or electric shock.
-  **Do not use Desktop Holder in automobiles**
Extreme temperature or vibration may cause fire or breakage.
-  **If Charger or In-Car Charger cord is damaged:**
May cause fire or electric shock; contact Vodafone Customer Assistance to replace.



Preventing accidents

Secure In-Car Charger to avoid injury or accidents.



During lightning storms:

Unplug charger to avoid breakage, fire or electric shock.



Keep Charger and Desktop Holder out of reach of children

Failure to do so may result in electric shock or injury.

Battery



If battery does not charge properly, stop charging. Battery may overheat, burst or cause fire.

If there is leakage or abnormal odor, avoid fire sources. It may catch fire/burst.



If there is abnormal odor, excessive heat, discoloration or distortion, remove battery from handset. It may leak, overheat or explode.

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



Persons with implanted pacemakers or defibrillators should keep handset more than 22 cm away

Radio waves may cause implanted pacemakers or defibrillators to malfunction.



Turn handset power off in crowded places such as trains. People with implanted pacemakers or defibrillators may be near.

Implanted pacemakers or defibrillators may malfunction due to radio waves.



Observe these rules when visiting medical institutions:

• Do not take handset into operating rooms, Intensive or Coronary Care Units.

• Keep handset off in hospitals.

• Keep handset off in hospital lobbies. Electronic equipment may be near.

• Obey rules regarding mobile phone use in medical institutions.



Consult manufacturer for radio wave effects on electronic medical equipment.



CAUTION

Handset, Battery & Charger



Handset Care

- Place handset on stable surfaces to avoid malfunction or injury.
- Keep handset away from oily smoke or steam. Fire or accidents may result.
- Cold air from air conditioners may condense, resulting in leakage or burnout.
- Keep handset away from direct sunlight (inside cars, etc.) or heat sources. Distortion, discoloration or fire may occur. Battery shape may be affected.
- Keep handset out of extremely cold places to avoid malfunction or accidents.
- Keep handset away from fire sources to avoid malfunction or accidents.



Usage Environment

- Excessive dust may prevent heat release and cause burnout or fire.
- Avoid using handset on the beach. Sand may enter resulting in malfunction or accidents.
- Keep handset away from credit cards, phone cards, etc. to avoid data loss.

Handset



Avoid leaving handset in extreme heat (inside a car, etc.)

Handset may heat up and lead to burns.



Do not use in crowded places

The handset may strike others and cause accidents.



Volume settings

Be careful when setting volumes. High volumes may damage you hearing. In order to prevent this, set at a moderate volume.



Stereo headphones, analog conversion cable and optical digital conversion plug

• Always grasp the plug to disconnect. Pulling on the cord may disconnect the wire and malfunction.

• Keep the plug clean. If the plug is dirty, noise and malfunctions may occur.



Inside automobiles:

Handset use may cause electronic equipment to malfunction.



Charger



Charger & In-Car Charger

Grasp plug (not cord) to disconnect Charger. May cause fire/electric shock.



- Keep cord away from heaters. Exposed wire may cause fire or electric shock.
- Stop use if plug is hot or improperly connected. May cause fire/electric shock.
- Keep In-Car Charger socket clean. May overheat and cause injury.



Do not touch Desktop Holder while in use

May cause burns.



Long periods of disuse

Be sure to unplug Charger or In-Car Charger after use.



Handset Maintenance

When cleaning, disconnect Charger/In-Car Charger to prevent shock/injury.



Use only the specified fuse

1A fuse for In-Car Charger. Or may cause breakage/fire.



Always charge handset in a well-ventilated area

Avoid covering/wrapping Charger/Desktop Holder. May cause damage/fire.



Installing In-Car Charger

Properly position the cable for safe driving to avoid injury or accidents.



Do not use In-Car Charger when engine is off

Start engine before use. Or car battery may be weakened.

Battery



Do not throw or abuse battery. Battery may overheat, burst or cause fire.



Do not leave battery in direct sunlight or inside cars. Overheating/fire may occur and battery performance may deteriorate.



Do not expose battery to liquids. Performance may deteriorate.



If battery fluid gets on skin or clothes, rinse with clean water immediately.



- Do not dispose of exhausted batteries with ordinary refuse. Tape over charger terminals before disposal, or bring them to a Vodafone shop. Follow local regulations regarding battery disposal.
- Keep battery out of the reach of children.



- Charge battery within a range of 5°C - 35°C. Or may leak/overheat. Performance may deteriorate.
- If your child is using handset, explain all instructions and supervise usage.
- If there is abnormal odor or excessive heat, stop using battery and call Vodafone Customer Assistance.

General Notes

General Use

- Vodafone is not liable for any damages resulting from accidental loss/alteration of handset or SD Memory Card data. Please keep separate records of Phone Book data, etc.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law.
Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Japan Mode (3G Mode) available only within Japan.
- Beware of Eavesdropping
Digital signals reduce interception, however transmissions may be overheard.
Eavesdropping
Deliberate/accidental interception of communications constitutes eavesdropping.

In Automobiles

- Do not use handset while driving. Doing so is dangerous.
- Do not park illegally to use handset.
- Handset use may affect an automobile's electronic equipment.

Aboard Aircraft

Never use handset aboard aircraft (keep power off).
Handset use may impair aircraft operation.

Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/lost. Vodafone is not liable for any resulting damages.
- Use handset between 5°C - 35°C and 35% - 85% humidity. Avoid extreme temperatures/direct sunlight.
- Exposing lens to direct sunlight may damage color filter and affect image color.
- Do not drop or subject handset to shocks.
- Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow or high humidity.
- Never disassemble or modify handset.
- Avoid scratching handset displays.
- When closing handset, keep straps, etc. outside to avoid damaging the display.
- **Handset is not water-proof. Keep it away from fluids and high humidity.**
 - Keep handset away from precipitation.
 - Cold air from air conditioning, etc. may condense causing corrosion.
 - Avoid dropping handset in a wet area (restroom, bathroom, etc.).
 - On the beach, keep handset away from water and direct sunlight.
 - Perspiration may get inside handset causing malfunction.
- **Heavy objects or excessive pressure should be avoided.**
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on handset in a bag.
- Do not remove the face plate or antenna terminal cover. Handset may not be accepted for repairs.
- Handset or battery may become warm with prolonged use. This is not a malfunction if it is not hot enough to prevent touch by hand.
- Always turn off handset before removing battery. When charging with the Rapid Charger connected, always turn off handset before disconnecting.
- If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.

Handset Temperature

Handset becomes hot when phone is used while charging. This is not a malfunction.

Observe Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

FCC Declaration of Conformity

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

SHARP ELECTRONICS CORPORATION
Sharp Plaza, Mahwah, New Jersey 07430
TEL: 1-800-BE-SHARP

Tested To Comply With FCC Standards
FOR HOME OR OFFICE USE



FCC Notice

The handset may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the handset if such interference cannot be eliminated.

Information To User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/Relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver.

It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.489W/kg and when worn on the body, as described in this user guide, is 0.284W/kg. Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID APYHRO00032.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

European RF Exposure Information

Your handset has been designed, manufactured and tested so as not to exceed the limits for exposure to electromagnetic fields recommended by the Council of the European Union. These limits are part of comprehensive guidelines developed by independent scientific organisations. The guidelines include a substantial safety margin designed to assure the safety of the handset user and others and to take into account variations in age and health, individual sensitivities and environmental conditions. European standards provide for the amount of radio frequency electromagnetic energy absorbed by the body when using a handset to be measured by reference to the Specific Absorption Rate (SAR). The SAR limit for the general public is currently 2W/kg averaged over 10g of body tissue. Your handset SAR value is 0.364W/kg.

This has been tested to ensure that this limit is not exceeded even when the handset is operating at its highest certified power. In use however your handset may operate at less than full power because it is designed to use only sufficient power to communicate with the network.

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide.

Basic Handset Etiquette

Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or automobile traffic.

Manner-Related Features

Take advantage of built-in features to help you use your handset in public places without disturbing or endangering others.

■ Manner Mode

Press the Manner Key to automatically silence all ring tones and activate Vibration Mode for incoming calls, mail and information.

■ Driving Mode

Disable incoming calls with a single operation (Message Recorder is set). Callers hear an announcement that you are driving and cannot accept the call. Handset will not ring or vibrate when calls are received.

■ Vibration Mode

Activate Vibration Mode to use handset vibration to alert you to incoming calls, mail, etc. in public places.

■ Volume Settings

Lower or silence Ring Tone Volume for Incoming Calls, New Mail, Information and V-Applications when carrying the handset in public places.

■ Whisper Mode

 
Use Whisper Mode to increase microphone sensitivity, allowing you to lower your voice and speak softly when you must use the handset in public places.

■ Message Recorder

Use Message Recorder to handle incoming calls when it is inappropriate or unsafe to answer them. Use Optional Services such as Call Forwarding or remote Voice Mail to handle incoming calls.

Handset Parts & Functions

Handset (Front)

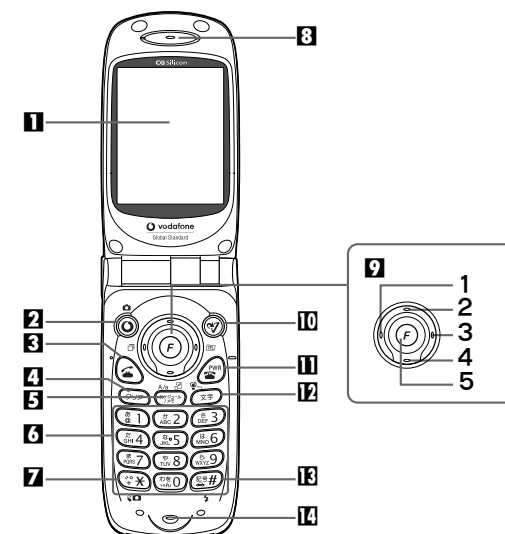

- 1** Display
- 2** Vodafone live! Key/Mobile Camera Key
Initiate Vodafone live! Service. Press for 1+ seconds to activate Mobile Camera.
- 3** Start Key
Initiate/answer calls.
- 4** Clear Key
Delete entries/return to previous window.
- 5** Schedule/Memo and A/a Key
Save/check schedule or record/play Voice Memos. Toggle between upper/lower case alphanumerics or double-byte/single-byte hiragana/katakana in text entry windows. Change Web and Mail text size and attached image size.
- 6** Keypad
- 7** (**) Key
In Mobile Camera, toggle between Display/Sub Display.
Enter + when making international calls.
- 8** Earpiece
- 9** Multi Selector
Select menu items, move cursor, scroll, etc. or use for the following:
 - 1** Redial Key
Select previously dialed numbers.
 - 2** Raise volume
 - 3** Phone Book Key
Open entries to make calls/send messages.
 - 4** Lower volume

5 F Key/Key Guard

Access Functions menu. Press for 1+ seconds to set or release Key Guard.

10 Direct Key

List User Shortcuts, etc.

11 Power On/Off & End Key

Place callers on hold or cancel operations. Press for 2+ seconds to turn power on/off.

12 Text/Manner Key (📧)

Toggle character type or create Phone Book entry.

Press for 1+ seconds to activate/cancel Manner Mode.

 
13 (📞) Key

Activate/Disable Driving Mode. In Mobile Camera, turn Mobile Light on/off.

In Character Entry Mode, toggle through Symbol & Pictograph lists.

14 Microphone

Handset (Side & Back)

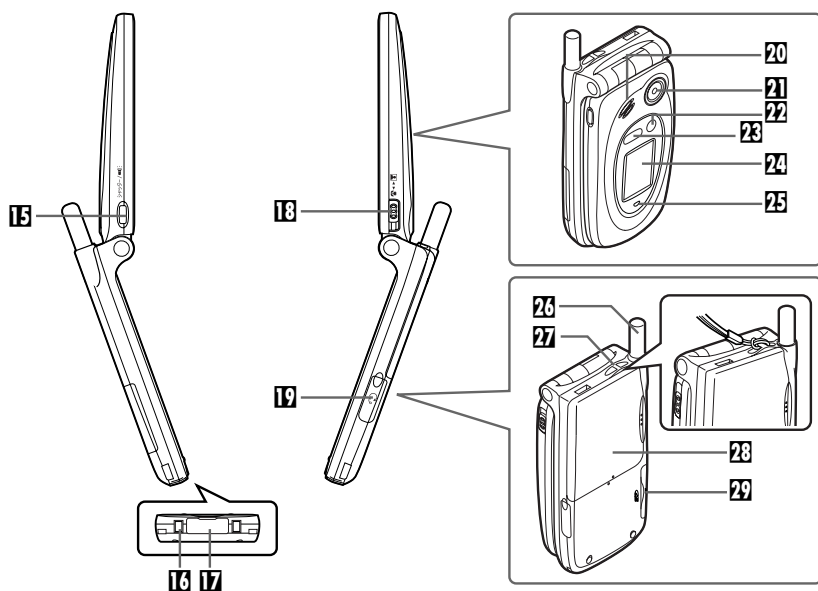

15 Side Key (シャッター / 📞)

With handset closed, activate Message Recorder for incoming calls or Camera, and illuminate Sub Display backlight or Sub Display indicators.

16 Charger Terminal

17 External Device Connector

Connect Charger here.

18 Macro Selector

Switch between Macro Mode and Portrait Mode.

19 Earphone Jack/Optical Digital/Line In

Connect included Analog Conversion Cable or Optical Conversion Plug.

Also connect optional LCD Remote/Mic. Cover when not in use.

20 Speaker

21 Camera

Captures still images and movies.

22 Mobile Light

Flashes for incoming calls/mail; serves as a strobe or penlight.

23 Infrared Port

24 Sub Display

25 Small Light

Illuminates red while charging; flashes orange when Panel Saving is active.

Set to flash for incoming calls.

26 Antenna

27 Strap Eyelet

Attach strap as shown.

28 Battery Cover

29 Memory Card Slot

Insert SD Memory Card here.

Note

Do not touch or cover Antenna during transmissions. Signal quality will be affected.

Charging Battery

Battery & Charger

Charge a new battery before use or after a period of disuse.

■ Battery Life

- Do not use or store battery at extreme temperatures. May shorten battery life. Ideal working temperature is between 5°C - 35°C.
- Use specified charger only. Battery may deteriorate, overheat or cause fire.
- Replace battery if operating time is noticeably shorter than normal.

■ Charging

- Do not use Charger for other purposes.
- Battery may short-circuit, overheat or burst from contact with metal objects.
- Charger and battery may become warm during charging.
- Move charger away from TV or radio if interference occurs.

 
■ Precautions

- Use a dry cotton swab to keep handset, battery and charger terminals clean.
- Avoid:
 - Extreme temperatures
 - Humidity, dust and vibration
 - Direct sunlight
- Do not leave battery uncharged. Charge at least once every six months.
- Use a case when carrying battery separately.

■ Battery Disposal

Do not dispose of exhausted batteries with ordinary refuse. Tape over charger terminals before disposal, or bring them to the nearest Vodafone shop. Always follow local regulations.

Charging with Desktop Holder

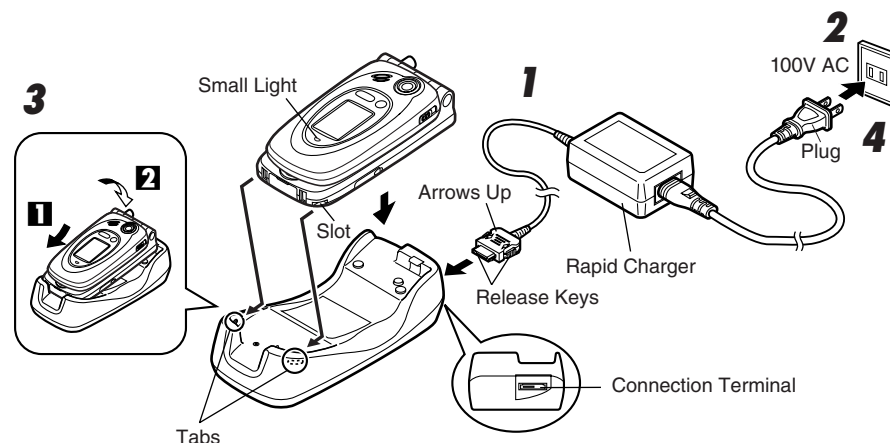

1 Insert charger connector into Desktop Holder until it clicks

2 Plug in Charger

3 Gently insert the handset into Desktop Holder

- Fit tabs into slots as shown in **1** and push handset as **2** indicates until it clicks. Small Light illuminates red (goes out when charging is complete).
- Charging takes approximately 125 minutes (with handset power off). May vary with temperature.

4 After charging, unplug Charger from outlet and remove handset

 
Pull Rapid Charger straight out.

Note

- Rapid Charger is compatible with AC 100 V - 240 V household currents.
- Included power cord is for use in Japan only.


Tip

Rapid Charger
Insert connector into External Device Connector.

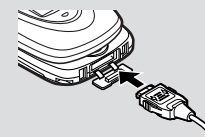

Display

 Display indicators

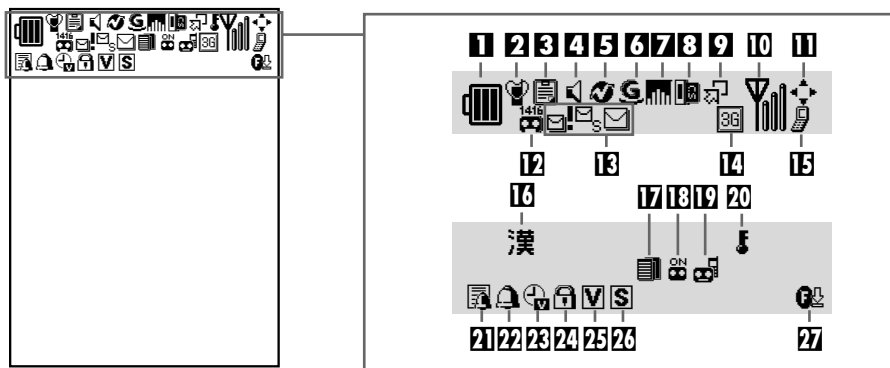

- 1** Battery Strength / Pen Light
 : Strong : Moderate : Low : Empty
 and flash when Pen Light is in use.
- 2** Manner Mode Active
- 3** Information
- 4** Speaker Phone Active / Speaker Active / Microphone Mute / Normal / Large
- 5** Active V-Application / Paused V-Application
- 6** GPRS
- 7** Audio Player Active / Voice Recorder Active / Line Active / External Data Transmission: Packet Transmission
- 8** SD Memory Card Status
- 9** SSL / User Shortcut
 appears if Web site supports SSL and appears if it can be set as User Shortcut.
- 10** Signal Strength / No Incoming Calls / Infrared Transmission
 : Strong : Moderate : Low : Weak : Out-of-Range
- 11** Scroll
 Scrolling options
- 12** New Voice Mail
- 13** SMS
 VGS Mail
 Unretrieved VGS Mail
 VGS Mail held at Server
- 14** 3G / GSM
 Japan Mode International Mode
- 15** Handset / SD Memory Card / USIM Card
 Accessing handset , SD Memory Card or USIM Card data.

16 Character Mode

Character Type Icons

	Kanji and Hiragana
	Double-byte Katakana
	Single-byte Katakana
	Double-byte Alphanumerics (upper / lower case)
	Double-byte Alphanumerics (lower case)
	Single-byte Alphanumerics (upper / lower case)
	Single-byte Alphanumerics (lower case)
	Single-byte Numbers
	Pictograph Codes
	Kuten Codes
	Double-byte Roman Letters (upper case)
	Single-byte Roman Letters (upper case)
	Double-byte Roman Letters (lower case)
	Single-byte Roman Letters (lower case)

 
*Available in Pager Mode

- 17** Report
- 18** Message Recorder Active / Driving Mode Active
- 19** Message
- 20** Secret Mode Active
- 21** Schedule
 Schedule Alarm On: / Off:
- 22** Alarm Set
- 23** V-Application Timer On
- 24** Keypad Lock Active
- 25** Vibration Active
- 26** Silent / Rising Tone
 Ringer is Silent or Rising Tone
- 27** Key Guard Active

Tip Vibration and Ring Tone Level can be set separately for incoming calls and Vodafone live! However, , and are Incoming Call setting indicators.

Sub Display

Indicators appear on the first line of Sub Display

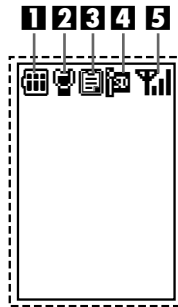


- 1** Battery Strength / Pen Light
 and flash when Pen Light is in use.
- 2** Manner Mode Active
- 3** Information
- 4** SD Memory Card Status / Audio Player Active /
 External Data Transmission: Packet Transmission
- 5** Signal Strength / No Incoming Calls

Indicators appearing below the first line

When **2 In Standby** of Side Key Settings is set to Mark, press Side Key for 1+ seconds to see active Sub Display indicators.

 - Sub Display & Display indicators (P. 16-20) represent same functions.
- These indicators disappear when Side Key is released.

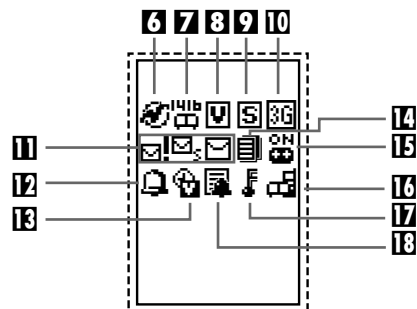

- 6** Paused V-Application
- 7** New Voice Mail
- 8** Vibration Active
- 9** Silent / Rising Tone
- 10** Japan Mode / International Mode
- 11** SMS / VGS Mail / Unretrieved VGS Mail / Server VGS Mail
- 12** Alarm Set
- 13** V-Application Timer On
- 14** Report
- 15** Message Recorder Active / Driving Mode Active

- 12** Alarm Set
- 13** V-Application Timer On
- 14** Report
- 15** Message Recorder Active / Driving Mode Active
- 16** Message
- 17** Secret Mode Active
- 18** Schedule

 
- Sub Display is only active when handset is closed.
 (Note: In Camera mode, Sub Display can be used with handset open.)
- Sub Display backlight illuminates when handset is closed or Side Key is pressed unless Sub Display is Off.

Symbols

Multi Selector

Select menu items, move cursor, scroll, etc.

Multi Selector Indicators used in this manual:

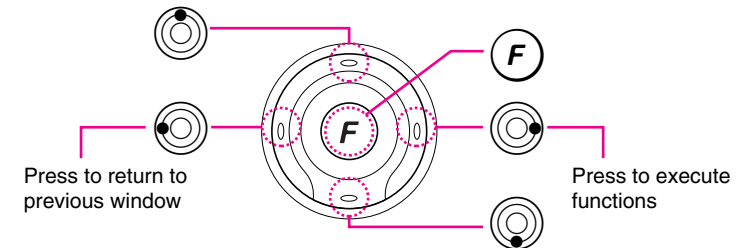

Navigational Multi Selector Indicators

Examples of key operations

- : Press or
- : Press or
- : Press , , or

 
Menu Items

Use or to select menu items. (Example: Select **5 Text** and press)

USIM Card

Vodafone Global Standard USIM Card is an IC Card containing customer information such as handset number. USIM Card must be inserted before using a USIM Card compatible handset. USIM Card can only be used on networks specified by Vodafone.

Inserting USIM Card

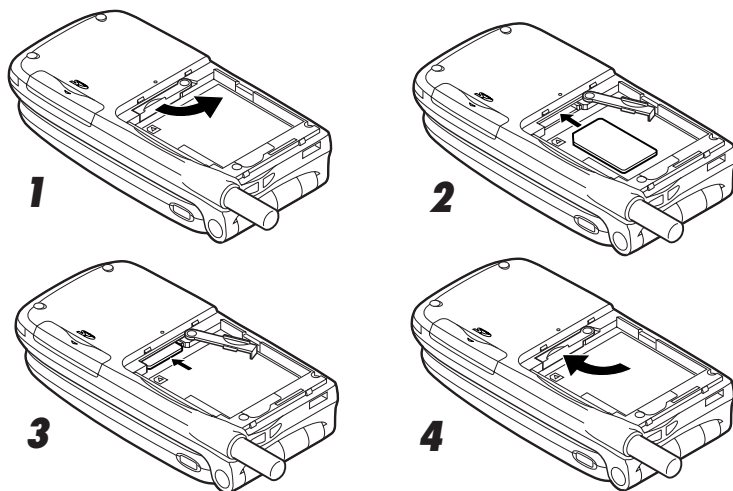

- 1 Open USIM Card cover
- 2 Insert USIM Card with IC Chip facing down
- 3 Push in until USIM Card clicks
- 4 Close USIM Card cover

Removing USIM Card

- 1 Open USIM Card cover
- 2 Lightly push in USIM Card
USIM Card pops out.
- 3 Slowly pull out USIM Card
- 4 Close USIM Card cover

Note Do not apply force to USIM Card. Bending or stress may damage it.

USIM PINs

PIN1 & PIN2

PIN1	Prevent unauthorized use of Vodafone handset.
PIN2	Required to reset Total Charges and to set, cancel or save Fixed Dialing Number.

- PIN1 & PIN2 are **9999** by default.
- PIN1 & PIN2 can be changed.
- When **PIN On/Off** is **ON**, PIN1 (4-8 digits) is required when USIM Card is inserted into handset or handset is turned on.

PIN Lock & Cancel PIN Lock

PIN1 Lock or **PIN 2 Lock** is activated if PIN1 or PIN2 is incorrectly entered three times. Cancel PIN Lock by entering the **PIN Lock Cancel Code**. For information on PIN Lock Cancel Code, contact Customer Service (☎ P. 16-47).

- Note**
- If PIN Lock Cancel Code is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PIN Lock Cancel Code.
 - For procedures required to unlock USIM Card, contact Customer Service (☎ P. 16-47).

- Tip** **Placing Calls when USIM Card Locked**
In Japan, calls cannot be made from the handset when USIM Card is locked. Overseas calls can be placed to emergency service numbers only.

Handset Codes

Security Code and Center Access Code.

Security Code

"9999" or 4-digit number selected at initial subscription. Security Code is required to use/change handset functions. * appear as Security Code is entered.
If incorrect, **Invalid Code** appears.

Center Access Code

4-digit number in subscription contract required to access optional services from fixed line phones.

Call Barring Password

Use Call Barring Password selected at initial subscription to restrict handset services. If Call Barring Password is incorrectly entered three times, Call Barring settings are locked. Center Access Code and Call Barring Password must be changed. For details, contact Customer Service (☎ P. 16-47).

- Note**
- Write down PINs, Center Access Code and Call Barring Password. If you forget any of these codes, contact Customer Service (☎ P. 16-47).
 - Do not disclose PINs, Center Access Code or Call Barring Password to others. Vodafone is not liable for damages resulting from misuse.

- Tip**
- Change PINs and Call Barring Password on the handset.
 - Do not attempt to change Center Access Code. If you mistakenly alter Center Access Code, please contact Customer Service, General Information (☎ P. 16-47).

Basic Handset Operations

Turning Handset On/Off

Activate Handset Power

Press  for 2+ seconds

Deactivate Handset Power

Press  for 2+ seconds

Display Language

1 Press   

2 Select  **English** and press 

Your Phone Number

1 Press   

2 Press  to exit

Setting Clock

1 Press    

2 Enter current date and time

3 Press 

Japan/International Mode

1 Press   

2 Select  **Area Selection** and press 

3 Select  **Japan** (3G Mode) or  **International** (GSM Mode) and press 

4 Restart handset

Initiating a Call

Calling in Japan

1 Enter a phone number

2 Press 

Making an International Call

Service requires an additional contract, but no basic monthly charges or application fees.

1 Enter a phone number

Proceed to Step 6 when calling Vodafone handsets (GSM Mode).

2 Press  **Code**

3 Press 

4 Select a country and press 

5 Press 

6 Press 

Tip

- Omit the first 0 of the area code except when calling a number in Italy.
- For detailed information concerning international calling, contact Customer Service, General Information ( **P. 16-47**).

Calling from Abroad

Service requires an additional contract, but no basic monthly charges or application fees.

1 In International Mode, enter a phone number

2 Press  **Code**

3 Press 

4 Select a country and press 

Always select  **日本(JPN)** when calling Vodafone handsets.

5 Press 

6 Press 

Redial

1 Press  

2 Press  or   to search Redial records

3 Press 

Total Charges & Talk Time

1 Press    (Total Charges) or    (Total Talk Time)

2 Press  to exit

Incoming Call

1 Handset rings and Mobile Light flashes for an incoming call. Open handset

2 Press 

Answer calls by pressing:  -  ,  ,  ,  , , 

Placing a Caller on Hold

- 1 Handset rings and Mobile Light flashes for an incoming call. Open handset
- 2 Press to place caller on hold
- 3 Press to talk

Message Recorder & Voice Mail

Use Message Recorder or Voice Mail to record caller messages.

	Message Recorder	Voice Mail
Message Recorded	Handset	Voice Mail Center
Setting	Press	Press Select Set VM Ring Tone and press Select Call or No Call and press
Additional Contract	Not required	Required
Message Indicator		
Play	Press	Press Select Play (Japan) or Play (Abroad) and press Press Dial
Delete	During playback, press , choose Yes and press	After playback, press
When Handset Power is Off	Unavailable	Available
When Handset is Out-of-Range	Unavailable	Available

Tip When Voice Mail is off, press to forward a call to Voice Mail Center.

Note

Initiating Call Forwarding cancels Voice Mail.

Calling from Call History

- 1 Press
- 2 Press or to search Call History record
- 3 Press

Manner Mode

Activate Manner Mode to use handset without disturbing others.

Default Manner Mode Settings:

- ① Silences Keypad Sound, Power On/Off, Error and Barcode recognition tones.
- ② Sets the following: Message Recorder (On), Ring Tone Level (Silent), Vibration (On), LED Indicator (Small Light), Whisper Mode (On), Sound Volume (Silent), V-Appli Volume (Silent), V-Appli Vibration (On).

These settings can be changed.

In Standby, press for 1+ seconds

Tip

Canceling Manner Mode

In Standby, press for 1+ seconds.

Driving Mode

Disable handset with a simple operation when driving and have incoming calls forwarded to Message Recorder.

Driving Mode Settings:

- Silences VGS Mail and SMS ring tones.
- Schedule, Repeat Alarm are disabled.
- If a call is received, the handset does not ring or vibrate. After the caller hears the Driving Mode announcement, Message Recorder is activated.

In Standby, press for 1+ seconds

Tip

Canceling Driving Mode

In Standby, press for 1+ seconds.

Forwarding a Call

Forward a call to a specified phone number.

Initiating Call Forwarding

 
- 1 Press
- 2 Enter a phone number and press
- 3 Select **Call** or **No Call** and press
Select Forward Ring Time and press when selecting **Call**
- 4 Press to confirm



Entering Characters

Character Types

Press  to toggle between character types.

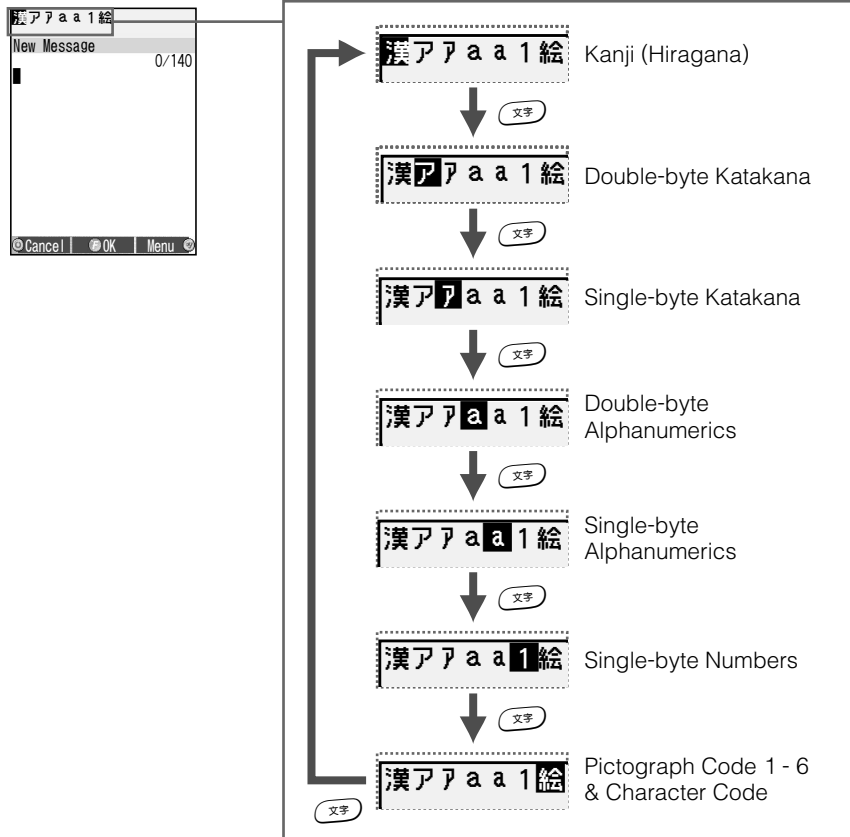

Key Assignments

Key	Single-byte Alphanumerics		Single-byte Numbers	Pictograph Code 1 - 6 & Character Code
	Upper & Lower Case	Lower Case		
	@./_ - 1 (Space)	@./_ - 1 (Space)	1	1
	A B C a b c 2	a b c 2	2	2
	D E F d e f 3	d e f 3	3	3
	G H I g h i 4	g h i 4	4	4
	J K L j k l 5	j k l 5	5	5
	M N O m n o 6	m n o 6	6	6
	P Q R S p q r s 7	p q r s 7	7	7
	T U V t u v 8	t u v 8	8	8
	W X Y Z w x y z 9	w x y z 9	9	9
	.. 0 (Line Break)	.. 0 (Line Break)	0	0
	Single-byte Mail/Web Extensions ¹		* + , (Pause) ²	
	Single-byte Symbols/Double-byte Pictographs		#	
	Cursor Up			
	Cursor Down (Line Break)			
	Cursor Left			
	Cursor Right			
	Change Character Type			
	Toggle Case + Toggle Mode (upper & lower/lower case)			
	Delete One Character			Delete Code/One Character
	Delete All			
	OK			
				Switch Pictograph Code 1 - 6 & Character Code

¹ Portion of E-mail address or URL appears.

² Use +, - and , (Pause) for phone number entry.



Entering Characters Assigned to the Same Key

Press  to move cursor to the right, then enter the next character.

 
Editing Characters

Use  to move cursor to a character. Press  to delete it and then enter another.

Symbols, Pictographs & Emoticons

Symbols

- 1 Press **[Sym]** in text entry window
Usable Symbols appear.
- 2 Use **[Left]** to select a symbol and press **[F]**

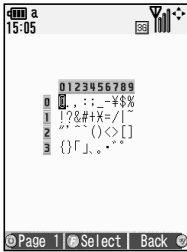

Tip In double-byte character entry, three symbol lists appear.
Press **[Left]** to toggle between them.

Pictographs

 
- 1 Select Pictograph Mode (**[P]** P. 16-30)
- 2 Press **[V]** **List**
Pictograph 1 List appears.
- 3 Use **[Left]** to select a pictograph and press **[F]**



Tip Press **[Left]** to toggle between Pictograph Lists 1 to 6.

Emoticons

- 1 Press **[V]** **Menu** in text entry window
- 2 Select **[E] Emoticons** and press **[F]**
- 3 Select an Emoticon and press **[F]**

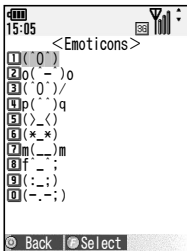

Saving to Phone Book

Save names with phone numbers, E-mail addresses, etc. to Phone Book.
Save up to three phone numbers and three mail addresses per entry.

Phone Book Entry Items

Item		Description
Name [N] :		Up to 24 single-byte (12 double-byte) characters.
Reading [R] :		Katakana, Alphanumerics and symbols automatically appear. (Up to 24 single-byte characters including * and °).
Phone Number [P] :		Up to three phone numbers (32 digits each).
E-mail [E] :		Up to three E-mail addresses (128 single-byte characters each).
Group [G] *		Sort entries into ten groups (0 - 9). Change group names or set ring tone by group.
Personal Data [D] *		Add personal details. Use up to 60 single-byte (30 double-byte) characters.
Secret Mode [S] *		Restrict access to Phone Book entries by saving them as secret.
Option Settings *	Personal Ring Tone	Set ring tone by caller.
	Incoming Notice	Set ring tone by sender.
	Picture Call/Mail	Set images to appear by caller or sender.
	Mail Folder	Messages are sorted into folders.

- *Cannot be saved to USIM Card.
- Up to 500 entries (000 to 499) can be saved in Phone Book.
 - Up to 10,000 entries (0000 to 9999) can be saved in Phone Book saved on SD Memory Card.
 - Up to 50 entries (01 to 50) can be saved in Phone Book saved on USIM Card (only Name, Reading, one Phone Number and one E-mail address can be saved per entry).

Note **Back-up Important Information**
Keep a separate copy of important data. When battery is exhausted or removed for long periods, Phone Book data may be lost. Handset damage may also affect data. Vodafone is not liable for any damages resulting from accidental loss/alteration.

New Phone Book Entries

Enter a name, reading and phone number.

1 Press .

2 Enter a name

 
3 Press .

- Characters entered for names appear after .
- Confirm the reading.

Tip

Correcting Spelling, etc.

Select : and press . Correct spelling and press .

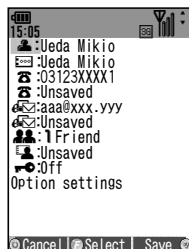

4 Select : and press .

5 Enter a phone number and press .

6 Select an icon and press .

7 Select : and press .

8 Enter an e-mail address and press .

9 Select an icon and press .

10 Press  **Save**

11 Enter a 3-digit number (000 - 499)

Note

Enter a name, phone number or mail address to create a Phone Book entry.

Tip

Saving to SD Memory Card or USIM Card

- After Step 10, press  to select save destination (once for SD Memory Card or twice for USIM Card).
- After selecting save destination, enter Memory Number (SD Memory Card: 0000 to 9999, USIM Card: 01 to 50).

Editing Phone Book

1 Open Phone Book ( P. 16-36)



2 Press  **Menu**

3 Select **Edit** and press .

4 Select an item and press .

5 Make corrections and press .

6 Press  **Save** to finish

7 Press .

8 Choose  **Yes** and press .

Saving from Call History

1 Select a phone number ( P. 16-29)

2 Press  **Menu**, select  **Save to Phone Book** and press .

3 Enter a name

4 Press .

- Characters entered for names appear after .
- Confirm the reading.

Tip

Correcting Spelling, etc.

Select : and press . Correct spelling and press .

5 Select : and press .

6 Enter an e-mail address and press .

7 Select an icon and press .

8 Press  **Save**

9 Enter a 3-digit number (000 - 499)

16



Dialing from Phone Book

Entry Number Search

- 1 Press **TEL**
The search method used last appears.
 - 2 Press **Menu**, select **Memory No. Search** and press **F**
 - 3 Enter Memory No. (000 - 499)
 - 4 Select a name and press **F**
- Tip** Multiple Numbers/Addresses
Use to select other numbers/addresses.
- 5 Press

Search by Reading

- 1 Press **TEL**
The search method used last appears.
 - 2 Press **Menu**, select **Search by Reading** and press **F**
 - 3 Enter reading and press **F**
Use up to 24 single-byte characters.
 - 4 Select a name and press **F**
- Tip** Multiple Numbers/Addresses
Use to select other numbers/addresses.
- 5 Press

16



Mobile Camera

Before Using Camera

Select from four different shooting modes.
Use **Mobile Camera** and **Digital Camera** for still images and **Movie** and **Video Camera** for videos.

	Mobile Camera	Digital Camera
Image Size	240 × 320 dots 120 × 160 dots 120 × 128 dots 64 × 96 dots	1144 × 858 dots 1024 × 768 dots 640 × 480 dots
Save to	Handset or SD Memory Card	SD Memory Card

	Movie	Video Camera
Image Size	176 × 144 dots 128 × 96 dots	176 × 144 dots 128 × 96 dots
Save to	Handset or SD Memory Card	SD Memory Card

Camera Shake
If handset moves while shooting, images may blur. Hold handset firmly or place it on a stable surface and use Self-Timer.
Do not shoot while charging
The red Small Light may be captured if shot while charging.

Note **Lens Cover**
Use a soft cloth to wipe fingerprints or oil off the lens cover.

CCD Camera

- Mobile Camera is engineered to exacting standards; however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Color filter may be affected if the lens is subjected to direct sunlight.

Capturing Still Images

- 1 In Standby, press **F**, select **Mobile Camera** and press **F**
- 2 Select **1 Mobile Camera** or **2 Digital Camera** and press **F**
- 3 Frame image on Display
- 4 Press **F** **Shoot** or Side Key
- 5 Press **F** **Save** to save the image
- 6 Press to exit

Tip **Using Camera with Handset Closed**
After Step 2, close handset, use Sub Display to frame image and Side Key as shutter release.

16

 


Data Folder

Data Folder Contents

Saved files are organized in separate folders according to file format.

Data Folder supports the file formats listed below.

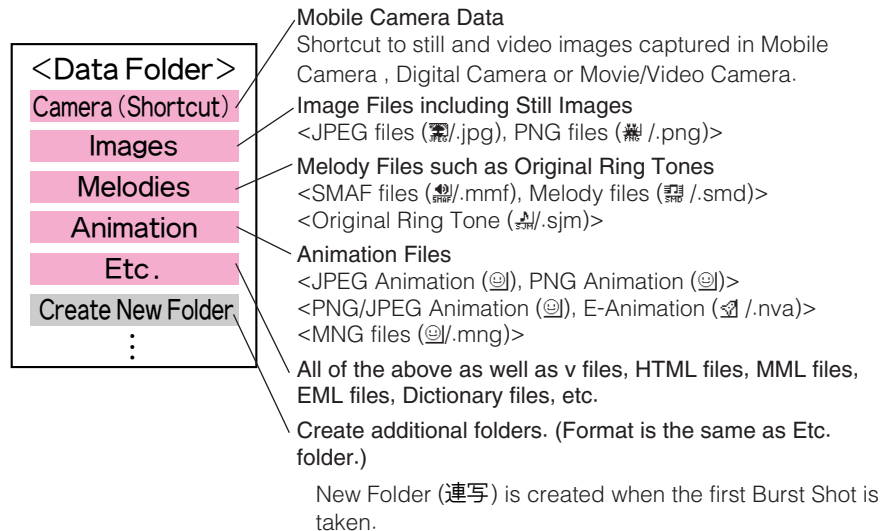


Note File extensions and icons inside < > indicate file format. File extensions do not appear for JPEG Animation, PNG Animation nor PNG/JPEG Animation.

Data Folder Structure

Create up to three layers to organize files.

 Example: Create folders, My Folder and My Pictures for convenient access to files.

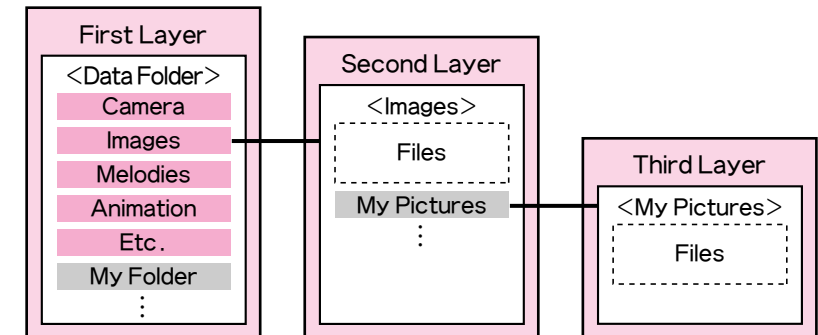

Opening Data Folder

- 1 Press 3
- 2 Select a folder and press
- 3 Select a file and press
- 4 Press to exit

VGS Mail Attachments

Example: Attaching an image from Images Folder to VGS Mail

- 1 Press 3
- 2 Select **Images** and press
- 3 Select a file and press **Menu**
- 4 Select **Attachment** and press
- 5 Select Attachment type and press
- 6 Enter an address, title, text and press to send VGS Mail



F Function Shortcuts

Select and execute handset functions by pressing the indicated keys.

¹ Available while talking

² Only available when SD Memory Card is inserted.

Shortcut	Function	Description
● Basic & Display		
F DEF 0 DEF 0 ¹	My Number	Show handset number
F DEF 0 DEF 1	USIM Setting	PIN On/Off Settings
F DEF 0 DEF 2	System Settings	Toggle Japan/International Mode and show Network Status
● Sounds		
F DEF 1 DEF 0	Call Functions	Set Ring Tones
F DEF 1 DEF 1 ¹	Volume	Adjust Volume
F DEF 1 DEF 3	Sound Effects	Set Sound Effects
F DEF 1 DEF 5	Ringer Out	Set Ringer Output for Earphone use
F DEF 1 DEF 6 ¹	Speaker	Set Speaker Phone/Speaker
F DEF 1 DEF 7	Original Ring Tone	Save Original Ring Tones
F DEF 1 DEF 8	Instrument Effects	Save Instrument Effects
F DEF 1 DEF 9	Tone Octave	Set Tone Octaves
● Privacy		
F DEF 2 DEF 0	Keypad Lock	Disable keypad
F DEF 2 DEF 1	Auto Key Lock	Disable keypad at handset power on
F DEF 2 DEF 2 ¹	Secret Mode	Show Secret Memory
F DEF 2 DEF 3	Phone Book Lock	Disable Phone Book
F DEF 2 DEF 4	Restrict Dial	Restrict calling from keypad
F DEF 2 DEF 5	Accept Call	Accept calls from designated numbers
F DEF 2 DEF 6	Reject Call	Reject calls from designated numbers
F DEF 2 DEF 7	Reset All	Delete all saved information, restore defaults
F DEF 2 DEF 8	Change Code	Change Security Code
F DEF 2 DEF 9	Reset Defaults	Reset settings to default values

Shortcut	Function	Description
● Settings 1		
F DEF 3 DEF 0 ¹	Guide	Show functions other than F functions
F DEF 3 DEF 1	Memory	Phone Book, Accumulated Memory, Sent, File Cabinet, Save location
F DEF 3 DEF 3	Panel Saving	Set Panel Saving
F DEF 3 DEF 4	Backlight Settings	Adjust Backlight, Keypad light and Backlight Brightness
F DEF 3 DEF 5	Language (言語選択)	Toggle between Japanese and English Menus
F DEF 3 DEF 6	Power On Message	Set/Cancel welcome message
F DEF 3 DEF 7	Group Settings	Change Group Names/Ring Tones
F DEF 3 DEF 9	Side Key Settings	Set functions for Side Key (for 1+ seconds)
● Settings 2		
F DEF 4 DEF 0	Display Settings	Set Display detail
F DEF 4 DEF 1 ¹	Expenditure Memo	Show total expenditures and item list
F DEF 4 DEF 3	User Dictionary	Save/Edit entries or add downloaded items
F DEF 4 DEF 4	Answer Time	Set Message Recorder Answer Time
F DEF 4 DEF 6	Manner Settings	Change Manner Mode settings
F DEF 4 DEF 7	Sub Display	Set Sub Display and Clock
F DEF 4 DEF 8	Animation Settings	Set/create animation
F DEF 4 DEF 9	Calculator	Open Calculator/Foreign Exchange
● Clock		
F DEF 5 DEF 0	Alarm	Set Alarm
F DEF 5 DEF 2	Clock Display	Show Clock and Calendar in Standby
F DEF 5 DEF 9 ¹	Clock Settings	Set Date & Time/Set Travel Clock
● Charges		
F DEF 6 DEF 0	Total Charges	Show Total Charges
F DEF 6 DEF 1	Call Charge	Show Last Call Charge
F DEF 6 DEF 2	Total Talk Time	Show Total Talk Time
F DEF 6 DEF 3	Call Time	Show Last Call Talk Time
F DEF 6 DEF 4	Instant Display	Show Charge/Talk Time after a call
F DEF 6 DEF 5	Set Charge Limit	Set limit for call charges

Shortcut	Function	Description
● Services		
F   	Call Barring	Restrict incoming and outgoing calls
F   	Call Forwarding	Activate service/Set a Forwarding Number
F    2	Voice Mail	Activate Voice Mail Service
F    3	Cancel Call Fwd/VM	Cancel Call Forwarding or Voice Mail
F    4	Fwd/VM Status	Check Call Forwarding or Voice Mail
F    5	Call Waiting	Set/Cancel Call Waiting
F    6	Confirm Status	Check Call Waiting Settings
F    7	Play Voice Mail	Listen to messages
F    8	Int'l Calling	Toggle International Prefix and Auto Country Code On/Off and edit Country Code List
F    9	Send With Code	Set number to add to phone numbers saved in Phone Book
● Messaging		
F   8  	Mail Box	Open Mail Box
F     2	Mail	Create New Mail
F     3	New Mail Request	Preloads received VGS Mail
F     4	Server Mail	Receive/Delete VGS Mail held temporarily at Mail Server
F     5	SMS	Create New SMS
F     6	Settings	Adjust/Customize Mail Settings
● Web		
F     	Vodafone Web	Connect to Vodafone Web
F      2	Home	Open Web page set as Home
F      3	Favorites	View/Access saved Web page links
F      4	Bookmarks	View/Access saved Web page
F      5	Internet	Enter a URL or select from Log List to access the Web
F      6	Message Folder	Open Cache Memory or Message Folder
F      7	Web Settings	Adjust and customize Web Settings
● V-Appli		
F     2 	V-Appli Library	Open V-Appli Library
F     2  2	V-Appli Settings	Set V-Appli details
● Data Folder		
F     3	Data Folder	Open Data Folder

Shortcut	Function	Description
● Audio & Video		
F   8   	Video Player	Playback/Edit Video
F       2	Audio Player	Playback music
F       3	Audio Recorder	Record music
F       4	Player Settings	Audio & Video Settings
● Network Settings		
F     5 	Incoming	Choose Notify or Reject for calls during Web ops
F     5  2	Network Setup	Network Connection Status
F     5  3	Clear DNS Cache	Clear DNS Cache
● Others		
F  Long Press	Key Guard	Disable Keypad
F 1	Menu	Open Index Menu
F   2	Memory Card	Memory Card Menu
F   In Standby	Message Recorder	Set/Cancel Message Recorder
F   In Standby	Play	Play Messages/Voice Memos
F   3 Incoming call	Forward Call	Forward an incoming call to Voice Mail/Forwarding Number
 In Standby or during call	Add to Phone Book	Create a new Phone Book entry
 Long Press in Standby	Manner Mode	Set/Cancel Manner Mode
 Long Press in Standby	Drive Mode	Activate/Cancel Drive Mode
 In Standby	Schedule	Open Existing/Create New Schedule
 Long Press in Standby	Voice Recording	Record My Voice Memo/Voice Recorder
 Long Press during call	Voice Memo	Record Voice Memo
 Long Press while  appears	User Shortcut	Set User Shortcut
F     In Standby	On/Off	Set/Cancel Mail, Web or V-Appli
F   In Standby	Useful	Open Useful Menu



Specifications

V801SH

Weight	Approximately 126 g (with battery)
Continuous Talk Time	Approximately 120 minutes (Japan Mode) Approximately 180 minutes (International Mode)
Continuous Standby Time (when closed)	Approximately 200 hours (Japan Mode) Approximately 220 hours (International Mode)
Charging Time (Power off)	Rapid Charger: Approximately 125 minutes In-Car Charger: Approximately 125 minutes
Dimensions (W × H × D)	Approximately 50 × 102 × 26 mm (when closed, excludes protruding portions)
Maximum Output	0.25 W (Japan Mode) 2.0W (International Mode)

- Values above were calculated with battery installed.
- Continuous Talk Time is an average measured with a new, fully-charged battery, with Panel Saving off, in Standby with normal signal reception. Continuous Standby Time is an average measured with a new, fully-charged battery, with handset closed without calls or operations, in Standby with normal signal reception. Standby Time may be less than half this value if handset is out-of-range or signal quality is poor. Battery life may vary by environment (battery status, temperature, etc.).
- Battery life is a nominal value, measured under stable signal conditions. Battery life may be less than half this time if handset is used in weak signal conditions.
- Talk Time and Standby Time will decrease if display/keypad backlights are used frequently.
- Talk Time and Standby Time may decrease when V-Applications are active.
- Talk Time and Standby Time may decrease by handset operations or settings.
- Displays employ precision technology, however, some pixels may appear brighter or darker.

Rapid Charger

■ Rapid Charger

Power Source	AC 100 V - 240 V, 50/60 Hz
Power Consumption	11 VA
Output Voltage/Current	DC 5.2 V/600 mA
Charging Temperature	5°C - 35°C
Dimensions (W × H × D)	Approximately 66 × 27 × 48 mm (without protruding parts, cord)
Cord Length	Approximately 1.5 m

■ Power Cord

Power Source	AC 100 V, 50/60 Hz
Cord Length	Approximately 1.3 m

Desktop Holder

Input Voltage/Current	DC 5.2 V/600 mA
Output Voltage/Current	DC 5.2 V/600 mA
Charging Temperature	5°C - 35°C
Dimensions (W × H × D)	Approximately 62 × 34 × 124 mm (without protruding parts)

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	740 mAh
Dimensions (W × H × D)	Approximately 38 × 5.9 × 37 mm (without protruding parts)

Stereo Headphones

Weight	Approximately 14.6 g
Cord Length	Approximately 133 cm

Customer Service

If you have questions about Vodafone handsets or services, please call General Information. For repairs, please call Customer Assistance.

Vodafone Customer Centers

From a Vodafone handset, dial toll free at 157 for General Information or 113 for Customer Assistance

Call these numbers toll free from fixed lines.

Subscription Area	Service Center	Phone number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane	General Information	☎ 0088-259-157
	Customer Assistance	☎ 0088-259-113
Tokushima, Kagawa, Ehime, Kochi	General Information	☎ 0088-247-157
	Customer Assistance	☎ 0088-247-113
Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113

Declaration of Conformity

We Sharp Telecommunications of Europe Ltd
of Azure House
Bagshot Road
Bracknell
Berkshire
RG12 7QY

Declare under sole responsibility that the product:

Model: V801SH
Description: GSM 900/GSM 1800/ PCS 1900 Tri Band Dual Mode Cellular Telephone
WCDMA(for Japan Domestic Market)

To which this declaration relates, is in conformity with the following standards and/or other normative documents:

- ETSI EN301511
- ETSI EN301908-2
- ETSI EN301489-7
- ETSI EN301489-1
- EN60950
- EN50360

We hereby declare that the above named product is in conformance to all the essential requirements of the Directive 1999/5/EC

The conformity assessment procedure referred to in Article 10 and detailed in Annex [IV] of directive 1999/5/EC has been followed related to Articles

- R&TTE Article 3.1 (a) Health and Safety
- R&TTE Article 3.1 (b) EMC
- R&TTE Article 3.2 spectrum Usage

With the involvement of the following Notified Body:

BABT, Claremount House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ

Identification mark: **0168** (Notified Body) CE

The technical documentation relevant to the above equipment will be held at:

Sharp Telecommunications of Europe Ltd
Azure House
Bagshot Road
Bracknell
Berkshire
RG12 7QY

EU Representative: Clive Ross Bax

Authorised Person:

Name:

C. R. BAX

Signature:



Title:

GENERAL MANAGER

Date:

26/2/2004

F機能一覧

表中の「ボタン操作」に記載されているボタンを連続して押すと、メニューの表示を待たずに機能を選択／実行できます。

※1 通話中も操作できます。

※2 SDメモ리카ードが取り付けられてあるときのみ表示されます。

ボタン操作	機能名称	概要	頁
●基本設定／表示			
  ※1	自局電話番号	この電話機の電話番号を表示	P.2-32
  	USIM設定	PINコードのON/OFF設定、変更	P.13-2
  	システム設定	日本モード／海外モードを切り替え	P.2-2
●音関連機能			
  	着信設定	各種着信音を設定	P.8-2
   ※1	受話音量調節	受話音量を調節	P.2-18
  	効果音設定	各種効果音を設定	P.8-8
  	着信音出力切替	イヤホン装着時の着信音出力場所を設定	P.8-12
   ※1	スピーカー設定	スピーカーホン（通話）／スピーカー受話を設定	P.8-11
  	オリジナル着信音	オリジナル着信音を登録	P.8-15
  	オリジナル音色	オリジナル音色を登録	P.8-32
  	音色オクターブ設定	音色の音程を設定	P.8-34
●管理機能			
  	ダイヤル操作禁止	電話機の使用を禁止	P.13-4
  	簡易ロック	電源ON時に自動的にダイヤル操作禁止を設定	P.13-5
   ※1	シークレットモード	シークレットメモリを表示	P.13-10
  	メモリ使用禁止	メモリダイヤルの使用や登録を禁止	P.13-5
  	ダイヤル禁止	ダイヤル入力での発信を禁止	P.13-6
  	指定着信許可	指定した相手の着信を許可	P.13-7
  	指定着信拒否	指定した相手の着信を拒否	P.13-7
  	オールリセット	登録内容やデータを消去し、各種設定を初期状態に戻す	P.13-12
  	暗証番号変更	操作用暗証番号を変更	P.13-2
  	設定リセット	各種設定を初期状態に戻す	P.13-12

ボタン操作	機能名称	概要	頁
●表示／設定 1			
   ※1	ガイド機能	F機能以外の機能の操作方法を表示	P.14-36
  	メモリ確認	メモリダイヤル登録件数を表示／蓄積メモリ／送信メール／ファイルBOX確認／保存先設定	P.5-6
  	パネルセーブ	パネルセーブを設定	P.14-31
  	照明設定	パネル照明／キー照明／パネル照明の明るさを設定	P.7-17
  	Language	日本語表示／英語表示の切替	P.7-18
  	ウェイクアップ	電源ON時のメッセージ表示の有無／メッセージを設定	P.7-16
  	グループ設定	メモリダイヤルのグループ名やグループ着信音を設定	P.5-13
  	サイドキー設定	サイドキーを1秒以上押したときの動作を設定	P.14-5
●表示／設定 2			
  	画面表示設定	壁紙／マイキャラクタ／文字表示／背景パターン／マーク表示を設定 P.7-2、P.7-15、P.7-12、P.7-14、P.7-3	
   ※1	マネー積算メモ	マネー積算メモを表示／明細変更	P.14-35
  	ユーザー辞書	ユーザー辞書の登録／編集／ダウンロード辞書の設定 P.4-21～P.4-23	
  	応答時間	簡易留守録が応答するまでの時間を設定	P.14-8
  	マナー設定変更	マナーモード時の設定内容を変更	P.3-4
  	サブディスプレイ	サブディスプレイの表示方法を設定	P.7-6
  	アニメーション設定	アニメの設定／作成	P.7-12、P.7-14、P.7-15、P.11-13
  	簡易電卓	簡易電卓の利用	P.14-33
●時計／アラーム機能			
  	リピートアラーム設定	リピートアラームを設定	P.14-10
  	時計表示設定	待受画面に時計やカレンダーを表示	P.7-4
   ※1	時刻設定	西暦／日付／時刻／世界時計を設定	P.1-28、P.1-29
●時間／料金機能			
  	累積通話料金	累積の通話料金の目安を表示	P.2-30
  	通話料金	直前の通話料金の目安を表示	P.2-29
  	累積通話時間	累積の通話時間の目安を表示	P.2-28
  	通話時間	直前の通話時間の目安を表示	P.2-28
  	即時表示	通話後の通話明細表示を設定	P.2-31
  	通話料金上限設定	通話料金の上限を設定	P.2-30

ボタン操作	機能名称	概要	頁
●付加サービス機能			
F (長押し) 0	発信規制	発信や着信を規制する	P.15-9
F (長押し) 1	転送電話	転送電話サービスの開始／転送先の登録	P.15-3
F (長押し) 2	留守番電話	留守番電話サービスの開始設定	P.15-5
F (長押し) 3	転送／留守番停止	転送電話と留守番電話サービスの解除	P.15-4、P.15-6
F (長押し) 4	転送留守設定確認	転送電話と留守番電話サービスの確認	P.15-4、P.15-6
F (長押し) 5	割込通話設定	割込通話サービスの設定／解除	P.15-7
F (長押し) 6	割込通話設定確認	割込通話サービスの設定確認	P.15-7
F (長押し) 7	留守録再生	V801SHで伝言メッセージを聞く	P.15-6
F (長押し) 8	国際発信設定	国際コード、国番号自動付加のON/OFF、国番号リスト編集	P.14-3
F (長押し) 9	セット発信登録	メモリダイヤルの電話番号に付加する番号を登録	P.14-4
●メール・SMS機能			
F (長押し) 1	メールボックス	メールボックスの表示／設定	別冊
F (長押し) 2	新規作成	メールの新規作成	別冊
F (長押し) 3	新着先行受信リクエスト	新着したVGSメールを先行受信	別冊
F (長押し) 4	サーバー操作	メールサーバーに一時蓄積されているVGSメールの受信や消去	別冊
F (長押し) 5	SMS	ショートメッセージ（SMS）の新規作成	別冊
F (長押し) 6	メール・SMS設定	VGSメールやショートメッセージ（SMS）の各項目を設定	別冊
●ウェブ機能			
F (長押し) 1	ボーダフォンウェブ	ボーダフォンウェブに接続	別冊
F (長押し) 2	ホーム	ホームに設定している情報画面への接続	別冊
F (長押し) 3	お気に入り	よく使う情報画面を登録	別冊
F (長押し) 4	ブックマーク	ブックマークを利用して接続	別冊
F (長押し) 5	インターネットアクセス	インターネット（ホームページ）への接続	別冊
F (長押し) 6	メッセージフォルダ	V801SHに保存している情報を表示	別冊
F (長押し) 7	ウェブ設定	ウェブの各項目を設定	別冊
●Vアプリ機能			
F (長押し) 1	Vアプリライブラリ	Vアプリライブラリを表示	別冊
F (長押し) 2	Vアプリ設定	Vアプリの各項目を設定	別冊
●データフォルダ			
F (長押し) 3	データフォルダ	データフォルダを表示	P.11-7
●オーディオ&ビデオ機能			
F (長押し) 1	ビデオプレイヤー	動画の再生／編集	P.9-3
F (長押し) 2	オーディオプレイヤー	音楽の再生	P.9-22
F (長押し) 3	オーディオレコーダー	音楽の録音	P.9-16
F (長押し) 4	プレイヤー設定	オーディオ&ビデオの設定	P.9-27
●ネットワーク設定			
F (長押し) 1	通話中着信設定	ネットワーク接続中に電話がかかってきたときの動作を設定	別冊
F (長押し) 2	ネットワーク自動調整	ネットワークの接続情報をサーバーから入手	別冊
F (長押し) 3	DNSキャッシュクリア	DNSキャッシュをクリア	別冊

ボタン操作	機能名称	概要	頁
●その他の項目			
F (長押し)	誤動作防止	持ち運び時のボタン操作を禁止	P.13-11
F ※1	メニュー表示	インデックスメニューを表示	P.1-30
F ※2	メモリカード	メモリカードメニューを表示	P.10-6
F (待受中)	簡易留守設定	簡易留守録を設定／解除	P.14-6
F (待受中)	録音データ再生	簡易留守録の用件／音声メモを再生	P.14-7
F (着信中)	手動着信転送	電話を転送先に転送	P.15-4、P.15-5
待ち (待受中/通話中)	メモリダイヤル登録	メモリダイヤルを登録	P.5-2
待ち (長押し)	マナーモード	マナーモードの設定／解除	P.3-3
待ち (待受中長押し)	運転中モード	運転中モードの設定／解除	P.3-6
待ち (待受中)	スケジュール	スケジュールを表示／設定	P.14-15
待ち (待受中長押し)	ボイス録音	マイボイスメモ／ボイスレコーダーを録音	P.2-19、P.14-9
待ち (通話中長押し)	音声メモ	音声メモを録音	P.14-9
待ち (表示中長押し)	ユーザーショートカット登録	ユーザーショートカットを登録	P.2-33
F (待受中)	ON/OFF設定	メール/ウェブ/VアプリのON/OFF設定	別冊
F (待受中)	ユースフルメニュー	ユースフルメニューを表示	P.1-30

設定リセットで初期化される内容

■初期状態に戻る項目（F機能）

F番号	機能の名前	初期設定	F番号	機能の名前	初期設定	F番号	機能の名前	初期設定
F10	着信設定	※ 1	F33	パネルセーブ	※ 5	F52	時計表示設定	時計大1
F11	受話音量調節	音量3	F34	照明設定	※ 6	F61	通話料金	0円
F13	効果音設定	※ 2	F35	Language	日本語	F62	累積通話時間	0時間0分
F15	着信音出力切替	※ 3	F36	ウェイクアップ	OFF	F63	通話時間	0分0秒
F16	スピーカー設定	OFF	F39	サイドキー設定	※ 7	F64	即時表示	OFF
F19	音色オクターブ設定	※ 4	F40	画面表示設定	※ 8	F71	転送電話	※ 12
F20	ダイヤル操作禁止	OFF	F44	応答時間	9秒	F77	留守録再生	※ 13
F21	簡易ロック	OFF	F46	マナー設定変更	※ 9	F78	国際発信設定	※ 14
F22	シークレットモード	OFF	F47	サブディスプレイ	※ 10	Fx#	ON/OFF設定	※ 15
F23	メモリ使用禁止	OFF	F48	アニメーション設定	※ 11			
F24	ダイヤル禁止	OFF	F49	通貨換算設定	OFF			

- ※ 1 P.8-2参照
- ※ 2 P.8-8参照
- ※ 3 イヤホン+スピーカー
- ※ 4 P.8-20～P.8-23参照
- ※ 5 パネルセーブモード：ON/OFF設定：ON（5分）、ランプ表示設定：ランプ表示あり
- ※ 6 パネル照明、キー照明共にON/OFF設定：ON（15秒）、パネル明るさ調整：明るさ3
- ※ 7 着信時：簡易留守、待受時：マーク表示
- ※ 8 壁紙設定：ON、マイキャラクタ：すべてOFF、文字表示設定：文字1、背景パターン設定：背景1、マーク表示設定：ON
- ※ 9 簡易留守：ON、着信音量：すべてサイレント、バイブレータ：すべてON、ランプ設定：スモールライト、マナートークモード：ON、サウンド再生音量：サイレント、Vアプリ再生音量：サイレント、Vアプリバイブレータ：ON
- ※ 10 サブディスプレイON/OFF設定：ON、照明設定：ON（15秒）、濃度調整：濃度5、待受表示内容設定（時計：デジタル時計大1、マーク：ON、メモ（テキスト）：OFF）、壁紙設定：OFF、着信表示（カラーパターン：すべてホワイト、グラフィックパターン：OFF）、表示方向切替：上向き
- ※ 11 スクリーンアニメ：OFF、背景アニメ：ON、ボーダフォンライブ！アニメ：すべてON
- ※ 12 留守番電話センター番号：09066517000
- ※ 13 留守 再生番号：1416（国内用）、+819066514170（海外用）
- ※ 14 国際コード自動付加：OFF、国番号自動付加：OFF
- ※ 15 メール、ウェブ、Vアプリ共にON

■初期状態に戻る項目（F機能以外）

機能	初期設定
マナーモード	解除
簡易留守録	解除
メモリダイヤル検索モード	メモリNo検索
インフォメーションメニュー	ランプ表示設定：すべてランプ表示なし、 タイムアウト設定：タイムアウトしない
メモリカードの暗号化設定	メモリダイヤル、メール、スケジュール：すべてOFF
ユーザーショートカット	①メール・SMS、②オーディオ&ビデオ、③ボイス、 ④電子ブック、⑤簡易電卓、⑥マナー積算メモ、 ⑦国際発信設定、⑧テキストメモ、⑨バーコード、 ⑩Vアプリライブラリ、⑪赤外線/USB通信、 ⑫スポットライト、⑬データフォルダ
スポットライト	継続点灯時間：1分、点灯カラー：ライチフルーツ（白色系統）
スケジュール表示切替	1日表示
バーコード読取表示サイズ設定	文字中／画像等倍

トラブルシューティング

症状	確認すること	処置
電源が入らない	●電源ボタンを2秒以上押していますか？ ●電池切れになっていませんか？ ●電池パックがV801SHに装着されていますか？	●電源ボタンを2秒以上押してください。 ●電池パックを予備電池に交換するか、充電してください。 ●正しく装着してください。
電源を入れたのに操作できない	●PIN1 ON/OFF切替が「ON」に設定されていませんか？	●PIN 1ON/OFF切替が「ON」に設定されているときは、PIN1コードの入力を求められますので、画面の指示に従って入力してください。（参照P.1-7）
電源を入れたときや機能の操作時に「USIMカードを確認してください」と表示される	●USIMカードは正しく差し込まれていますか？ ●違ったUSIMカードをお使いではありませんか？	●USIMカードが正しく取り付けられていることを確認してください。正しく取り付けられているときは、破損している可能性があります。正しいUSIMカードであることを確認してください。使用できないカードが取り付けられている可能性があります。
ボタン操作ができない	●誤動作防止が設定されていませんか？（「Q」が表示） ●ダイヤル操作禁止が設定されていませんか？（「R」が表示）	●誤動作防止を解除してください。（参照P.13-11） ●ダイヤル操作禁止を解除してください。（参照P.13-4）

症状	確認すること	処置
ダイヤルしても通話音（ブービー…）が出る	●市外局番など0からはじまる相手の電話番号をダイヤルしていますか？ ●「圏外」が表示されていませんか？	●市外局番など0からはじまる相手の電話番号をダイヤルしてください。 ●電波の届く場所に移動してかけ直してください。
「圏外」が表示され、電話がかかけられない	●サービスエリア外か電波の届きにくい場所にいるのでは？ ●日本で海外モードに設定されていませんか？（「」表示） ●海外で日本モードに設定されていませんか？（「」表示）	●電波の届く場所に移動してかけ直してください。 ●日本モードに設定してください。（P.2-2） ●海外モードに設定してください。（P.2-2）
通話かとぎれたり、切れる	●電波の届きにくい場所にいるのでは？ ●電池切れになっていませんか？	●電波の届く場所に移動してかけ直してください。 ●電池パックを予備電池に交換するか、充電してください。
ダイヤルを押しても電話がかかけられない	●誤動作防止が設定されていませんか？（「」が表示） ●ダイヤル操作禁止が設定されていませんか？（「」が表示） ●ダイヤル禁止が設定されていませんか？	●誤動作防止を解除してください。（P.13-11） ●ダイヤル操作禁止を解除してください。（P.13-4） ●ダイヤル禁止を解除してください。（P.13-6）
メモリダイヤルを使って電話がかかけられない	●かけたいメモリダイヤルをシークレットメモリに登録していませんか？ ●メモリ使用禁止が設定されていませんか？	●シークレットモードにしてください。（P.13-10） ●メモリ使用禁止を解除してください。（P.13-5）
通話中に「ブチッ」と音が入る	●電波が弱くなって別のエリアに切り替わる時に発生することがあります。	—
充電ができない	●急速充電器の接続コネクタがV801SHまたは卓上ホルダーに確実に差し込まれていますか？ ●急速充電器のプラグがしっかりとコンセントに差し込まれていますか？ ●電池パックがV801SHに装着されていますか？ ●V801SHが卓上ホルダーに確実に装着されていますか？ ●V801SH、電池パック、卓上ホルダーの充電端子や急速充電器の接続コネクタ、V801SHの外部機器端子、卓上ホルダーの接続端子が汚れていませんか？ ●周囲温度が5℃～35℃以外になると、充電しないことがあります。 ●電池パックの寿命、または電池パックが異常です。 ●充電中にV801SHや電池パックの温度が上昇すると、充電を中断することがあります。	●もう一度、確実に差し込んでください。 ●もう一度、確実に差し込んでください。 ●正しく装着してください。 ●もう一度、確実に装着し直してください。 ●端子部を綿棒などで清掃してください。 ●5℃～35℃の温度範囲でご使用ください。 ●新しい電池パックと交換してください。

症状	確認すること	処置
充電時間が短い	●電池パックに容量が残っている場合は、充電時間が短くなります。	—
熱くなる	●充電中に、急速充電器や卓上ホルダーが発熱することがあります。 ●長時間通話すると、V801SHが熱くなることがあります。手で触れることのできる温度であれば異常ではありません。	—
電池の消耗が早い	●使用環境（気温／充電状況／電波状態）、操作や設定状態によっては、電池パックの消耗が早くなります。	●電池パックの利用可能時間（  P.1-17）、持ちについて（  P.1-17）、消耗を軽減する（  P.1-18）を参照してください。
ディスプレイの表示がちらつく	●蛍光灯の下では、ディスプレイの表示がちらつくことがあります。	—
バックライト消灯時ディスプレイの表示が暗い	●ディスプレイの特性によるもので、故障ではありません。	—
スピーカーで音楽が再生できない	●マナーモードが設定されていませんか？	●マナーモードを解除してください。（  P.3-3）

補足

●故障の際の連絡先やアフターサービス：P.17-23

こんなときはご利用になれません

■「圏外」表示が出ているとき

サービスエリア外か電波の届かない場所にいるためです。「圏外」表示が消え、受信電波の強さを示すバーが1本以上表示される場所へ移動してください。

■「充電して下さい」のメッセージが出て、電池アラーム音が鳴っているとき

電池パックの残量がなくなっています。（P.1-18）

電池パックを充電するか、充電されている予備の電池パックと交換してください。

■「」表示が出ているとき

誤動作防止が設定されています。（P.13-11）

設定を解除しないとボタン操作はできません。ただし、電話がかかってきたときは、一時的に誤動作防止は解除されます。エニーキーアンサー（P.2-10）で電話に出ることができます。V801SHを閉じた状態でサイドキーを1秒以上押すと、サブディスプレイに「サイドキー誤動作防止 F長押しで解除」と表示されます。

■「」表示が出ているとき

ダイヤル操作禁止が設定されています。（P.13-4）

ダイヤル操作禁止を解除しないと電話はかけられません。ただし、電話がかかってきたときは、エニーキーアンサー（P.2-10）で電話に出ることができます。

17

付録

17

付録

スモールライト／電池残量表示

スモールライトや電池残量表示は、次のような状態をお知らせします。

電源が入っているとき

スモールライト	電池残量表示 (電池アイコン)	状態
消灯	点滅	温度異常により充電中断中
赤色点滅	点滅	電池パックの寿命、異常
赤色点灯	点滅	充電中
消灯	点灯	充電完了、待受中

電源が切れているとき

スモールライト	電池残量表示 (電池アイコン)	状態
赤色点滅	消灯	電池パックの寿命、異常
赤色点灯	消灯	充電中

保証書とアフターサービス

■保証書

V801SH本体をお買い上げいただいた場合は、保証書がついています。

- お買い上げ店名、お買い上げ日をご確認ください。
- 内容をよくお読みのうえ、大切に保管してください。
- 保証期間は、保証書に記載しております。

■アフターサービスについて

修理をご依頼になる前に、「トラブルシューティング」に掲載されている項目をもう一度ご確認ください。該当する症状がないときや、異常を解決できないときは、ご契約いただいたボータフォンの故障受付（☎P.17-23）にご相談ください。

その際、できるだけ詳しく異常の状態をお聞かせください。

- 保証期間中は保証書の記載内容に基づいて修理いたします。
- 保証期間後の修理につきましては、修理により機能が維持できる場合は、ご要望により有償修理いたします。

その他アフターサービスの詳細は、お買い上げいただいた「取扱店」、最寄りの「ボータフォンショップ」または「お問い合わせ先」（☎P.17-23）までご連絡ください。なお、補修用性能部品（機能維持のために必要な部品）の最低保有期間は、生産打ち切り後6年です。

注意

- 本製品の故障、誤作動または不具合などにより、通話などの機会を逸したために、お客さま、または第三者が受けた損害につきましては、当社は責任を負いかねますのであらかじめご了承ください。
- 故障または修理により、お客さまが登録・設定した内容が消失／変化する場合がありますので、大切なメモリアルなどは控えをとっておかれることをおすすめします。
なお、故障または修理の際にV801SHに登録したデータ（メモリアル／画像／サウンドなど）や設定した内容が消失／変化した場合の損害につきましては、当社は責任を負いかねますのであらかじめご了承ください。
- 本製品を分解／改造すると、電波法にふれることがあります。また、改造された場合は修理をお引き受けできませんので、ご注意ください。

区点コード一覧

0101	X	0163	2660	b	0366	0437	ク	0515	ロ	0577	В	0703	Ю	0780	蛇	1626	員
0102	÷	0164	0261	c	0367	0438	グ	0516	ワ	0578	Г	0704	Я	0781	鮫	1627	因
0103	≡	0165	0262	d	0368	0439	ケ	0517	キ	0579	Д	0705	—	0801	綫	1628	引
0104	#	0166	0263	e	0369	0440	ゴ	0518	エ	0580	Е	0706	┌	0802	鮫	1629	飲
0105	∧	0167	0264	f	0370	0441	コ	0519	ラン	0581	Ж	0707	┐	0803	或	1630	注
0106	∨	0168	0265	g	0371	0442	サ	0520	ヴ	0582	З	0708	└	0804	栗	1631	風
0107	∩	0169	0266	h	0372	0443	シ	0521	カ	0583	И	0709	┌	0805	拾	1632	塵
0108	∪	0170	0267	i	0373	0444	ス	0522	ケ	0584	Й	0710	└	0806	安	1633	陰
0109	∩	0171	0268	j	0374	0445	ズ	0523	セ	0585	К	0711	┌	0807	按	1634	暗
0110	∪	0172	0269	k	0375	0446	セ	0524	ソ	0586	Л	0712	└	0808	暗	1635	案
0111	∩	0173	0270	l	0376	0447	タ	0525	ダ	0587	М	0713	┌	0809	閣	1636	殺
0112	∪	0174	0271	m	0377	0448	チ	0526	ツ	0588	Н	0714	└	0810	害	1637	害
0113	∩	0175	0272	n	0378	0449	ッ	0527	テ	0589	О	0715	┌	0811	衣	1638	害
0114	∪	0176	0273	o	0379	0450	ツ	0528	テ	0590	П	0716	└	0812	威	1639	害
0115	∩	0177	0274	p	0380	0451	ツ	0529	テ	0591	Р	0717	┌	0813	尉	1640	害
0116	∪	0178	0282	q	0381	0452	ツ	0530	テ	0592	С	0718	└	0814	意	1641	害
0117	∩	0179	0283	r	0382	0453	ツ	0531	テ	0593	Т	0719	┌	0815	慰	1642	害
0118	∪	0180	0284	s	0383	0454	ツ	0532	テ	0594	У	0720	└	0816	易	1643	害
0119	∩	0181	0285	t	0384	0455	ツ	0533	テ	0595	Ф	0721	┌	0817	椅	1644	害
0120	∪	0182	0286	u	0385	0456	ツ	0534	テ	0596	Х	0722	└	0818	為	1645	害
0121	∩	0183	0287	v	0386	0457	ツ	0535	テ	0597	Ц	0723	┌	0819	畏	1646	害
0122	∪	0184	0288	w	0387	0458	ツ	0536	テ	0598	Ч	0724	└	0820	異	1647	害
0123	∩	0185	0289	x	0388	0459	ツ	0537	テ	0599	Ш	0725	┌	0821	移	1648	害
0124	∪	0186	0294	y	0389	0460	ツ	0538	テ	0600	Щ	0726	└	0822	維	1649	害
0125	∩	0187	0	z	0390	0461	ツ	0539	テ	0601	Ъ	0727	┌	0823	緯	1650	害
0126	∪	0188	0	あ	0401	0462	ツ	0540	テ	0602	Ы	0728	└	0824	胃	1651	害
0127	∩	0189	1	い	0402	0463	ツ	0541	テ	0603	Ь	0729	┌	0825	衣	1652	害
0128	∪	0190	2	う	0403	0464	ツ	0542	テ	0604	Э	0730	└	0826	謂	1653	害
0129	∩	0191	3	え	0404	0465	ツ	0543	テ	0605	Ю	0731	┌	0827	遣	1654	害
0130	∪	0192	4	お	0405	0466	ツ	0544	テ	0606	Я	0732	└	0828	医	1655	害
0131	∩	0193	5	か	0406	0467	ツ	0545	テ	0607	А	0733	┌	0829	并	1656	害
0132	∪	0194	6	き	0407	0468	ツ	0546	テ	0608	Б	0734	└	0830	域	1657	害
0133	∩	0195	7	く	0408	0469	ツ	0547	テ	0609	В	0735	┌	0831	育	1658	害
0134	∪	0196	8	げ	0409	0470	ツ	0548	テ	0610	Г	0736	└	0832	郁	1659	害
0135	∩	0197	9	け	0410	0471	ツ	0549	テ	0611	Д	0737	┌	0833	磯	1660	害
0136	∪	0198	0	こ	0411	0472	ツ	0550	テ	0612	Е	0738	└	0834	一	1661	害
0137	∩	0199	1	さ	0412	0473	ツ	0551	テ	0613	Ж	0739	┌	0835	老	1662	害
0138	∪	0200	2	ざ	0413	0474	ツ	0552	テ	0614	З	0740	└	0836	淫	1663	害
0139	∩	0201	3	し	0414	0475	ツ	0553	テ	0615	И	0741	┌	0837	逸	1664	害
0140	∪	0202	4	じ	0415	0476	ツ	0554	テ	0616	Й	0742	└	0838	稀	1665	害
0141	∩	0203	5	ず	0416	0477	ツ	0555	テ	0617	К	0743	┌	0839	茨	1666	害
0142	∪	0204	6	そ	0417	0478	ツ	0556	テ	0618	Л	0744	└	0840	手	1667	害
0143	∩	0205	7	た	0418	0479	ツ	0557	テ	0619	М	0745	┌	0841	鯛	1668	害
0144	∪	0206	8	だ	0419	0480	ツ	0558	テ	0620	Н	0746	└	0842	允	1669	害
0145	∩	0207	9	ち	0420	0481	ツ	0559	テ	0621	О	0747	┌	0843	印	1670	害
0146	∪	0208	0	っ	0421	0482	ツ	0560	テ	0622	П	0748	└	0844	咽	1671	害
0147	∩	0209	1	つ	0422	0483	ツ	0561	テ	0623	Р	0749	┌	0845		1672	害
0148	∪	0210	2		0423		ツ	0562	テ	0624	С	0750	└	0846		1673	害
0149	∩	0211	3		0424		ツ	0563	テ	0625	Т	0751	┌	0847		1674	害
0150	∪	0212	4		0425		ツ	0564	テ	0626	У	0752	└	0848		1675	害
0151	∩	0213	5		0426		ツ	0565	テ	0627	Ф	0753	┌	0849		1676	害
0152	∪	0214	6		0427		ツ	0566	テ	0628	Х	0754	└	0850		1677	害
0153	∩	0215	7		0428		ツ	0567	テ	0629	Ц	0755	┌	0851		1678	害
0154	∪	0216	8		0429		ツ	0568	テ	0630	Ч	0756	└	0852		1679	害
0155	∩	0217	9		0430		ツ	0569	テ	0631	Ш	0757	┌	0853		1680	害
0156	∪	0218	0		0431		ツ	0570	テ	0632	Щ	0758	└	0854		1681	害
0157	∩	0219	1		0432		ツ	0571	テ	0633	Ъ	0759	┌	0855		1682	害
0158	∪	0220	2		0433		ツ	0572	テ	0634	Ы	0760	└	0856		1683	害
0159	∩	0221	3		0434		ツ	0573	テ	0635	Ь	0761	┌	0857		1684	害
0160	∪	0222	4		0435		ツ	0574	テ	0636	Э	0762	└	0858		1685	害
0161	∩	0223	5		0436		ツ	0575	テ	0637	Ю	0763	┌	0859		1686	害
0162	∪	0224	6				ツ	0576	テ	0638	Я	0764	└	0860		1687	害

說液疫益	1752	臆桶杜乙	1818	駕介会解	1879	確穉覓	1946	喚堪堪	2013	【企伎危	2075	吃喫格	2141	協匠卿	2208	九俱旬	2269	惠慮惠	2335	權率大	2402
厭悅謁	1753	桶杜乙	1819	解回塊	1880	覓角	1947	堪完官	2014	伎危	2076	格詰詰	2142	卿叫	2209	俱旬	2270	慮惠	2336	率大	2403
益厭謁	1754	桶杜乙	1820	回塊塊	1881	角	1948	完官	2015	危	2077	詰詰	2143	叫	2210	旬	2271	惠	2337	率大	2404
謁	1755	桶杜乙	1821	塊塊	1882	郭	1949	官	2016	器	2078	柅柅	2144	叫	2211	区	2272	惠	2338	率大	2405
謁	1756	桶杜乙	1822	塊塊	1883	開	1950	寬	2017	基	2079	柅柅	2145	境	2212	狄狄	2273	惠	2339	率大	2406
謁	1757	桶杜乙	1823	塊塊	1884	隔	1951	干	2018	奇	2080	柅柅	2146	境	2213	狄狄	2274	惠	2340	率大	2407
謁	1758	桶杜乙	1824	塊塊	1885	隔	1952	干	2019	奇	2081	柅柅	2147	境	2214	狄狄	2275	惠	2341	率大	2408
謁	1759	桶杜乙	1825	塊塊	1886	隔	1953	干	2020	奇	2082	柅柅	2148	境	2215	狄狄	2276	惠	2342	率大	2409
謁	1760	桶杜乙	1826	塊塊	1887	隔	1954	干	2021	奇	2083	柅柅	2149	境	2216	狄狄	2277	惠	2343	率大	2410
謁	1761	桶杜乙	1827	塊塊	1888	隔	1955	干	2022	奇	2084	柅柅	2150	境	2217	狄狄	2278	惠	2344	率大	2411
謁	1762	桶杜乙	1828	塊塊	1889	隔	1956	干	2023	奇	2085	柅柅	2151	境	2218	狄狄	2279	惠	2345	率大	2412
謁	1763	桶杜乙	1829	塊塊	1890	隔	1957	干	2024	奇	2086	柅柅	2152	境	2219	狄狄	2280	惠	2346	率大	2413
謁	1764	桶杜乙	1830	塊塊	1891	隔	1958	干	2025	奇	2087	柅柅	2153	境	2220	狄狄	2281	惠	2347	率大	2414
謁	1765	桶杜乙	1831	塊塊	1892	隔	1959	干	2026	奇	2088	柅柅	2154	境	2221	狄狄	2282	惠	2348	率大	2415
謁	1766	桶杜乙	1832	塊塊	1893	隔	1960	干	2027	奇	2089	柅柅	2155	境	2222	狄狄	2283	惠	2349	率大	2416
謁	1767	桶杜乙	1833	塊塊	1894	隔	1961	干	2028	奇	2090	柅柅	2156	境	2223	狄狄	2284	惠	2350	率大	2417
謁	1768	桶杜乙	1834	塊塊	1895	隔	1962	干	2029	奇	2091	柅柅	2157	境	2224	狄狄	2285	惠	2351	率大	2418
謁	1769	桶杜乙	1835	塊塊	1896	隔	1963	干	2030	奇	2092	柅柅	2158	境	2225	狄狄	2286	惠	2352	率大	2419
謁	1770	桶杜乙	1836	塊塊	1897	隔	1964	干	2031	奇	2093	柅柅	2159	境	2226	狄狄	2287	惠	2353	率大	2420
謁	1771	桶杜乙	1837	塊塊	1898	隔	1965	干	2032	奇	2094	柅柅	2160	境	2227	狄狄	2288	惠	2354	率大	2421
謁	1772	桶杜乙	1838	塊塊	1899	隔	1966	干	2033	奇	2095	柅柅	2161	境	2228	狄狄	2289	惠	2355	率大	2422
謁	1773	桶杜乙	1839	塊塊	1900	隔	1967	干	2034	奇	2096	柅柅	2162	境	2229	狄狄	2290	惠	2356	率大	2423
謁	1774	桶杜乙	1840	塊塊	1901	隔	1968	干	2035	奇	2097	柅柅	2163	境	2230	狄狄	2291	惠	2357	率大	2424
謁	1775	桶杜乙	1841	塊塊	1902	隔	1969	干	2036	奇	2098	柅柅	2164	境	2231	狄狄	2292	惠	2358	率大	2425
謁	1776	桶杜乙	1842	塊塊	1903	隔	1970	干	2037	奇	2099	柅柅	2165	境	2232	狄狄	2293	惠	2359	率大	2426
謁	1777	桶杜乙	1843	塊塊	1904	隔	1971	干	2038	奇	2100	柅柅	2166	境	2233	狄狄	2294	惠	2360	率大	2427
謁	1778	桶杜乙	1844	塊塊	1905	隔	1972	干	2039	奇	2101	柅柅	2167	境	2234	狄狄	2295	惠	2361	率大	2428
謁	1779	桶杜乙	1845	塊塊	1906	隔	1973	干	2040	奇	2102	柅柅	2168	境	2235	狄狄	2296	惠	2362	率大	2429
謁	1780	桶杜乙	1846	塊塊	1907	隔	1974	干	2041	奇	2103	柅柅	2169	境	2236	狄狄	2297	惠	2363	率大	2430
謁	1781	桶杜乙	1847	塊塊	1908	隔	1975	干	2042	奇	2104	柅柅	2170	境	2237	狄狄	2298	惠	2364	率大	2431
謁	1782	桶杜乙	1848	塊塊	1909	隔	1976	干	2043	奇	2105	柅柅	2171	境	2238	狄狄	2299	惠	2365	率大	2432
謁	1783	桶杜乙	1849	塊塊	1910	隔	1977	干	2044	奇	2106	柅柅	2172	境	2239	狄狄	2300	惠	2366	率大	2433
謁	1784	桶杜乙	1850	塊塊	1911	隔	1978	干	2045	奇	2107	柅柅	2173	境	2240	狄狄	2301	惠	2367	率大	2434
謁	1785	桶杜乙	1851	塊塊	1912	隔	1979	干	2046	奇	2108	柅柅	2174	境	2241	狄狄	2302	惠	2368	率大	2435
謁	1786	桶杜乙	1852	塊塊	1913	隔	1980	干	2047	奇	2109	柅柅	2175	境	2242	狄狄	2303	惠	2369	率大	2436
謁	1787	桶杜乙	1853	塊塊	1914	隔	1981	干	2048	奇	2110	柅柅	2176	境	2243	狄狄	2304	惠	2370	率大	2437
謁	1788	桶杜乙	1854	塊塊	1915	隔	1982	干	2049	奇	2111	柅柅	2177	境	2244	狄狄	2305	惠	2371	率大	2438
謁	1789	桶杜乙	1855	塊塊	1916	隔	1983	干	2050	奇	2112	柅柅	2178	境	2245	狄狄	2306	惠	2372	率大	2439
謁	1790	桶杜乙	1856	塊塊	1917	隔	1984	干	2051	奇	2113	柅柅	2179	境	2246	狄狄	2307	惠	2373	率大	2440
謁	1791	桶杜乙	1857	塊塊	1918	隔	1985	干	2052	奇	2114	柅柅	2180	境	2247	狄狄	2308	惠	2374	率大	2441
謁	1792	桶杜乙	1858	塊塊	1919	隔	1986	干	2053	奇	2115	柅柅	2181	境	2248	狄狄	2309	惠	2375	率大	2442
謁	1793	桶杜乙	1859	塊塊	1920	隔	1987	干	2054	奇	2116	柅柅	2182	境	2249	狄狄	2310	惠	2376	率大	2443
謁	1794	桶杜乙	1860	塊塊	1921	隔	1988	干	2055	奇	2117	柅柅	2183	境	2250	狄狄	2311	惠	2377	率大	2444
謁	1801	桶杜乙	1861	塊塊	1922	隔	1989	干	2056	奇	2118	柅柅	2184	境	2251	狄狄	2312	惠	2378	率大	2445
謁	1802	桶杜乙	1862	塊塊	1923	隔	1990	干	2057	奇	2119	柅柅	2185	境	2252	狄狄	2313	惠	2379	率大	2446
謁	1803	桶杜乙	1863	塊塊	1924	隔	1991	干	2058	奇	2120	柅柅	2186	境	2253	狄狄	2314	惠	2380	率大	2447
謁	1804	桶杜乙	1864	塊塊	1925	隔	1992	干	2059	奇	2121	柅柅	2187	境	2254	狄狄	2315	惠	2381	率大	2448
謁	1805	桶杜乙	1865	塊塊	1926	隔	1993	干	2060	奇	2122	柅柅	2188	境	2255	狄狄	2316	惠	2382	率大	2449
謁	1806	桶杜乙	1866	塊塊	1927	隔	1994	干	2061	奇	2123	柅柅	2189	境	2256	狄狄	2317	惠	2383	率大	2450
謁	1807	桶杜乙	1867	塊塊	1928	隔	1995	干	2062	奇	2124	柅柅	2190	境	2257	狄狄	2318	惠	2384	率大	2451
謁	1808	桶杜乙	1868	塊塊	1929	隔	1996	干	2063	奇	2125	柅柅	2191	境	2258	狄狄	2319	惠	2385	率大	2452
謁	1809	桶杜乙	1869	塊塊	1930	隔	1997	干	2064	奇	2126	柅柅	2192	境	2259	狄狄	2320	惠	2386	率大	2453
謁	1810	桶杜乙	1870	塊塊	1931	隔	1998	干	2065	奇	2127	柅柅	2193	境	2260	狄狄	2321	惠	2387	率大	2454
謁	1811	桶杜乙	1871	塊塊	1932	隔	1999	干	2066	奇	2128	柅柅	2194	境	2261	狄狄	2322	惠	2388	率大	2455
謁	1812	桶杜乙	1872	塊塊	1933	隔	2000	干	2067	奇	2129	柅柅	2195	境	2262	狄狄	2323	惠	2389	率大	2456
謁	1813	桶杜乙	1873	塊塊	1934	隔	2001	干	2068	奇	2130	柅柅	2196	境	2263	狄狄	2324	惠	2390	率大	2457
謁	1814	桶杜乙	1874	塊塊	1935	隔	2002	干	2069	奇	2131	柅柅	2197	境	2264	狄狄	2325	惠	2391	率大	2458
謁	1815	桶杜乙	1875	塊塊	1936	隔	2003	干	2070	奇	2132	柅柅	2198	境	2265	狄狄	2326	惠	2392	率大	2459
謁	1816	桶杜乙	1876	塊塊	1937	隔	2004	干	2071	奇	2133	柅柅	2199	境	2266	狄狄	2327	惠	2393	率大	2460
謁	1817	桶杜乙	1877	塊塊	1938	隔	2005	干	2072	奇	2134	柅柅	2200	境	2267	狄狄	2328	惠	2394	率大	2461
謁	1818	桶杜乙	1878	塊塊	1939	隔	2006	干	2073	奇	2135	柅柅	2201	境	2268	狄狄	2329	惠	2395	率大	2462
謁	1819	桶杜乙	1879	塊塊	1940	隔	2007	干	2074	奇	2136	柅柅	2202	境	2269	狄狄	2330	惠	2396	率大	2463
謁	1820	桶杜乙	1880	塊塊	1941	隔	2008	干	2075	奇	2137	柅柅	2203	境	2270	狄狄	2331	惠	2397	率大	2464
謁	1821	桶杜乙	1881	塊塊	1942	隔	2009	干	2076	奇	2138	柅柅	2204	境	2271	狄狄	2332	惠	2398	率大	2465
謁	1822	桶杜乙	1882	塊塊	1943	隔	2010	干	2077	奇	2139	柅柅	2205	境	2272	狄狄	2333	惠	2399	率大	2466
謁	1823	桶杜乙	1883	塊塊	1944	隔	2011	干	2078	奇	2140	柅柅	2206	境	2273	狄狄	2334	惠	2400	率大	2467
謁	1824	桶杜乙	1884	塊塊	1945	隔	2012	干	2079	奇	2141	柅柅	2207	境	2274	狄狄	2335	惠	2401	率大	2468
謁	1825	桶杜乙	1885	塊塊	1946	隔	2013	干	2080	奇	2142	柅柅	2208	境	2275	狄狄	2336	惠	2402	率大	2469
謁	1826	桶杜乙	1886	塊塊	1947	隔	2014	干	2081	奇	2143	柅柅	2209	境	2276	狄狄	2337	惠	2403	率大	2470
謁	1827	桶杜乙	1887	塊塊	1948	隔	2015	干													

17 付録

17
付録

3885 3948 4015 4076 4143 4209 4269 4336 4402 4460 4525
3886 3949 4016 4077 4144 4210 4270 4337 4403 4461 4526
3887 3950 4017 4078 4145 4211 4271 4338 4404 4462 4527
3888 3951 4018 4079 4146 4212 4272 4339 4405 4463 4528
3889 3952 4019 4080 4147 4213 4273 4340 4406 4464 4529
3890 3953 4020 4081 4148 4214 4274 4341 4407 4465 4530
3891 3954 4021 4082 4149 4215 4275 4342 4408 4466 4531
3892 3955 4022 4083 4150 4216 4276 4343 4409 4467 4532
3893 3956 4023 4084 4151 4217 4277 4344 4410 4468 4533
3894 3957 4024 4085 4152 4218 4278 4345 4411 4469 4534
3901 3959 4026 4087 4153 4219 4279 4346 4412 4471 4535
3902 3960 4027 4088 4154 4220 4280 4347 4413 4472 4536
3903 3961 4028 4089 4155 4221 4281 4348 4414 4473 4537
3904 3962 4029 4090 4156 4222 4282 4349 4415 4474 4538
3905 3963 4030 4091 4157 4223 4283 4350 4416 4475 4539
3906 3964 4031 4092 4158 4224 4284 4351 4417 4476 4540
3907 3965 4032 4093 4159 4225 4285 4352 4418 4477 4541
3908 3966 4033 4094 4160 4226 4286 4353 4419 4478 4542
3909 3967 4034 4161 4227 4287 4354 4420 4479 4543
3910 3968 4035 4162 4228 4288 4355 4421 4480 4544
3911 3969 4036 4163 4229 4289 4356 4422 4481 4545
3912 3970 4037 4164 4230 4291 4357 4423 4482 4546
3913 3971 4038 4165 4231 4292 4358 4424 4483 4547
3914 3972 4039 4166 4232 4293 4359 4425 4484 4548
3915 3973 4040 4167 4233 4294 4360 4426 4485 4549
3916 3974 4041 4168 4234 4361 4427 4486 4550
3917 3975 4042 4169 4235 4362 4428 4487 4551
3918 3976 4043 4170 4236 4363 4429 4488 4552
3919 3977 4044 4171 4237 4364 4430 4489 4553
3920 3978 4045 4172 4238 4365 4431 4490 4554
3921 3979 4046 4173 4239 4366 4432 4491 4555
3922 3980 4047 4174 4240 4367 4433 4492 4556
3923 3981 4048 4175 4241 4368 4434 4493 4557
3924 3982 4049 4176 4242 4369 4435 4494 4558
3925 3983 4050 4177 4243 4370 4436 4495 4559
3926 3984 4051 4178 4244 4371 4437 4496 4560
3927 3985 4052 4179 4245 4372 4438 4497 4561
3928 3986 4053 4180 4246 4373 4439 4498 4562
3929 3987 4054 4181 4247 4374 4440 4499 4563
3930 3988 4055 4182 4248 4375 4441 4500 4564
3931 3989 4056 4183 4249 4376 4442 4501 4565
3932 3990 4057 4184 4250 4377 4443 4502 4566
3933 3991 4058 4185 4251 4378 4444 4503 4567
3934 3992 4059 4186 4252 4379 4445 4504 4568
3935 3993 4060 4187 4253 4380 4446 4505 4569
3936 3994 4061 4188 4254 4381 4447 4506 4570
3937 4001 4062 4189 4255 4382 4448 4507 4571
3938 4002 4063 4190 4256 4383 4449 4508 4572
3939 4003 4064 4191 4257 4384 4450 4509 4573
3940 4004 4065 4192 4258 4385 4451 4510 4574
3941 4005 4066 4193 4259 4386 4452 4511 4575
3942 4006 4067 4194 4260 4387 4453 4512 4576
3943 4007 4068 4195 4261 4388 4454 4513 4577
3944 4008 4069 4196 4262 4389 4455 4514 4578
3945 4009 4070 4197 4263 4390 4456 4515 4579
3946 4010 4071 4198 4264 4391 4457 4516 4580
3947 4011 4072 4199 4265 4392 4458 4517 4581
3948 4012 4073 4200 4266 4393 4459 4518 4582
3949 4013 4074 4201 4267 4394 4460 4519 4583
3950 4014 4075 4202 4268 4395 4461 4520 4584

4585 4651 4715 4824 4886 4953 5020 5082 5149 5216 5278
4586 4652 4716 4825 4887 4954 5021 5083 5150 5217 5279
4587 4653 4717 4826 4888 4955 5022 5084 5151 5218 5280
4588 4654 4718 4827 4889 4956 5023 5085 5152 5219 5281
4589 4655 4719 4828 4890 4957 5024 5086 5153 5220 5282
4590 4656 4720 4829 4891 4958 5025 5087 5154 5221 5283
4591 4657 4721 4830 4892 4959 5026 5088 5155 5222 5284
4592 4658 4722 4831 4893 4960 5027 5089 5156 5223 5285
4593 4659 4723 4832 4894 4961 5028 5090 5157 5224 5286
4594 4660 4724 4833 4962 4962 5029 5091 5158 5225 5287
4595 4661 4725 4834 4963 4963 5030 5092 5159 5226 5288
4601 4662 4726 4835 4964 4964 5031 5093 5160 5227 5289
4602 4663 4727 4836 4965 4965 5032 5094 5161 5228 5290
4603 4664 4728 4837 4966 4966 5033 5162 5229 5291
4604 4665 4729 4838 4967 4967 5034 5163 5230 5292
4605 4666 4730 4839 4968 4968 5035 5164 5231 5293
4606 4667 4731 4840 4969 4969 5036 5165 5232 5294
4607 4668 4732 4841 4970 4970 5037 5166 5233 5301
4608 4669 4733 4842 4971 4971 5038 5167 5234 5302
4609 4670 4734 4843 4972 4972 5039 5168 5235 5303
4610 4671 4735 4844 4973 4973 5040 5169 5236 5304
4611 4672 4736 4845 4974 4974 5041 5170 5237 5305
4612 4673 4737 4846 4975 4975 5042 5171 5238 5306
4613 4674 4738 4847 4976 4976 5043 5172 5239 5307
4614 4675 4739 4848 4977 4977 5044 5173 5240 5308
4615 4676 4740 4849 4978 4978 5045 5174 5241 5309
4616 4677 4741 4850 4979 4979 5046 5175 5242 5310
4617 4678 4742 4851 4980 4980 5047 5176 5243 5311
4618 4679 4743 4852 4981 4981 5048 5177 5244 5312
4619 4680 4744 4853 4982 4982 5049 5178 5245 5313
4620 4681 4745 4854 4983 4983 5050 5179 5246 5314
4621 4682 4746 4855 4984 4984 5051 5180 5247 5315
4622 4683 4747 4856 4985 4985 5052 5181 5248 5316
4623 4684 4748 4857 4986 4986 5053 5182 5249 5317
4624 4685 4749 4858 4987 4987 5054 5183 5250 5318
4625 4686 4750 4859 4988 4988 5055 5184 5251 5319
4626 4687 4751 4860 4989 4989 5056 5185 5252 5320
4627 4688 4801 4861 4990 4990 5057 5186 5253 5321
4628 4689 4802 4862 4991 4991 5058 5187 5254 5322
4629 4690 4803 4863 4992 4992 5059 5188 5255 5323
4630 4691 4804 4864 4993 4993 5060 5189 5256 5324
4631 4692 4805 4865 4994 4994 5061 5190 5257 5325
4632 4693 4806 4866 4995 4995 5062 5191 5258 5326
4633 4694 4807 4867 4996 4996 5063 5192 5259 5327
4634 4701 4808 4868 4997 4997 5064 5193 5260 5328
4635 4702 4809 4869 4998 4998 5065 5194 5261 5329
4636 4703 4810 4870 4999 4999 5066 5201 5262 5330
4637 4704 4811 4871 5000 5000 5067 5202 5263 5331
4638 4705 4812 4872 5001 5001 5068 5203 5264 5332
4639 4706 4813 4873 5002 5002 5069 5204 5265 5333
4640 4707 4814 4874 5003 5003 5070 5205 5266 5334
4641 4708 4815 4875 5004 5004 5071 5206 5267 5335
4642 4709 4816 4876 5005 5005 5072 5207 5268 5336
4643 4710 4817 4877 5006 5006 5073 5208 5269 5337
4644 4711 4818 4878 5007 5007 5074 5209 5270 5338
4645 4712 4819 4879 5008 5008 5075 5210 5271 5339
4646 4713 4820 4880 5009 5009 5076 5211 5272 5340
4647 4714 4821 4881 5010 5010 5077 5212 5273 5341
4648 4715 4822 4882 5011 5011 5078 5213 5274 5342
4649 4716 4823 4883 5012 5012 5079 5214 5275 5343
4650 4717 4824 4884 5013 5013 5080 5215 5276 5344

17 付録

17
付録

狷	8218	猓	8280	𪛗	8347								
𪛗	8219	猓	8281	𪛗	8348								
𪛗	8220	猓	8282	𪛗	8349								
𪛗	8221	猓	8283	𪛗	8350								
𪛗	8222	猓	8284	𪛗	8351								
𪛗	8223	猓	8285	𪛗	8352								
𪛗	8224	猓	8286	𪛗	8353								
𪛗	8225	猓	8287	𪛗	8354								
𪛗	8226	猓	8288	𪛗	8355								
𪛗	8227	猓	8289	𪛗	8356								
𪛗	8228	猓	8290	𪛗	8357								
𪛗	8229	猓	8291	𪛗	8358								
𪛗	8230	猓	8292	𪛗	8359								
𪛗	8231	猓	8293	𪛗	8360								
𪛗	8232	猓	8294	𪛗	8361								
𪛗	8233	猓		𪛗	8362								
𪛗	8234	猓	8301	𪛗	8363								
𪛗	8235	猓	8302	𪛗	8364								
𪛗	8236	猓	8303	𪛗	8365								
𪛗	8237	猓	8304	𪛗	8366								
𪛗	8238	猓	8305	𪛗	8367								
𪛗	8239	猓	8306	𪛗	8368								
𪛗	8240	猓	8307	𪛗	8369								
𪛗	8241	猓	8308	𪛗	8370								
𪛗	8242	猓	8309	𪛗	8371								
𪛗	8243	猓	8310	𪛗	8372								
𪛗	8244	猓	8311	𪛗	8373								
𪛗	8245	猓	8312	𪛗	8374								
𪛗	8246	猓	8313	𪛗	8375								
𪛗	8247	猓	8314	𪛗	8376								
𪛗	8248	猓	8315	𪛗	8377								
𪛗	8249	猓	8316	𪛗	8378								
𪛗	8250	猓	8317	𪛗	8379								
𪛗	8251	猓	8318	𪛗	8380								
𪛗	8252	猓	8319	𪛗	8381								
𪛗	8253	猓	8320	𪛗	8382								
𪛗	8254	猓	8321	𪛗	8383								
𪛗	8255	猓	8322	𪛗	8384								
𪛗	8256	猓	8323	𪛗	8385								
𪛗	8257	猓	8324	𪛗	8386								
𪛗	8258	猓	8325	𪛗	8387								
𪛗	8259	猓	8326	𪛗	8388								
𪛗	8260	猓	8327	𪛗	8389								
𪛗	8261	猓	8328	𪛗	8390								
𪛗	8262	猓	8329	𪛗	8391								
𪛗	8263	猓	8330	𪛗	8392								
𪛗	8264	猓	8331	𪛗	8393								
𪛗	8265	猓	8332	𪛗	8394								
𪛗	8266	猓	8333	𪛗									
𪛗	8267	猓	8334	𪛗	8401								
𪛗	8268	猓	8335	𪛗	8402								
𪛗	8269	猓	8336	𪛗	8403								
𪛗	8270	猓	8337	𪛗	8404								
𪛗	8271	猓	8338	𪛗	8405								
𪛗	8272	猓	8339	𪛗	8406								
𪛗	8273	猓	8340	𪛗									
𪛗	8274	猓	8341	𪛗									
𪛗	8275	猓	8342	𪛗									
𪛗	8276	猓	8343	𪛗									
𪛗	8277	猓	8344	𪛗									
𪛗	8278	猓	8345	𪛗									
𪛗	8279	猓	8346	𪛗									

お問い合わせ先一覧



お困りのときや、ご不明な点などがございましたら、お気軽に下記お問い合わせ窓口までご連絡ください。

ボーダフォンお客さまセンター

総合案内 ボーダフォン携帯電話から157(無料)

紛失・故障受付 ボーダフォン携帯電話から113(無料)

■一般電話からおかけの場合

ご契約地域	お問い合わせ内容	電話番号
北海道・青森県・秋田県・岩手県・山形県・宮城県・福島県・新潟県・東京都・神奈川県・千葉県・埼玉県・茨城県・栃木県・群馬県・山梨県・長野県・富山県・石川県・福井県	総合案内	☎0088-240-157(無料)
	紛失・故障受付	☎0088-240-113(無料)
愛知県・岐阜県・三重県・静岡県	総合案内	☎0088-241-157(無料)
	紛失・故障受付	☎0088-241-113(無料)
大阪府・兵庫県・京都府・奈良県・滋賀県・和歌山県	総合案内	☎0088-242-157(無料)
	紛失・故障受付	☎0088-242-113(無料)
広島県・岡山県・山口県・鳥取県・島根県	総合案内	☎0088-259-157(無料)
	紛失・故障受付	☎0088-259-113(無料)
徳島県・香川県・愛媛県・高知県	総合案内	☎0088-247-157(無料)
	紛失・故障受付	☎0088-247-113(無料)
福岡県・佐賀県・長崎県・大分県・熊本県・宮崎県・鹿児島県・沖縄県	総合案内	☎0088-250-157(無料)
	紛失・故障受付	☎0088-250-113(無料)

索引

英数字

DPOF.....	6-38
E- アニメータ	11-16
F機能一覧	17-2
PIN コード	1-7
ON/OFF を切り替える	13-3
PIN ロックを解除する	13-3
変更.....	13-2
USB データ通信	14-38
USIM カード	1-4

あ

アラームを鳴らす	14-10
暗証番号	1-33
インデックスメニュー	1-30
インフォメーションメニュー	2-22
ウェイクアップ	7-16
運転中モード	3-6
英語表示に切り替える	7-18
英数字入力モード	4-2、4-9
絵文字コード入力モード	4-2、4-10
エリア選択.....	2-2
オーディオプレイヤー	9-20
再生する.....	9-22
再生方法を設定する	9-27
オーディオリスト	9-23
オーディオレコーダー	9-11
オーディオ機器と接続する.....	9-14
音する.....	9-16
音方法を設定する	9-18
オーナー情報	2-32
オールリセット	13-12
オリジナル着信音	8-12
オリジナル音色	8-28
音声メモ	2-19、14-9

か

カーソル	4-7
ガイド機能.....	14-36
外部データ通信	14-38
各ボタンに割り当てられた文字	4-4
画像一覧表示	11-6
画像装飾	11-28
画像分割メール	6-35、11-39
カタカナ入力モード	4-2
カナ英数字変換	4-18
かな入力方式	4-2
壁紙	7-2
画面表示設定	
壁紙設定.....	7-2
マーク表示設定	7-3
マイキャラクタ	7-15
文字表示設定	7-12
カレンダー.....	7-5
簡易電卓	14-33
簡易留守録.....	14-6
解除する.....	14-7
設定する.....	14-6
用件を聞く	14-7
用件を消去する	14-8
呼出し時間（応答時間）変更.....	14-8
簡易ロック	13-5
漢字（ひらがな）入力モード	4-2、4-6
簡単アニメ	11-13
区点コード入力モード.....	4-2、4-12
国番号自動付加	2-7、14-4
国番号リスト	14-3
クローズ終話設定	1-27
圏外	17-9
言語選択（日本語／英語）.....	7-18
交換機用暗証番号	1-33
国際コード自動付加	14-3
国際電話	2-5
国際ローミング	2-2

声のメモを録音する.....	14-9
誤動作防止	13-11

さ

サービス呼出し時間.....	15-4
サイドキー設定	14-5
サイレント	8-3
サウンド再生音量.....	8-8
サブディスプレイ.....	1-14、7-6
三者通話サービス.....	15-8
相手を切り替えながら通話する	15-8
3人で同時に通話する	15-9
もう一人へ電話をかける	15-8
シークレットモード.....	13-10
時刻を合わせる	1-28、1-29
指定着信音	5-8
指定着信許可	13-6
指定着信拒否	13-6
自分の電話番号を表示する（自局電話番号）..	2-32
手動着信転送	14-5
受話音量調節	2-18
照明設定.....	7-17
スクリーンアニメ.....	7-12
スケジュール	14-15
ステップ.....	8-3
スピーカー受話.....	8-11
スピーカーホン	8-11
スピードダイヤル.....	5-20
スポットライト	14-20
西暦を合わせる	1-28
世界時計	1-29
赤外線通信	12-2
設定リセット	13-12
セット発信	14-4
操作音	8-8
音量調整	8-10
時間設定	8-10
パターン設定	8-8
操作用暗証番号	1-33
変更	13-2
即時表示.....	2-31

た

ダイヤル禁止	13-6
ダイヤル操作禁止	13-4
ダウンロード辞書	4-23、11-49
着信	2-10
着信応答保留	2-15
着信音	
音量調整	8-2
着信パターン設定	8-3
着信呼出時間	8-7
バイブパターン	8-6
バイブレータ	8-5
ランプ設定	8-6
着信音出力切替	8-12
着信履歴.....	2-14
通話時間.....	2-28
通話内容を録音	14-9
通話明細を表示する	2-31
通話料金.....	2-29
データフォルダ	11-2
新しくフォルダを作成する	11-50
ファイルを確認する	11-7
ファイルをコピーする	11-52
フォルダを移動する	11-51
フォルダやファイルを消去する ..	11-51
フォルダやファイル名の変更.....	11-50
テキストメモ	4-28
デジタルカメラモード	6-5、6-7
電子ブック	11-45
転送電話サービス	15-3
転送先に転送する	15-4
転送設定を確認する	15-4
転送を開始する	15-3
転送を停止する	15-4
電池レベル（電池残量表示）.....	1-19
電話を受ける	2-10
電話をかける（日本モード）.....	2-4
海外で電話をかける（海外モード）..	2-6
以前にかけた番号に（リダイヤル）..	2-8
かけてきた方に（着信履歴）.....	2-12
登 してある番号に（メモリダイヤル）..	5-16
電話を切る	2-5

登録	
オーナー情報	2-32
オリジナル着信音	8-12
オリジナル音色	8-28
スケジュール	14-15
着信履歴の電話番号	5-6
テキストメモ	4-28
メモリダイヤル	5-2
ユーザー辞書	4-21
リダイヤルの電話番号	5-6
時計	1-28
アラーム	14-10
時刻を合わせる	1-28
世界時計	1-29
時計表示設定	7-4

な

音色オクターブ設定	8-34
ノートパッドメモリ	2-20

は

バーコード	14-22
作成	14-28
読み取り	14-22
背景アニメ	7-14
背景パターン	7-14
バイブパターン	8-6
バイブレータ	8-5
発信規制サービス	15-9
着信規制を設定する	15-10
発信規制を設定する	15-10
発信規制サービスの設定を確認する	15-10
発信規制を解除する	15-10
発信規制用暗証番号	1-33
変更	15-10
パネル明るさ調整	7-17
パネルセーブ	14-31
パノラマ合成	11-37
ピクチャーコール／メール	5-11
日付を合わせる	1-28
ビデオカメラモード	6-15、6-17
ビデオプレイヤー	9-2
動画を再生する	9-3

動画を編集する	9-5
ファイルを管理する	9-23
ビデオリスト	9-23
ファンクションメニュー	1-31
フェイスアレンジ	11-29
不在時の着信お知らせ表示	2-25
ブッシュトーン	14-2
ボイスレコーダー	9-32
再生する	9-35
音する	9-32
ボードフォンライブ！アニメ	7-15
ポケベル入力方式	4-12

ま

マイキャラクタ	7-15
マイク付液晶オーディオリモコン	14-37
マイボイスメモ	14-9
待受画面	1-26
マナーモード	3-3
マネー積算メモ	14-34
ムービーモード	6-15、6-17
ムービングフォトフレーム	11-32
メールコール	5-10
メールフォルダ	5-12
メールに添付する	11-12
メニュー	1-30
メモリカード	10-2
メモリ確認	5-6
メモリダイヤル	5-2
画像の登	5-11
グループ着信音の設定	5-13
グループ名の変更	5-13
グループを指定して呼び出す	5-19
修正／変更	5-23
消去	5-24
使用を禁止する（メモリ使用禁止）	13-5
作る（登）	5-3
登 件数を確認する	5-6
検索方法を選ぶ	5-17
秘密のメモリダイヤルを作る	13-9
メモリ番号を入力して呼び出す	5-18
「ヨミ」の行を指定して呼び出す	5-18
「ヨミ」を入力して呼び出す	5-19

メモリ番号	5-5、5-18
文字の入力方法	4-6
文字表示設定	7-12
文字を修正する	4-24
文字を消去する	4-24、4-26
モバイルカメラ	6-2
明るさを調整する	6-26
画質を設定する	6-27、6-28
撮影サイズを設定する	6-26
撮影した画像を確認する	6-30
撮影する	6-7、6-17
サムネイル	6-6
シャッター音を設定する	6-25
シャッターを設定する	6-27
ズームを利用する	6-24
静止画のプリントを指定する（DPOF）	6-38
接写撮影する	6-24
セルフタイマーを利用する	6-20
デジタルカメラモード	6-5、6-7
動画の音声 音を設定する	6-28
動画の撮影時間を設定する	6-28
登 先を設定する	6-29
ビデオカメラモード	6-15、6-17
表示サイズを設定する	6-25
ファインダーを切り替える	6-22
フレームを付けて撮影する	6-11
V801SH を閉じて撮影する	6-23
ムービー写メール用の動画を撮影する	6-29
ムービーモード	6-15、6-17
メールに添付する	6-34
メモリ使用状況を確認する	6-33
モバイルカメラモード	6-5、6-7
モバイルライトを利用する	6-23
連写撮影する	6-12
モバイルカメラモード	6-5、6-7

や

ユーザー辞書	4-21
ユースフルメニュー	1-30

ら

リダイヤル	2-8
リピートアラーム	14-10
留守番電話サービス	15-5
V801SH から伝言を聞く	15-6
留守番電話サービスの設定を確認する	15-6
留守番電話サービスを開始する	15-5
留守番電話サービスを停止する	15-6
留守番電話センターに転送する	15-5
連写モード	6-12
連続表示	11-11

わ

割込通話サービス	15-7
相手を切り替える	15-7
割込通話の設定を確認する	15-7
割込通話を受ける	15-7
割込通話を解除する	15-7
割込通話を設定する	15-7
ワンコールサイレント	2-17
ワンタッチ変換	4-19



主な仕様

仕様変更などにより、図や内容が一部異なる場合があります。

■V801SH

質量	約126g（電池パック装着時）	
連続通話時間	約120分（日本モード） 約180分（海外モード）	
連続待受時間（折りたたみ時）	約200時間（日本モード） 約220時間（海外モード）	
充電時間	急速充電器	：約125分
	シガーライター充電器	：約125分
（V801SHの電源を切って充電した場合）		
サイズ（幅×高さ×奥行）	約50×102×26mm（アンテナ、突起部を含まず） （折りたたみ時）	
最大出力	0.25W（日本モード） 2.0W（海外モード）	

- 上記は、電池パック装着時の数値です。
- 連続通話時間とは、充電を満した新品の電池パックを装着し、電波が正常に受信できる静止状態から算出した平均的な計算値です。
連続待受時間とは、充電を満した新品の電池パックを装着し、V801SHを閉じた状態で通話や操作をせず、電波が正常に受信できる静止状態から算出した平均的な計算値です。電波の届きにくい場所（ビル内、車内、カバンの中など）や、圏外表示の状態での待受では、ご利用時間が約半分以下になることがあります。また、使用環境（充電状態、気温など）によっては、ご利用可能時間が変動することがあります。
- 電池の利用可能時間は、電波が安定した状態で算出した当社計算値です。電波の弱い場所での通話や圏外表示での待受は電池の消耗が多いため、ご利用時間が半分以下になることがあります。
- パネル照明およびキー照明が点灯している状態での利用（ボードフォンライブ！ご利用時など）が多いときは、連続通話時間および連続待受時間は短くなります。
- Vアプリを起動させた状態では、通話時間および待受時間が短くなる場合があります。
- 操作や設定状態によっては、通話時間および待受時間が短くなる場合があります。（P.1-17）
- 液晶ディスプレイは非常に精密度の高い技術で作られていますが、画素欠けや常時点灯する画素がありますので、あらかじめご了承ください。

■急速充電器

●本体

電源	AC100-240V、50/60Hz共用
消費電力	11VA
出力電圧／出力電流	DC5.2V／600mA
充電温度範囲	5℃～35℃
サイズ（幅×高さ×奥行）	約66×27×48mm（突起部、コード除く）
コードの長さ	約1.5m

●電源コード

電源	AC100V、50/60Hz共用
コードの長さ	約1.3m

■卓上ホルダー

入力電圧／入力電流	DC5.2V／600mA
出力電圧／出力電流	DC5.2V／600mA
充電温度範囲	5℃～35℃
サイズ（幅×高さ×奥行）	約62×34×124mm（突起部 除く）

■電池パック

電圧	3.7V
使用電池	リチウムイオン電池
容量	740mAh
外形サイズ（幅×高さ×奥行）	約38×5.9×37mm（突起部 除く）

■ステレオヘッドホン

質量	約14.6g
コードの長さ	約133cm