# SBT2017 User Manual

# **FRONT**

# LOGO

## 37" Wireless HD Sound Bar



**User Guide** 

## **Location of Controls**

### (Front of Speaker)

1. Auxiliary Input LED Indicator 2. Optical Input LED Indicator 3. Bluetooth LED Indicator

4. Infrared Receiver Panel

- (Side of Speaker)
- 5. [POWER] Button: (Quick Press) Power ON/OFF
- 6. [MODE] Button:
- (Quick Press) Change input mode
- 7. [ $\ll$ ] Button:

(Long Press) **Decrease** volume

- (Quick Press) Skip to **previous** track
- 8. [▶II] Button: Play/pause media playback
- 9. [≫] Button:
- (Quick Press) Skip to **next** track (Long Press) Increase volume
- 10. Optical Input Port
- 11. 3.5mm Auxiliary Input Jack 12. DC===14V Power Jack

### Setting Up the Speaker **Using the Speaker**

### In the Box

- SBT2017 Wireless Sound Bar • DC === 14V Power Adapter
- Remote Control
- 3.5mm Auxiliary Cable
- RCA 3.5mm Auxiliary Cable
- Mounting Screw (x2)
- User Manual

# **Powering the Sound Bar**

Attach the pin of the supplied power adapter to the DC==14V power jack on the sound bar. Plug the adapter into a wall outlet.

### **Mounting the Speaker**

the position of where the sound bar will catch the screws mode. on the wall with a pencil.

—25.1968 Inches —

- 2. Drill the mounting screws directly into the pencil-marked locations. Allow the screws to protrude approximately 0.3 inches from the wall so you can easily hook the sound bar onto them.
- 3. Place and slide the sound bar onto the mounting screws. The sound bar can switch between auxiliary, optical, Carefully make sure it is firm and stable.

# **Replacing the Remote Control Battery**

To replace or install the battery, push and slide the battery door out from the remote control. Replace the battery Playing Music



NOTE: When using for the first time, gently pull the • Press the [►II] button on the side of the sound bar or on protection tab extending out of the remote control's the remote control to play/pause media playback. battery door.

# Pairing the Speaker

- 1. Power the sound bar ON and quick press the [MODE]
- indicator will quickly flash BLUE.
- 2. Set your mobile device to search for Bluetooth devices.
- Bluetooth LED indicator will slowly flash BLUE.



### **Powering ON/OFF**

- Quick press the **[POWER]** button on the side of the sound bar to turn ON/OFF.
- 1. Measure a width of **25.1968** inches on the wall and mark Press the [4] button to put the sound bar in standby

### **Adjusting Volume**

- Long press the [ << ] and [ >> ] buttons on the side of the sound bar to adjust volume or use the [—] and [+] buttons on the remote control.
- Press the [☒] button on the remote control to mute/ unmute volume.

### **Changing Modes**

and Bluetooth inputs. Once the sound bar is paired and connected to a media-playing device, quick press the

- with a new CR2025 battery with the positive (+) polarity To enjoy music wirelessly on your sound bar, make sure that the sound bar is properly paired to your mobile device. If you are pairing the device for the first time, please consult the **Pairing the Speaker** section of this user manual.
  - To use the LINE or Optical Inputs, please see the **Using the Inputs** section of this user manual.

# **Playing/Pausing Music**

## **Skipping Tracks**

- button to switch to Bluetooth input. The Bluetooth LED
  - Quick press the [≪] button on the speaker or the [◄] button on the remote control to skip to the previous
- **XXXXXXX** from the list of found devices. 3. After a successful pairing, a tone will be heard and the



**Using the Remote Control** The remote control allows full control of music playback

• Quick press the [≫] button on the speaker or the [►►]

button on the remote control to skip to the next track.

- and volume adjustment.
- [也] Button: Enter/leave standby • [MODE] Button: Change input mode
- •[図] Button: Mute/unmute volume
- [◄] Button: Skip to previous track • [►II] Button: Play/pause music
- [►►►I] Button: Skip to next track
- [RESET] Button: Reset to factory settings •[—] / [+] Buttons: Adjust volume



**NOTE:** If the speaker is not responding to the remote's button presses, the batteries may need to be changed. See the Replacing the Remote Control Battery section, earlier in this user manual.

Please consult the **Replacing the Remote Control Battery** section of this user manual for further info on setting up the remote control.

**NOTE:** When using the remote control, for best results point directly at the infrared receiver panel on the front corner of the sound bar.


# **BACK**

## **Using the Inputs**

### 3.5mm Auxiliary Input

# To use the 3.5mm auxiliary input, insert the 3.5mm connector of either of the supplied audio cables (3.5mm auxiliary cable or the RCA - 3.5mm auxiliary cable) into Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide the 3.5mm auxiliary input jack on the side of the sound reasonable protection against harmful interference in a

Press the [MODE] button to switch to the auxiliary input. The auxiliary input LED indicator will turn **GREEN.** 

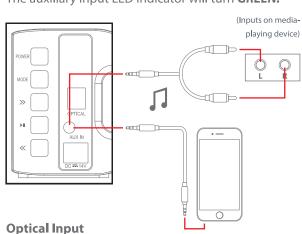

# cable (not included) into the Optical Input Port, then plug

# the other connector into the Optical Port on your media- This device complies with Part 15 of the FCC Rules. Operation playing device.

## **Legal Information**

### **READ CAREFULLY AND KEEP THIS MANUAL**

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and Insert the other connector(s) of the audio cable into the used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician

Caution: Any changes or modifications not expressly To use the optical input, plug one connector of an optical approved could void the user's authority to operate the

is subject to the following two conditions:

(1) This device may not cause harmful interference, and The optical input LED indicator will turn **RED** while in use. (2) this device must accept any interference received, including interference that may cause undersired operation.

> The device has been evaluated to meet general RF exposure requirement.

### Rain/Moisture Warning

• Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions. • Do not submerge in water. • Do not open this product or attempt to repair the unit yourself should it not be working.

### **Limited Warranty**

### **Warranty Service Not Provided**

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTIBILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.