

KB-8000X/K

Wireless Multimedia Keyboard Mouse Combo



Quick Guide

Copyright© 2016 KYE SYSTEMS CORP.



KYE Systems Corp.
4802, Sec. 5, Chongpin Rd., Sanching Dist.,
New Taipei City 24104, Taiwan
Tel: 886-2-2995-6643
Fax: 886-2-2995-6649
Email: kye@genius.com.tw
http://www.genius.com.tw

KYE Systems America Corp. (Latin)
1301 N.W. 87th Ave., Suite 122, Dade
Ft. 33126, USA
Tel: 1-305-468-9250
Tel: 1-305-468-9250 ext.330 (Tech. Support)
Email: support@genius-usa.com
http://www.geniususa.com

KYE International Corp. (USA & Canada)
12675 Colony Street, China, CA 91710, USA
Tel: 1-424-226-2877
Tel: 1-800-756-4115 (Toll Free Line)
Tel: 1-424-226-2879
http://www.geniusintusa.com
http://www.geniuscorp.com

 
KYE Systems Europe GmbH.
Karl-Brenn-Strasse 9, D-40704 Langenfeld, Germany
Tel: 49-2173-9141-0
Tel: 49-2173-9143-21 (Tech. Support)
Email: gen@genius-europe.com
http://www.genius-europe.com

Dongguan Genyong Computer Products Co., Ltd.
Baoan Industrial District, Houjie Town,
Dongguan City
Guangdong Province, 523961 China
Tel: 0769-85888878
Tel: 4008077723 (Tech. Support)
Fax: 0769-85999988
http://cn.genius.com




Figure

- 1 Remove the battery cover from the mouse.
Install one AA battery into the mouse.

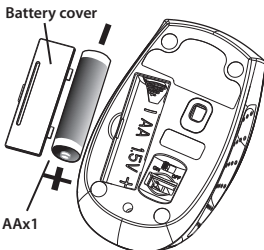


 - 2 Remove the battery cover from the keyboard.
Install two AAA batteries into the keyboard.

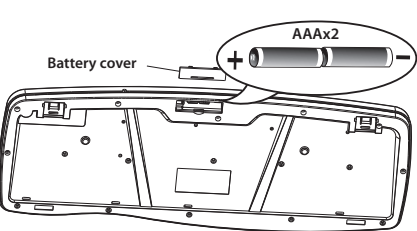


Replace Batteries
If the mouse or keyboard does not work properly, then the batteries have lost their charge, so you need to replace them. Warning: do not mix or use different types of batteries at the same time.

 - Notes on Battery Usage**
When you use the battery, carefully read and strictly observe the Safety Instructions and the notes described below:
- Different battery types and surrounding temperatures may affect the battery performance.
 - Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
 - If you are using a new rechargeable battery or rechargeable battery that has not been used for an extended period of time (batteries that pass the expiry date are exceptions) it might affect the period of time according to local regulations.
 - You can use this device. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.
 - The battery or wireless device may feel warm when using for an extended period of time. This is normal and not a malfunction.
 - If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
 - Always keep the terminals in a clean state.
 - Risk of explosion if battery is replaced by an incorrect type.
 - Dispose of used batteries according to local regulations.



 Connect both devices, wait 5-10 seconds and you are ready to begin

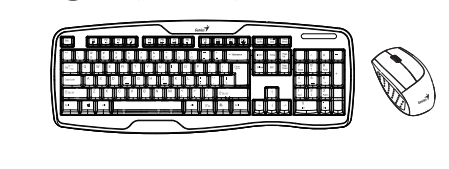

- Mouse Button Assignments**
1. **Left Button:** Provides traditional mouse functions like click, double click and drag.
 2. **Magic-Roller:** Scroll the button to surf the Internet and Windows documents.
 3. **Right Button:** Provides traditional mouse right click function

ENGLISH

Keyboard function key definition		
	FN + F1	Media Player
	FN + F2	Volume down
	FN + F3	Volume up
	FN + F4	Mute
	FN + F5	Previous track
	FN + F6	Next track
	FN + F7	Play / Pause
	FN + F8	Stop
	FN + F9	Internet Explore
	FN + F10	Email
	FN + F11	My Computer
	FN + F12	My Favorite

ROMÂNĂ

Definirea tastelor rapide ale tastaturii		
	FN + F1	Media Player
	FN + F2	Scădere volum
	FN + F3	Mărire volum
	FN + F4	Oprire sunet
	FN + F5	Precedenta piesă
	FN + F6	Melodia următoare
	FN + F7	Redare / Pauză
	FN + F8	Stop
	FN + F9	Explorare Internet
	FN + F10	E-mail
	FN + F11	Computerul meu
	FN + F12	Favoritele mele

БЪЛГАРСКИ

Описание на бързите клавиши на клавиатурата		
	FN + F1	Мултимедия плейър
	FN + F2	Намаляване на звука
	FN + F3	Усилване на звука
	FN + F4	Без звук
	FN + F5	Предишно парче
	FN + F6	Следващо парче
	FN + F7	Възпроизвеждане / пауза
	FN + F8	Stop (Стон)
	FN + F9	Internet Explore
	FN + F10	Имейл
	FN + F11	Моят компютър
	FN + F12	Предпочитани

TÜRKÇE

Klavye kısayol tuşlarının tanımı		
	FN + F1	Media Player
	FN + F2	Ses azaltma
	FN + F3	Ses artırma
	FN + F4	Sessizlik
	FN + F5	Bir önceki parça
	FN + F6	Bir sonraki parça
	FN + F7	Çal / Duraklat
	FN + F8	Durdur
	FN + F9	Internet Explorer
	FN + F10	E-posta
	FN + F11	Bilgisayarı
	FN + F12	My Favorite

УКРАЇНСЬКА

Визначення клавіш швидкого доступу клавіатури		
	FN + F1	Media Player (Медіа плейер)
	FN + F2	Зменшення гучності
	FN + F3	Збільшення гучності
	FN + F4	Без звуку
	FN + F5	Попередня композиція
	FN + F6	Наступна композиція
	FN + F7	Відтворення/Пауза
	FN + F8	Стоп
	FN + F9	Internet Explorer (Інтернет)
	FN + F10	Електронна пошта
	FN + F11	Мій Комп'ютер
	FN + F12	Улюблені

LATVISKI

Tastatūras ātro taustiņu funkcijas		
	FN + F1	Multivides atskaņotājs
	FN + F2	Klusāk
	FN + F3	Skaļāk
	FN + F4	Klusums
	FN + F5	Iepriekšējais ieraksts
	FN + F6	Nākamais ieraksts
	FN + F7	Atkāpot / pauze
	FN + F8	Pārtraukt
	FN + F9	Internet Explorer
	FN + F10	E-pasts
	FN + F11	Mans dators
	FN + F12	Mana izlase

РУССКИЙ

Горячие клавиши на клавиатуре		
	FN + F1	Media Player
	FN + F2	Понижение уровня звука
	FN + F3	Повышение уровня звука
	FN + F4	Отключение звука
	FN + F5	Предыдущий фрагмент
	FN + F6	Следующий фрагмент
	FN + F7	Воспроизведение и пауза
	FN + F8	Стоп
	FN + F9	Обзоратель Интернета
	FN + F10	Электронная почта
	FN + F11	Мой компьютер
	FN + F12	Избранное

DEUTSCH

Tastatur - Definition der Funktionstaste		
	FN + F1	Media Player
	FN + F2	Lautstärke verringern
	FN + F3	Lautstärke erhöhen
	FN + F4	Stumm
	FN + F5	Vorheriger Titel
	FN + F6	Nächster Titel
	FN + F7	Wiedergabe / Pause
	FN + F8	Stopp
	FN + F9	Internet Explorer
	FN + F10	E-Mail
	FN + F11	Arbeitsplatz
	FN + F12	Favoriten

FRANÇAIS

Définition des touches d'accès rapide du clavier		
	FN + F1	Lecteur multimédia
	FN + F2	Diminution du volume
	FN + F3	Augmentation du volume
	FN + F4	Mute
	FN + F5	Sourdisse
	FN + F6	Piste précédente
	FN + F7	Piste suivante
	FN + F8	Lecture / Pause
	FN + F8	Arrêt
	FN + F9	Internet Explorer
	FN + F10	E-Mail
	FN + F11	Poste de travail
	FN + F12	Mes favoris

ITALIANO

Definizione dei tasti funzione della Tastiera		
	FN + F1	Media Player
	FN + F2	Volume basso
	FN + F3	Bajar volumen
	FN + F4	Muto
	FN + F5	Traccia Precedente
	FN + F6	Prossima Traccia
	FN + F7	Riproduzione / Pausa
	FN + F8	Arresta
	FN + F9	Internet Explore
	FN + F10	Email
	FN + F11	My Computer
	FN + F12	Miei Preferiti

ESPAÑOL

Definición de teclas de acceso directo		
	FN + F1	Reproductor multimedia
	FN + F2	Bajar volumen
	FN + F3	Subir volumen
	FN + F4	Muto
	FN + F5	Función silencio
	FN + F6	Track anterior
	FN + F7	Siguiente pista
	FN + F7	Reproducir/Pausar
	FN + F8	Detener
	FN + F9	Internet Explorer
	FN + F10	Correo electrónico
	FN + F11	Mi PC
	FN + F12	Mis favoritos

PORTUGUÊS/BRASIL

Definição das teclas de atalho do teclado		
	FN + F1	Media Player
	FN + F2	Baixar Volume
	FN + F3	Aumentar Volume
	FN + F4	S/ som
	FN + F5	Faixa anterior
	FN + F6	Faixa seguinte
	FN + F7	Play / Pausa
	FN + F8	Parar
	FN + F9	Internet Explorer
	FN + F10	E-mail
	FN + F11	Meu Computador
	FN + F12	Meus favoritos

LIETUVIŠKAI

Klaviatūros karštųjų klavišų aprašymas		
	FN + F1	Medijos leistuvai
	FN + F2	Tylinti
	FN + F3	Garsinti
	FN + F4	Nutildyti
	FN + F5	Pirmosnis takelis
	FN + F6	Kitas takelis
	FN + F7	Atleisti / pauzė
	FN + F8	Stabdyti
	FN + F9	„Internet Explorer“
	FN + F10	El. paštas
	FN + F11	Mano kompiuteris
	FN + F12	Mano parankiniai

ҚАЗАҚША

Пернетақтадағы жылдам қатынасу пернелерінің анықтамасы		
	FN + F1	Мультимедия ойнатқышы
	FN + F2	Дыбысты азайту
	FN + F3	Дыбысты көбейту
	FN + F4	Дыбыссыз күй
	FN + F5	Алдыңғы трек
	FN + F6	Келесі трек
	FN + F7	Ойнату / Кідірту
	FN + F8	Тоқтату
	FN + F9	Internet Explore желісін ашатын
	FN + F10	Электрондық пошта
	FN + F11	Менің компьютерім
	FN + F12	Таңдаулы

يەرلىك

تعريف المفاتيح المباشرة على لوحة المفاتيح		
	FN + F1	Media Player
	FN + F2	خفض مستوى الصوت
	FN + F3	زيادة شدة الصوت
	FN + F4	كتم الصوت
	FN + F5	المسار السابق
	FN + F6	المسار التالي
	FN + F7	تشغيل/توقف مؤقت
	FN + F8	إيقاف
	FN + F9	متصفح الإنترنت
	FN + F10	بريد الكتروني
	FN + F11	جهاز الكمبيوتر
	FN + F12	المفضلات المختارة

繁體中文

鍵盤快捷鍵定義		
	FN + F1	開啟 Media Player
	FN + F2	降低音量
	FN + F3	調高音量
	FN + F4	靜音
	FN + F5	前一首
	FN + F6	下一首
	FN + F7	開啟 / 暫停
	FN + F8	停止
	FN + F9	開啟 Internet Explore
	FN + F10	開啟信箱
	FN + F11	我的電腦
	FN + F12	我的最愛

简体中文

键盘快捷键定义		
	FN + F1	开启 Media Player
	FN + F2	降低音量
	FN + F3	调高音量
	FN + F4	静音
	FN + F5	前一首
	FN + F6	下一首
	FN + F7	开启 / 暂停
	FN + F8	停止
	FN + F9	开启 Internet Explore
	FN + F10	开启信箱
	FN + F11	我的计算机
	FN + F12	我的最爱

2

3

4

5

6

7

20

21

22

23

24

25

ČESKY

Definice klávesových zkratk

	FN + F1	Media Player
	FN + F2	Zeslabení hlasitosti
	FN + F3	Zesílení hlasitosti
	FN + F4	Tlumení
	FN + F5	Předchásl skladba
	FN + F6	Následující skladba
	FN + F7	Přehrávat/Pauza
	FN + F8	Stop
	FN + F9	Internet Explorer
	FN + F10	Email
	FN + F11	Můj počítač
	FN + F12	Me oblíbené

MAGYAR

A billentyűzet gyorsgombjainak leírása

	FN + F1	Médialejátszó
	FN + F2	Hangerő csökkentése
	FN + F3	Hangerő növelése
	FN + F4	Némítás
	FN + F5	Előző szám
	FN + F6	Következő szám
	FN + F7	Előjátszás/Zenésítés
	FN + F8	Leállítás
	FN + F9	Internet Explorer
	FN + F10	E-mail
	FN + F11	Sajátgép
	FN + F12	Kedvencek

S