



4.为避免触电,请在安装或卸载产品时,确保手上没有沾水。

5 请勿将此产品放置干热源附近或直接暴露在火源附近。 6.请勿将本产品放置在有强大电磁力的环境中,否则会导致产品故障。



方法1.开机状态无连接3分钟后自动关机。方法2.耳机放入充电盒,关闭充电盒盖子

步骤二:左右耳机出现不配对时,请恢复出厂设置,放回充电仓再打开自动配对

主耳蓝灯快闪,副耳熄灭

后自动关机充电。(语音提示音: "power off")

▼ 単入设备配对状态:


步骤二: 打开智能设备的蓝牙列表, 搜索"TF-T10"并连接

步骤一· 开机后自动进入蓝牙配对

(语音提示音: "connected")

③蓝牙配对:



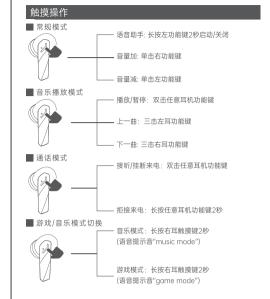



保修声明 本使用手册没有任何形式的担保、立场表达或其他暗示,本使用手册所提到的产品、规格 及信息仅供参考 内容亦会随时更新干网币 恕不呆行通知

就本文件附随的产品做如下保证:如产品在您购买日起十二(12)个月("保修期")内,在 正常使用情况下因质量瑕疵发生损坏,能修理的,免费修理,经厂家确认无法修理的,免费 费更换;修理或更换后的产品,在剩余保修期(最短不少于30天)内继续享有保修。购 买日以销售发票日期为准;如无法确定购买日,则保修期自产品生产日期起按十三(13

1751年。 如申请保修,请先致电产品服务热线,并按我们指示的方式执行。申请保修时,您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况:

1.超过三包有效期的; 2.涂改保修卡、产品编码与产品本体不符; 3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏; 4.因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;

5 拉链 塔扣因受力过大而损坏 6.因承载过重造成的脱线或撕裂 7 任何因尖锐物体造成的损坏

8.有烧损或水浸迹象的产品;

D.产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗。 11.如产品原有标识标签被更改或损毁,本保证将失效。 产品及随附物料的齐备和外观完好不属于保证范围、您应在接收产品时当场检验并对任何

以上保证是我们就产品做出的全部保证,且仅在中国大陆地区境内适用。本文件的任何内 容均不影响根据法律规定不能排除或限制的消费者权利。 服务监督执线·400-885-8808

TRANSFORMERS

visclaimer

 
This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are faceference only, and the content will also be updated on the web at any time without additional separate notice

The completeness and appearance of the product and accompanying materia are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

Service supervision hotline: 400-885-8808

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

藝敬的用户 太保修卡是您将来由请保修的凭证 请您配合销售商值写并妥善保管备用 电子邮件 联系电话 邮政编码 通讯地址 产品名称 产品型号 产品条码/编号/批号










Production Time:


TRANSFORMERS

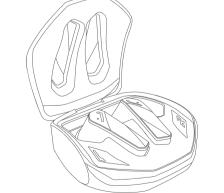

TF-T10 True wireless BT headset Instruction manual

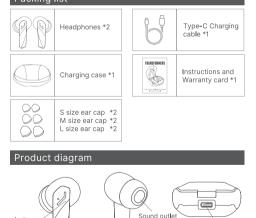

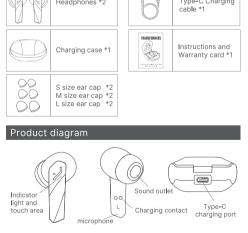

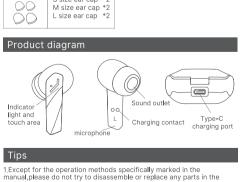

earbuds. 2.Don't put the earbuds in the water or any others liquid.The earbuds are not waterproof.

3.If any liquid enters the product by accidentally,please disconnect and 4. Please make sure that there is no water on your hands when Installing

r uninstalling the product to avoid electricshock 5.Do not put the product near by the heat source or expose it to the fire 6. Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

leadset specifications

BT version: V5.4 Transmission distance: >10m Speaker unit: Φ10mm Horn impedance: 32±15%O Frequency response range: 20Hz~20kHz Sensitivity: -38±3dB Standby time: \$20hours Running time: ≈5hours Battery capacity: 40mAh Charging time: ≈1.5 hours Rated input: 5V === 40mA

Charging bay specification

Charging time: ≈ 2hours Battery capacity: 320mAh Rated input: 5V === 300mA

Method 1. Open the top cover of the charging case, and the headset will turn n automatically. Method 2. Hold down the left/right multi-function button or 3 seconds, and keep the white indicator on for 1 second. oice prompt tone: "Power on")

Method 1. Put back the charging case, close the upper cover, the earphone automatically shuts down and charges, and the red light is steady on.

Method 2. If the device is not connected, the device automatically shuts down after 3 minutes. The red light is on for 1 second and then the device is

(语音提示音: "power off")

 Open the charging compartment, and the left and right earphones automatically enter the BT pairing mode, waiting for connection. (Audio notification tone: "pairing")

蓝牙开机未连接状态。5击完成清除与设备配对信息并自动关机。蓝灯亮1秒后熄灭

2. Turn on BT on the mobile phone, search the device name "TF-T21", and click to enter the connection. (Voice prompt tone: "connected")



LED indicator status	
Power on	The headphone indicator turns blue for 1 second
Power Off	The blue light stays on for 1 second and then goes off
Connecting device	Headphone light off
disconnect	The blue light on the primary earphone blinks quickly, and the secondary earphone is off
Earphone low battery warning	The blue light of the headset blinks quickly
Earphone charging	The blue light keeps on
Charging chamber charging	The indicator is blinking red
Charging bin discharging	Blue light stays on for 4 seconds and goes off
Charging bay low power	The blue light flashes four times
Delete match	Keep the red light on for 1 second
Game mode	The blue light flashes once every 15 seconds

General mode function key for 2 seconds to start/stop · Volume Increase: Click the right function key Play/Pause: Double click any headset touch hutton - Previous: Three hits left ear function key Next: Three clicks right ear function key Call mode Answer/hang up a call: Double click any headset touch button Reject incoming calls: Hold down any earphone touch button for 2 seconds button on your right ear for 2 seconds. (Prompt tone:"music mode") Game mode: Long press the right ear touch button for 2 seconds. (Prompt tone:"game mode")

store factory settings If the Bluetooth is not connected when the device is turned on, 5 clicks are completed to clear the pairing information with the device and automatically shut down. The blue light will turn off after 1 second (voice prompt tone: "power off").

Pb Hg Cd Cr(VI) PBB PBDE Cladicates that the content of the hazardous substance in all mogeneous materials of the part is in below the limit required by X:Indicates that the hazardous substance at least in a certain nomogeneous material of the part exceeds The limit requirements specified in GB/T 26572 he parts marked with "X" on the form are all harmful due to the mitations of global technological development. Substitution of substan Including printed circuit boards and their parts electronic components. tc.and depending on the product model, the earbuds you purchased Electronic and electrical products sold in the 'eople' s Republic of China must mark this LOGO,the umber in the logo represents the product under normal

Warranty statement: The product attached to this document is guaranteed as follows if the product is twelve (12) months from the date of purchase ("Warranty Period") under normal conditions of use due to quality defects damaged, can be repaired. Free repair, free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days.) Purchased by sale the ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 (13) months. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice. to provide an accurate, complete and clearly Illied out valid sales invoice. The above guarantee does not apply to the following situations: 1.Exceeding the validity period of the three packs; 2.Altering the warranty card and product code does not match the product body; 3.Causes caused by misuse, abuse or improper transportation, use, maintenance or storage obstacles or damage; 4.Except or active to does does not make the control of the complete of the control of t

虚线做

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.