
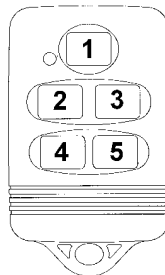


V1.0

Extra Transmitter User Manual

#25561 & #28871

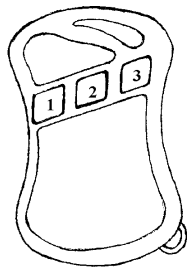

Coding your new transmitter to your product (Models 20630)

1. Power down the unit by pulling out the 15 amp blue fuse for a few seconds, then replace it. You will hear a quick confirmation chirp. You now need to program the unit to recognize all of the transmitters you will be using.
2. Press and hold the middle button on the first transmitter until you hear a chirp from the siren. To teach multiple transmitters (up to 4), repeat this process within five seconds with each additional transmitter. Only one button needs to be pushed per transmitter.

HELP LINE:

For any assistance regarding this product you may call DesignTech on our toll-free telephone number — (800) 337-4468.

Additional transmitters can be purchased directly through your local dealer or DesignTech at the address below. See front cover for part numbers.

Three button transmitters - 25561

\$49.95

Five button transmitters - 28871

\$54.95

All prices include shipping and handling.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: ELGTX3B & ELGTX4B

CANADA _____

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



7955 Cameron Brown Court
Springfield, VA 22153, USA

NOTE: These transmitters will not operate other manufacturers alarms or keyless entry systems.