




Do not charge your speaker for extended periods. It has voice prompt when the battery is low.

EN 04

4. Battery Power Level

Long press+and-button for 2 seconds at the same time to check current battery power level, the corresponding voice prompt will be

 
LED Ring Indicator	Status	
Steady red	Low battery	
iteady orange	Medium level battery	
Steady white	High level battery	



EN 05

Upon detecting that a device is connected via AUX port, the speaker will enter AUX Mode. When the connection is successfu a voice prompt will be heard.

 6. Connected via Memory Card ____



the speaker will enter Memory Card mode. When the connection is successful, a voice prompt will be heard. O Double press to enter Memory Card mode under the Bluetooth

mode if no AUX connection.

7. Connected via FM

Double press 4 to enter FM mode under the Memory Card mode, or double press 4 to enter FM mode under the Bluetooth mode without Memory Card connection. When the connection is successful, a voice prompt will be heard.





The speaker will enter Memory Card mode or Aux-in mode only they are detected to be connected. The sequence of speaker playing mode is Bluetooth mode, Memory Card mode. FM mode and Aux-in mode if the Memory Card and Aux-in input are both detected.

CONTROLS



TROUBLE SHOOTING

	cong prosonor r socono	140AL GOOK	_	Sympto
<u>6</u>				Battery does no
	Short press once	Search radio station		charge
	Short press once	Volume down		Speaker does not
	Long press for 1 second	Previous station	revious station pair with mobile device	
	Short press once	Volume up		No sound
	Long press for 1 second	Next station		

Volume up

Short press once	Mute/Umute
 Short press once 	Volume down
+ Short press once	Volume up

	+	Short press once	Volume up		
	Others				
٥		Double short press	Swich mode among BT/ Mmory Card/FM/Aux-in mode		
	٥ -	Long press the two button at the same time for 2 seconds	Disconnect and re-enter paining mode		

ATTENTION

 To preserve battery lifespan, fully charge at least once every 45 days. Use original or certified cables.

Do not expose to chemical liquids.

 Do not disassemble. Avoid dropping.

No sound Power on the device and play music.

Increase the volume on the device.
 Check device audio settings.

Poor sound • Increase the volume on your speaker and device.

quality from * Connect a different device.

a cabled
• Check device audio settings.

Avoid extreme temperatures.

tom Solution Make sure you are using the oraimo's original USB cable. Connect the USB cable to a different USB power supply. *Connect to a different AC (mains) power source.

On your mobile device, turn the BT feature off and then on. Remove your speaker from the BT history on your device. Pair your device again. nd On your mobile device, turn the BT feature off and then on. Remove your speaker from the BT history on your device. Pair your device again. *Increase the volume on your speaker, your device and music source.

from a cabled Connect a different device. device device. Poor sound • Use a different music source. quality Pair with a different device.

CONSIDERATE HINTS

1. Do not turn up the volume to a fair high level constantly as this could shorten the service life of this product or impair your hearing.

2. When encounter any fault during operation, please cut off the power supply and disconnect the Type-C cable to

prevent further damage to the product or other components. 3. The wireless transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.

CUSTOMER SERVICE



EN 09

EN 10

res that this Portable Wireless Speaker is in compliance with the essential

ereby, ORAIMO TECHNOLOGY LIMITED.

Model name: OBS-40S IMPORTANT NOTE:

Portable Wireless Speaker Model: OBS-40S

ETSI EN 301 489-1 V2.2.3 (2019-11) Article 3.1(b) ETSI EN 301 489-17 V3.2.4 (2020-09); Safety Article 3.1(a) EN JEC 62368-1:2020+A11:2020

Reorient or relocate the receiving antenna.

—Consult the dealer or an experienced radio/TV technician for help. FCC Radiation Exposure Statement:

CAUTION

1.Risk of explosion if battery is replaced by an incorrect type, dispose of used

a battery, that can result in an explosion;

—leaving a battery in an extremely high temperature

3.EUT Temperature: : -10 C ~+50 C

In accordance with EU Directives and Regulations Company name: ORAIMO TECHNOLOGY LIMITED

ADDRESS: FLAT N 16/F BLOCK B UNIVERSAL INDUSTRIAL CENTRE 19-25 SHAN MEI STREET FOTAN NT HONGKONG

FU DECLARATION OF CONFORMITY

as the manufacturer here by declares under our sole responsibility that the, Product(s): Portable Wireless Speaker

ETSI EN 300 328 V2.2.2 (2019-07)

Signed on behalf of ORAIMO TECHNOLOGY LIMITED

- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting or

can result in an explosion or the leakage of flammable liquid or gas;

Modulation mode:

in conformity with the essential requirements of the RE Directive 2014/53/EU:

Article 3.2

Health Article 3.1(a) EN 50663:2017, EN 62479:2010

ayong.wu ate: 2022-06-21

a battery subjected to extremely low air pressure that may result in an explosion of the leakage of flammable liquid or gas.
 2.The product shall only be connected to a USB interface of version USB2.0

Operating Frequency:

GFSK, x/4-DQPSK, 8DPSK

Name :

Address:

Tel. No. :

Warranty period :

purchase.

WARRANTY CERTIFICATE

Date of purchase :

(dd/mm/yy)

Store name :

WARRANTY TERMS & CONDITIONS

* All quality-related defects on items sold directly by oraimo or oraimo's authorized resellers are covered by an extensive warranty, starting from the date of purchase.

* oraimo's limited warranty is restricted to the country of purchase. The limited warranty is void on items taken outside the country they were originally bought in or shipped to directly from an authorized online

* This warranty covers only original oraimo products. It is not applicable to normal wear and tear, or any defects arising from damage caused by misuse of this product.

* Warranty is for the primary product only nor transferable. Any free additional product(s) are not covered in this warranty.

* If the product fails regardless of usage in compliance with the instruction manual and other written precaution, replacement will be provided free of charge.

* To claim the warranty, contact the services team from the platform or store where you bought from.









oraimo