


WIRELESS-FLOW-SENSOR

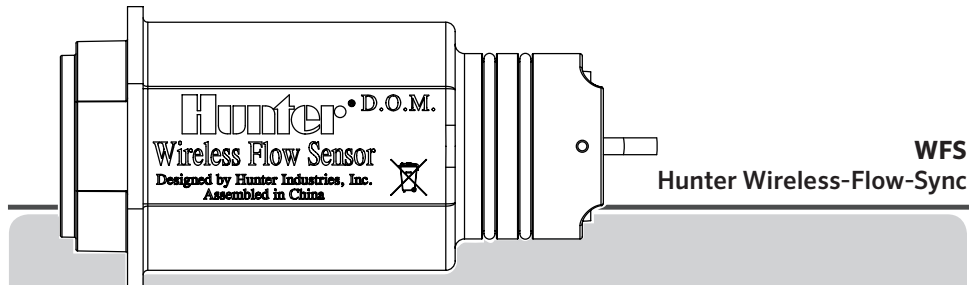

Owner's Manual and Installation Guide

Wireless Flow Sensor for Use with Compatible Hunter Controllers

Hunter®

TABLE OF CONTENTS

INTRODUCTION.....	3
WFS COMPONENTS	4
SYSTEM OVERVIEW AND WFS OPERATION	6
INSTALLING THE WFS SENSOR & FCT TEE	8
INSTALLING THE WFS SENSOR INTO THE FCT FITTING	12
CONNECTING THE WFS TO THE IRRIGATION SYSTEM	14
SYSTEM CONSIDERATIONS	17
TROUBLESHOOTING GUIDE	20
SPECIFICATIONS AND CALIBRATION	23

INTRODUCTION

The Hunter WFS allows flow-capable controllers, such as the Hunter ACC and I-Core, to monitor actual flow in irrigation systems.


With proper setup at the controller, this allows the controller to record and report actual flow in liters or gallons. Flow learning controllers can also use WFS to learn typical flow for each zone of irrigation, and monitor during watering for high and low flow conditions.

WFS equips controllers to respond on their own to incorrect system performance, preventing damage to landscape and wasted water resources.

WFS COMPONENTS


This section will give you a brief overview of some of the components of the Wireless-Flow-Sync system.

1. **Impeller:** Rotates when flow is occurring
2. **O-rings:** Provides sealing of sensor in sensor body
3. **Wire:** Black wire connects to the sensor transmitter

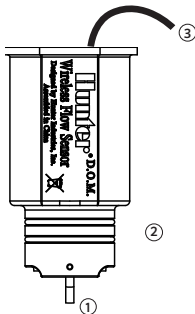

WFS TEE ASSEMBLY

1. **Flow-Sync Tee:** The Tee is installed into the irrigation system and houses the WFS
2. **O-rings:** Provides sealing of plug in sensor body
3. **Plug:** (replace with WFS at Installation)
4. **Cap:** To seal plug to Flow-Sync-Tee

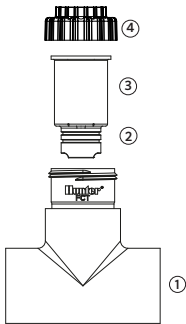

SYSTEM OVERVIEW AND WFS OPERATION

The WFS is typically installed near the point of connection, in an appropriately-sized FCT Tee.

The WFS transmitter can connect to a host controller up to 500ft/152M away.





WFS sensors operate with an impeller positioned in the flow through the pipes.

As the impeller turns, pulses are generated to the controller, which converts them to gallons or liters, depending on the Units of Measurement selection in the controller.

WFS Sensor is a reporting device, and does not respond to flow situations on its own. WFS is

almost always installed in conjunction with a Master Valve, which can stop flow in a damaged pipe when high flow conditions are detected.

WFS I-CORE® WIRING

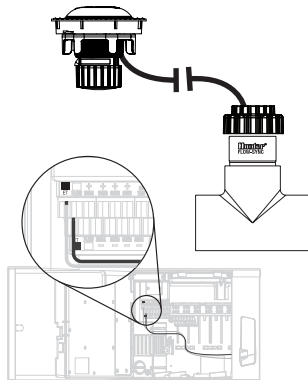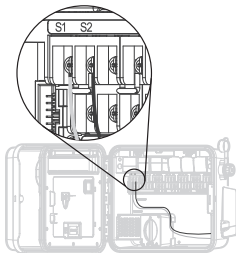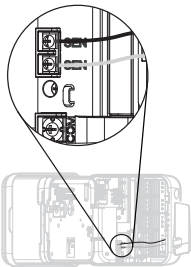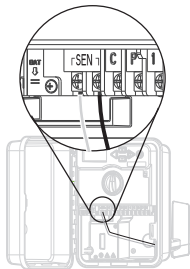

INSTALLING THE WFS SENSOR AND FCT TEE

The WFS Sensor is designed to install within an FCT tee fitting, sized for the pipe in which it will be installed.

For international applications, optional slip-BSP adapters are available separately for sizes up to 75 mm.

HFS FCT Tee Fitting Models (All tees are glue/slip type fittings)			
Model	Material	Diameter (US)	Diameter (mm)
FCT 100	Schedule 40 (white)	1"	25 mm
FCT 150	Schedule 40 (white)	1.5"	37 mm
FCT 158	Schedule 80 (gray)	1.5"	37 mm
FCT 200	Schedule 40 (white)	2"	50 mm
FCT 208	Schedule 80 (gray)	2"	50 mm
FCT 300	Schedule 40 (white)	3"	75 mm
FCT 308	Schedule 80 (gray)	3"	75 mm
FCT 400	Schedule 40 (white)	4"	100 mm

BSP Adapters	
Diameter (mm)	Model
25 mm	795700
37 mm	795800
50 mm	241400
75 mm	477800

INSTALLATION

Install the FCT tee fitting first, then install the WFS Sensor into the fitting.

Observe the following general rules when choosing the sensor location and preparing to install:

- Flush system with plug in place before installing the WFS sensor, to prevent damage to the impeller.
- Always install WFS together with a Master Valve, to provide overflow protection.
- Install the WFS and Master Valve as near the point of connection to the water supply as possible.
- WFS requires a section of straight pipe on either side of the tee fitting to provide accurate measurement of flow. Tees, ells, and other fittings cause turbulence which affects accuracy.
- There must be a length of straight pipe at least 10 times the diameter of the pipe upstream from the WFS (toward the water supply).
- There must be a length of straight pipe at least 5 times the diameter of the pipe in the downstream direction (toward the sprinklers).

-
- Example: FCT-200 is installed in a 2"/50 mm diameter pipe. The tee should have 20"/50 cm of straight pipe upstream, and 10"/25 cm straight pipe downstream.
 - Install the WFS and FCT assembly in a sturdy irrigation valve box.
 - WFS has an impeller which will turn in the flow of water. If the water source is not a public water supply, add a filter upstream from the Master Valve and WFS to protect the impeller from rocks or stones, which may damage the impeller.


The FCT tee fitting is designed for glue ("slip") connection. Use approved PVC solvent-welding glue to install either threaded fittings, or directly into the irrigation pipe if desired.

Metric thread adapters are available and are listed in this manual on page 8.



Avoid excess glue when attaching fittings. Uncured blobs of excess glue on the fitting's interior can interfere with paddlewheel operation.

EXAMPLE OF INSTALL

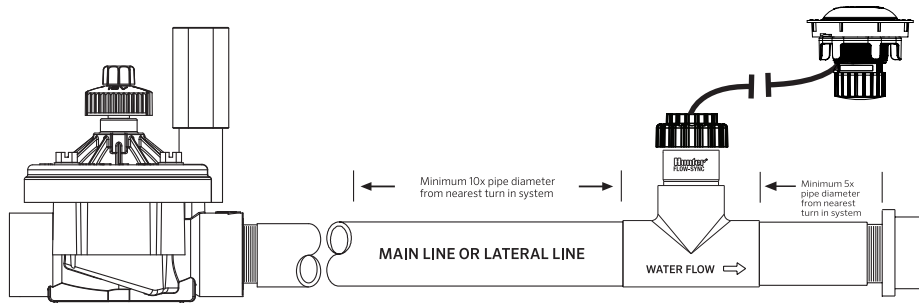

***NOTE:** Not to scale.

INSTALLING THE WFS SENSOR INTO THE FCT FITTING

The FCT tee fitting comes with a plug that allows for installation of the FCT into the irrigation system prior to installing the Sensor. This allows the FCT tee to be installed separately from the sensor and prevents damage to the sensor during installation of the body.



NOTE: Do not attempt to remove the sensor plug or sensor while the system is under pressure

To install the sensor into the body:

1. Turn the system pressure off.
2. Unscrew the cap from the top of the FCT (figure 1).
3. Use pliers or a screwdriver and carefully pry the plug from the FCT tee.
4. Insert the sensor into the FCT. The sensor has a flat side that engages with a flat on the inside of the sensor body (figure 2).

INSTALLING THE WFS SENSOR INTO THE FCT FITTING

5. Hand tighten the WFS sensor cap. (figure 3).



NOTE: Never glue the HFS sensor into the fitting! The threaded cap is designed to seal under pressure

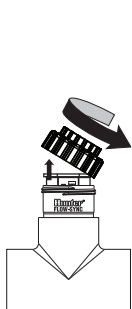


Figure 1

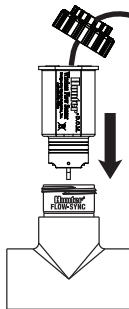


Figure 2



Figure 3

CONNECTING THE WFS TO THE IRRIGATION SYSTEM


WARNING! WFS is only designed for low-voltage connection to approved irrigation controller flow terminals. Do not install in high-voltage 110V or 230V circuits.

WFS has one wire lead which leads to the transmitter. The transmitter may be placed up to 500ft/152m from the controller.

Connecting the Receiver


Pro-C

Wire the leads from the receiver to the SEN terminals.

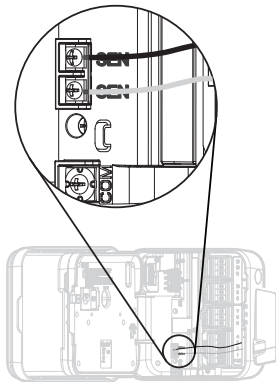


ACC & I-CORE[®] INSTALLATION

ACC Controller

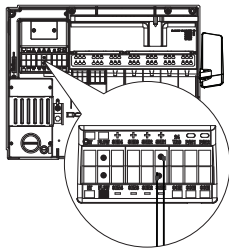

I-Core Controller

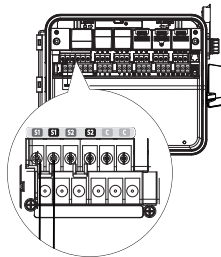

Proper irrigation system design and operation assures optimum performance of the WFS in monitoring for potential high flow conditions. WFS is primarily designed to shut off the irrigation system in the event of a catastrophic system failure such as a main line or lateral line break. However, depending upon the design of the

irrigation system, the WFS can offer increased protection when components such as sprays or rotors are damaged or removed due to vandalism. The following may be helpful in making your WFS operate at its optimum level.

SYSTEM CONSIDERATIONS

Working With WFS

Hunter flow-capable controllers are designed to measure and record actual flow, shut off irrigation when a high flow condition occurs, and identify which stations caused the condition.

The controller's Learn mode samples each station individually, and learns a typical flow for each station in the system. During actual irrigation, the flow can be observed at the controller. Actual flows are recorded and stored in the controller facepack. The ACC or I-Core controller will also compare actual flows to the estimated total of all

active stations, to see if there is an unacceptable difference, indicating a leak or break.

Consult the controller documentation closely for setup and operation of flow monitoring. It is vital to set the correct pipe size, so that the controller interprets the flow data correctly. It is also important to set adequate overage amounts (minimum is 15% over normal) and delays (default is one minute) to prevent false alarms.

Mainline Pressure Fluctuation

Some water sources may have varying pressure depending upon the demand for water upstream of the point of connection. During times of heavy demand, system pressure through the mainline may drop.

This is why the flow limit percentage and delay periods (set in the controller) are important, as false alarms lead to a lack of confidence in the system.

Additionally, excess air in irrigation piping causes the WFS impeller to spin freely during station startup, which may cause temporarily high readings. This problem may be reduced by installing check valves in the system, and by setting the alarm delay values to prevent premature alarms.

Proper System Maintenance and Operation

It is important that your irrigation system be maintained and is functioning properly for optimum performance. Check your irrigation system for any broken components or leaks also, making sure that all sprinklers are operating within the pressure ranges recommended by the manufacturer.

Hunter controllers equipped with flow terminals will have approximately 20 VDC present on the flow sensor terminals, with no flow input.

When flow begins, the voltage will pulse. On a standard voltmeter, the voltage will appear to drop, or pulsate. On voltmeters equipped with a frequency counter, the pulse frequency can be measured in Hz.

TROUBLE-SHOOTING GUIDE

Problem	Cause	Solution
WFS not reading	Water shut off	Verify that no isolation valves are closed, and that the water source is on.
	Controller not configured	Check controller flow sensor setup. Enter sensor size (and location, for sensor decoders) and other sensor information as required.
	Damaged sensor- Impeller damage (debris in water) or WFS electronics damage (lightning)	Replace sensor.

TROUBLESHOOTING

Problem	Cause	Solution
WFS not reading correctly	Controller configured incorrectly	Set correct flow sensor size and type at controller.
	Turbulent flow at sensor	Insure that straight pipe is on either side of flow meter.
Frequent false alarms	Station settings too sensitive	Increase overflow percentage (and underflow if available).
	Wide range of flows for a single station	Increase overflow and underflow percentages, and delay interval.

SPECIFICATIONS

Operating Specifications		
Temperature	Pressures	Humidity
0 to 140°F/60°C	up to 200 psi/13.7 bar	up to 100%

Flow Range		
Flow-Sync Sensor Diameter	Operating Range (Gpm)	
	Minimum*	Suggested Maximum**
1"	2	17
1½"	5	35
2"	10	55
3"	28	120
4"	34	195

* Minimum recommended flow for the highest flow zone for your system

** Good design practice dictates the maximum flow not to exceed 5ft/sec. Suggested maximum flow is based upon Class 200 IPS plastic pipe

FCT TEE FITTING SPECS.

Maximum Distance Between WFS Transmitter and Receiver 500ft/152m

Dimensions					
FCT Tee Fitting	Height	Width	Length	Straight Pipe upstream (Ø x 10)	Straight Pipe downstream (Ø x 5)
FCT 100	4.8"/12 cm	2.3"/6 cm	4.5"/11 cm	10"/25 cm	5"/13 cm
FCT 150	5.4"/14 cm	2.3"/6 cm	4.6"/12 cm	15"/38 cm	8"/20 cm
FCT 158	5.4"/14 cm	2.3"/6 cm	5.1"/13 cm		
FCT 200	6"/15 cm	2.7"/7 cm	4.7"/14 cm	20"/50 cm	10"/25 cm
FCT 208	6"/15 cm	2.7"/7 cm	5.4"/14 cm		
FCT 300	7"/18 cm	4"/10 cm	6.2"/16 cm	30"/76 cm	15"/38 cm
FCT 308	7"/18 cm	4.2"/11 cm	6.4"/16 cm		
FCT 400	8"/20 cm	5"/13 cm	6.2"/16 cm	40"/1 m	20"/50 cm

WFS Calibration Factors

Hunter controllers allow selection of the correct pipe size by FCT model number. No further calibration is needed.

If “Other” is selected, K-factor and Offset information may be entered directly. Following are K-factor and Offset values for best results with each available FCT model.

Flow Sensor Values		
Hunter Flow Sensor	K-Factor	Offset
HFSFCT100	0.44	0.39
HFSFCT150	1.13	0.00
HFSFCT158	0.92	1.22
HFSFCT200	2.13	0.23
HFSFCT208	1.72	1.70
HFSFCT300	4.61	0.18
HFSFCT308	5.87	1.07
HFSFCT400	8.77	0.48

RATINGS

WFS-R

For connection to Hunter controllers only
24 V~ 50/60 Hz 10 mA 0.02W

IP 43
Ta 50 C

WFS-T

Batteries: 3 x 1.5 V AA or Hunter lithium pack WFSLITHBATT

IP 67
Ta 50 C

FCC Notice:

This device complies with part 15 of the FCC Rules. (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device..

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user is cautioned that changes and modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

Industry Canada Notice:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Hunter®

RESIDENTIAL & COMMERCIAL | *Built on Innovation®*
1940 Diamond Street | San Marcos, California 92078 USA
Learn more. Visit hunterindustries.com

© 2016 Hunter Industries Incorporated
LIT-699-OM-WFS-US A 6/16