

My Speaker





FCC ID:2AAUSF013

F013 WATERPROOF
WIRELESS SPEAKER
MP3 PLAYER & SPEAKERPHONE

Quick Start Guide & User Manual

versions:3.0

KEY FUNCTION

-  1. Hold the power button for 3 seconds to switch speaker on and off.
- 2. Short press to switch multiple color LED light in turn.
 - Breathing light:Gradually change from one color to the others.
 - Dedicate only one light color.
 - No light.
-  Long press to play the previous song.
Short press to turn down the volume.
-  Long press to play the next song.
Short press to turn up the volume.
-  1. Press to play or pause the music.Press to answer or end the phone call.
2. Press and hold to reject the incoming calls.
3. Double click to redial the last phone.

- 4. Press and hold to cut off the current wireless connection.
- 5. In FM radio mode,long press the button to search and save the radio channel automatically.
- M** 1.Short press to switch the mode between wireless and FM radio.
2. If TWS available,long press to pair or cut off the connection between two speakers .

MAIN FEATURE

- Wireless 5.0
- Waterproof IP grade: IP67
- Handsfree talk
- Strong suction cup
- FM radio
- Multiple color LED light
- Charging by USB

SPECIFICATIONS

- Audio Frequency Range: 100Hz-20KHz
- Operating Distance: 10 meters
- Microphone:Built in
- Power Rating: 5W
- SNR: ≥85+2 dB
- Charging Voltage: DC 5V
- Battery Capacity:730mAh
- Charge Time: Approx. 4 hours
- Playback Time: Approx. 8 hours (around in 50% sound level)
- Housing Material:ABS+Silicone

WIRELESS PAIRING

Please charge the speaker for 3 full hours prior to

the initial use.

1. Be sure that the speaker is in power off mode.
Place the mobile phone or media player device next to it.Press &hold the power button for 3 seconds to enter the pairing mode.it will be automatically turn off after disconnect bluetooth about 10 min.
2. Activate the wireless feature on media player device and search for "My speaker F013" from the list to pair with.Enter "0000" if the media device prompts for a password.
3. If pairing fails,please refer to the user manual of media player device for wireless setup.Remove all the excessive unused models from the list of paired devices and start over from step 1 again.

RECHARGING THE DEVICE


The wireless speaker is powered by a built-in rechargeable lithium battery that can be operated by the following setps.

1. Release the DC 5V charging port cover.
2. Connect the USB charging cable to a standard USB charging port such as computer or USB charger from the DC 5V socket on F013.


PACKAGE CONTENTS

- F013 Waterproof Speaker
- USB Charging Cable
- Dedicated Suction Cup
- User Manual

PRODUCT FEATURE

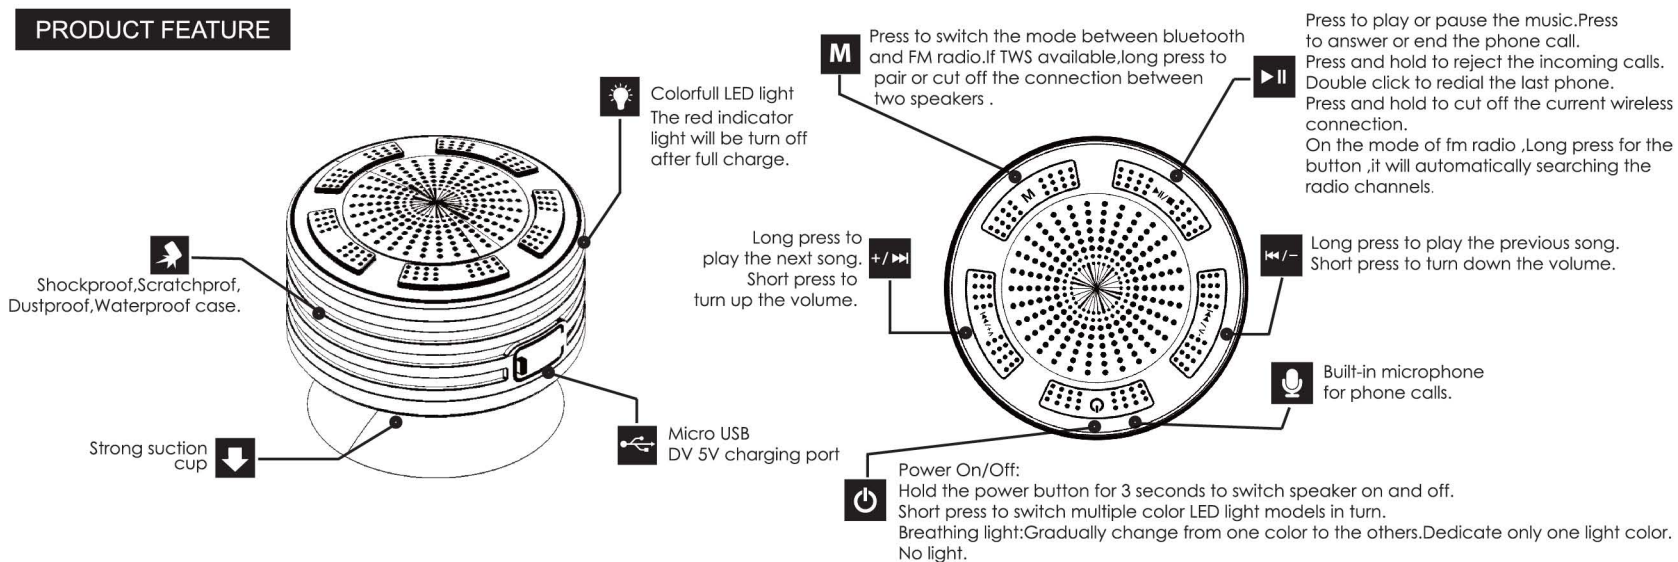

TROUBLE SHOOTING

Symptoms	Causes	Solutions
F013 Can't be powered on	Low battery level	Recharge the battery 
Not able to pair with the speaker	F013 is already on or not to the pairing mode.	Refer to "Wireless pairing section" in the previous page.
Volume too low	Battery is not charged up or volume is not set the maximum on both F013 & media player.	1.Increase the volume via pressing & holding the volume up button. 2.Increase the volume on the media players.
FM Radio Signals	1. To receive optimal FM radio signal,relocate F013 to open environment, remove from a closed loop area,or move it away from other electronic devices to reduce the interferences. 2. If applicable,plug with the charging cable as an external antenna to possibly increase the signal strength.	

SAFTY INSTRUCTIONS

1. Please make sure the plug cover is tight before drop into the water.

2. Keep the product away from extreme weather to protect the unit against electric shock, explosion or body injury.

3. Do not use the product to any excessive heat, such as direct sunlight, stoves or open flame.
4. Keep the products out of reach of children.Do not use the speaker excessive levels as it may damage hearing.
5. Clean the product with soft cloth without using harsh corrosive chemicals. Always unplug from the power source before cleaning.
6. Do not puncture or disassemble the exterior surface of the product in any way.
7. Do not insert any metal object into the device to protect the unit against electric shock.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.