



LSN50 LoRa Sensor Node User Manual

Document Version: 1.6.4

Image Version: v1.6.3

Version	Description	Date
1.0	Release	2018-Dec-4
1.1	Add steps of install STM320x; Add ST-Link Upload firmware method	2018-Dec-27
1.2	Add trouble shooting for UART upload, Add change log for firmware v1.4	2019-Jan-23
1.2.1	More detail description for 8 channel mode and trouble shooting for using in US915/AU915	2019-Feb-21
1.2.2	Modify trouble shooting for upload via Flashloader	2019-Mar-13
1.2.3	Add ISP Mode / Flash mode different/ Add working flow diagram (Chapter 2.1 how it works) Add FAQ for how to configure the Keys	2019-Apr-1
1.5.0	Upgrade to v1.5 version firmware Add ultrasonic sensor support and description. Add downlink description Change decoder for v1.5 Add working flow chart Add Mydevices support	2019-Apr-19
1.5.1	Improve Interrupt feature, change interrupt example to use door sensor	
1.5.2	Various minor text and format edits.	2019-Jun-10
1.6.0	Update to firmware v1.6 version, add 3ADC mode	2019-Aug-7
1.6.1	Trouble shooting for AT Command input Add support for 3 * DS18B20 (MOD4)	2019-Sep-18
1.6.2	Add door sensor detail/ power, Add battery connector info	2019-Dec-13
1.6.3	Add firmware version 1.6.2 change log, Add support for HX711 Weight Sensor	2019-Dec-31
1.6.4	Add New AT Command for 1.6.3. Add LSN50 v2.0 Hardware info. Add battery measure suggestion	2020-Apr-27

1. Introduction	4
1.1 What is LSN50 LoRa Sensor Node	4
1.2 Specifications	5
1.3 Features	6
1.4 Applications	6
1.5 Pin Definitions	7
1.6 Hardware Change log	8
1.7 Hole Option	10
2. Use LSN50 with LoRaWAN firmware	11
2.1 How it works	11
2.2 Quick guide to connect to LoRaWAN server (OTAA)	12
2.3 Working Mode & Uplink Payload	15
2.3.1 MOD=1 (Default Mode)	15
2.3.2 MOD=2 (Distance Mode)	16
2.3.3 MOD=3 (3 ADC + I2C)	17
2.3.4 MOD=4 (3 x DS18B20)	18
2.3.5 MOD=5 (Weight Measurement by HX711)	19
2.3.6 Decode payload in The Things Network	20
2.4 Payload Explanation and Sensor Interface	21
2.4.1 Battery Info	21
2.4.2 Temperature (DS18B20)	21
2.4.3 Digital Input	21
2.4.4 Analogue Digital Converter (ADC)	22
2.4.5 Digital Interrupt	23
2.4.6 I2C Interface (SHT20)	25
2.4.7 Distance Reading	26
2.4.8 Ultrasonic Sensor	26
2.4.9 +5V Output	27
2.4.10 Weigh Sensor HX711	27
2.5 Downlink Payload	29
2.6 Show Data in Mydevices IoT Server	30
2.7 Firmware Change Log	33
2.8 Battery Analysis	35
2.8.1 Battery Type	35
2.8.2 Power consumption Analyze	35
2.8.3 Battery Note	37
2.8.4 Replace the battery	37
3. Using the AT Commands	37
3.1 Access AT Commands	37
3.2 Common AT Command Sequence	40
3.2.1 Multi-channel ABP mode (Use with SX1301/LG308)	40
3.2.2 Single-channel ABP mode (Use with LG01/LG02)	40
4. Upload Firmware	41
4.1 Upload Firmware via Serial Port	41
4.2 Upload Firmware via ST-Link V2	44
5. Developer Guide	46

6.	FAQ	48
6.1	Why there is 433/868/915 version?	48
6.2	What is the frequency range of LT LoRa part?	48
6.3	How to change the LoRa Frequency Bands/Region?	48
6.4	Can I use Private LoRa protocol?	48
6.5	How to set up LSN50 to work with Single Channel Gateway such as LG01/LG02?	49
6.6	How to configure the EUI keys in LSN50?	51
7.	Trouble Shooting	52
7.1	Connection problem when uploading firmware.	52
7.2	Why I can't join TTN in US915 / AU915 bands?	52
7.3	AT Command input doesn't work	53
8.	Order Info	54
9.	Packing Info	54
10.	Support	55
11.	References	55

1. Introduction

1.1 What is LSN50 LoRa Sensor Node

LSN50 is a Long Range LoRaWAN Sensor Node. It is designed for **outdoor data logging** and powered by **Li/SOCI2 battery** for long term use and secure data transmission. It is designed to facilitate developers to quickly deploy industrial level LoRa and IoT solutions. It helps users to turn the idea into a practical application and make the Internet of Things a reality. It is easy to program, create and connect your things everywhere.

It is based on SX1276/SX1278 allows the user to send data and reach extremely long ranges at low data-rates. It provides ultra-long range spread spectrum communication and high interference immunity whilst minimizing current consumption. It targets professional wireless sensor network applications such as irrigation systems, smart metering, smart cities, smartphone detection, building automation, and so on.

LSN50 uses STM32L0x chip from ST, STM32L0x is the **ultra-low-power** STM32L072xx microcontrollers incorporate the connectivity power of the universal serial bus (USB 2.0 crystal-less) with the high-performance ARM® Cortex®-M0+ 32-bit RISC core operating at a 32 MHz frequency, a memory protection unit (MPU), high-speed embedded memories (192 Kbytes of Flash program memory, 6 Kbytes of data EEPROM and 20 Kbytes of RAM) plus an extensive range of enhanced I/Os and peripherals.

LSN50 is an **open source product**, it is based on the STM32Cube HAL drivers and lots of libraries can be found in ST site for rapid development.

LSN50 Network Structure



1.2 Specifications

Micro Controller:

- STM32L072CZT6 MCU
- MCU: STM32L072CZT6
- Flash: 192KB
- RAM: 20KB
- EEPROM: 6KB
- Clock Speed: 32Mhz

Common DC Characteristics:

- Supply Voltage: 2.1v ~ 3.6v
- Operating Temperature: -40 ~ 85°C
- I/O pins: Refer to STM32L072 datasheet

LoRa Spec:

- Frequency Range,
 - Band 1 (HF): 902 ~ 928Mhz
- Programmable bit rate up to 300 kbps.
- High sensitivity: down to -148 dBm.
- Bullet-proof front end: IIP3 = -12.5 dBm.
- Excellent blocking immunity.
- Low RX current of 10.3 mA, 200 nA register retention.
- Fully integrated synthesizer with a resolution of 61 Hz.
- FSK modulation.
- Built-in bit synchronizer for clock recovery.
- Preamble detection.
- 127 dB Dynamic Range RSSI.
- Automatic RF Sense and CAD with ultra-fast AFC.
- Packet engine up to 256 bytes with CRC.
- LoRaWAN 1.0.2 Specification

Battery:

- Li/SOCI2 un-chargeable battery
- Capacity: 4000mAh
- Self Discharge: <1% / Year @ 25°C
- Max continuously current: 130mA
- Max boost current: 2A, 1 second

Power Consumption

- STOP Mode: 2.7uA @ 3.3v
- LoRa Transmit Mode: 125mA @ 20dBm 44mA @ 14dBm



1.3 Features

- LoRaWAN 1.0.2 Class A, Class C
- STM32L072CZT6 MCU
- SX1276/78 Wireless Chip
- Pre-load bootloader on USART1/USART2
- MDK-ARM Version 5.24a IDE
- I2C, LPUSART1, USB, SPI2
- 3x12bit ADC, 1x12bit DAC
- 20xDigital I/Os
- LoRa™ Modem
- Preamble detection
- Baud rate configurable
- CN470/EU433/KR920/US915/IN865
- EU868/AS923/AU915
- Open source hardware / software
- Available Band: 433/868/915/920 Mhz
- IP66 Waterproof Enclosure
- Ultra Low Power consumption
- AT Commands to change parameters
- 4000mAh Battery for long term use

1.4 Applications

- Smart Buildings & Home Automation
- Logistics and Supply Chain Management
- Smart Metering
- Smart Agriculture
- Smart Cities
- Smart Factory

1.5 Pin Definitions

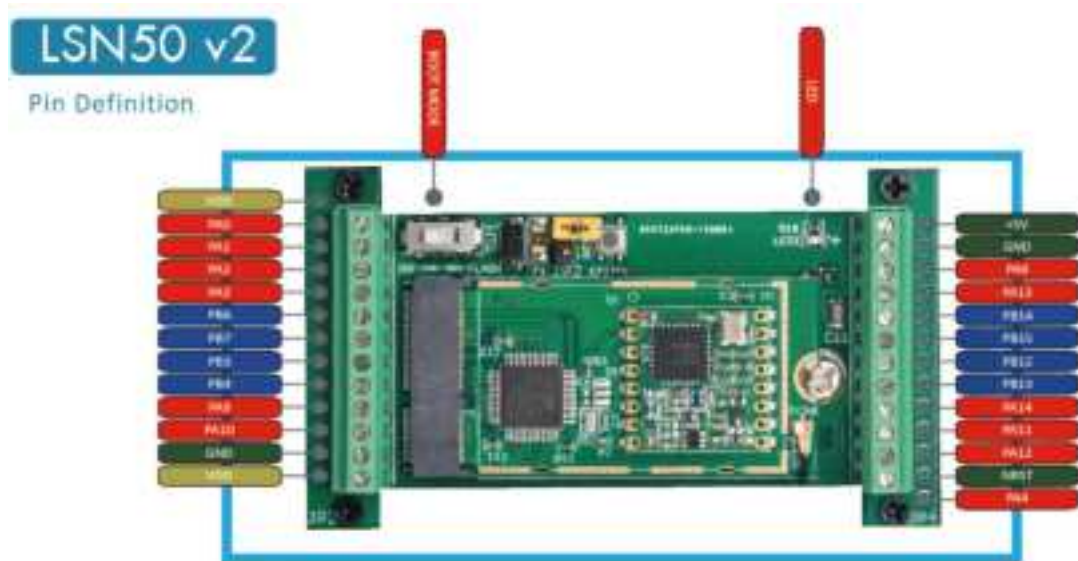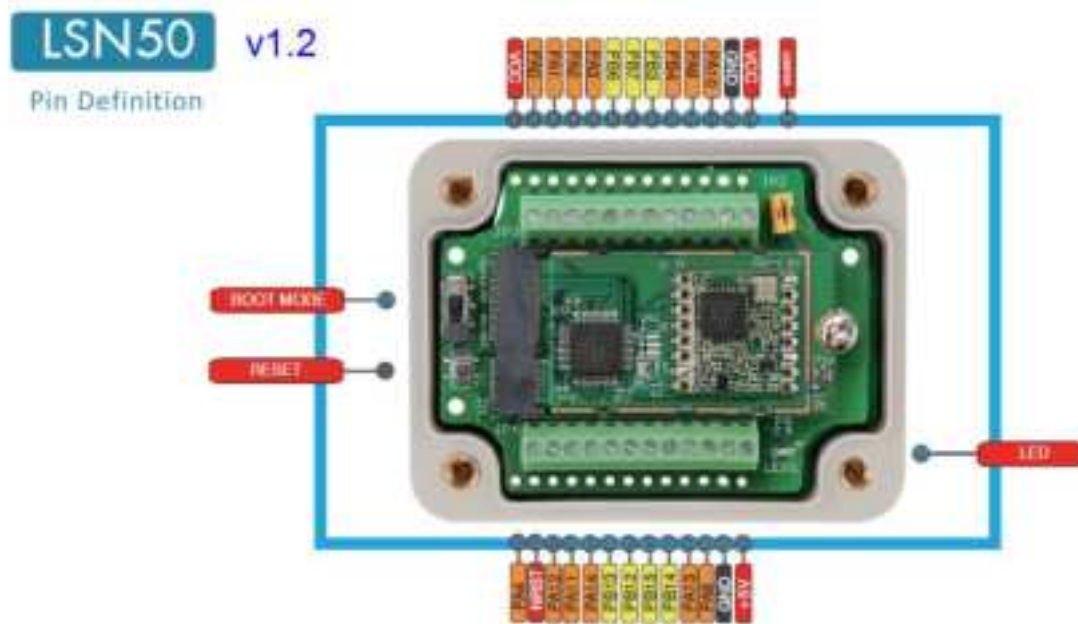

No.	Signal	Direction	Function	Remark
1	VCC(2.9V)	OUTPUT	VCC	Directly connect to main power for board
2	PA0	In/Out	Directly from STM32 chip	Used as ADC in LSN50 image
3	PA1	In/Out	Directly from STM32 chip	
4	PA2	In/Out	Directly from STM32 chip, 10k pull up to VCC	Used as UART_TXD in LSN50 image
5	PA3	In/Out	Directly from STM32 chip, 10k pull up to VCC	Used as UART_RXD in LSN50 image

6	PB6	In/Out	Directly from STM32 chip, 10k pull up to VCC	
7	PB7	In/Out	Directly from STM32 chip, 10k pull up to VCC	
8	PB3	In/Out	Directly from STM32 chip, 10k pull up to VCC	
9	PB4	In/Out	Directly from STM32 chip	
10	PA9	In/Out	Directly from STM32 chip, 10k pull up to VCC	
11	PA10	In/Out	Directly from STM32 chip, 10k pull up to VCC	
12	GND		Ground	
13	VCC(2.9V)	OUTPUT	VCC	Directly connect to main power for board
14	Jumper		Power on/off jumper	
15	PA4	In/Out	Directly from STM32 chip	
16	NRST	In	Reset MCU	
17	PA12	In/Out	Directly from STM32 chip	
18	PA11	In/Out	Directly from STM32 chip	
19	PA14	In/Out	Directly from STM32 chip	
20	PB13	In/Out	Directly from STM32 chip	
21	PB12	In/Out	Directly from STM32 chip	
22	PB15	In/Out	Directly from STM32 chip	
23	PB14	In/Out	Directly from STM32 chip	
24	PA13	In/Out	Directly from STM32 chip	
25	PA8	In/Out	Directly from STM32 chip	Default use to turn on/off LED1 in LSN50 image
26	GND		Ground	
27	+5V	Out	5v output power	Controlled by PB5(Low to Enable, High to Disable)
28	LED1		Controlled by PA8	Blink on transmit
29	BOOT MODE		Configure device in working mode or ISP program mode	Flash: Normal Working mode and send AT Commands ISP: UART Program Mode
30	NRST	In	Reset MCU	

1.6 Hardware Change log

LSN50 v2.0:

- Change to a new enclosure. Improve with external antenna, IP68, ear hook.

LSN50 v1.3:

- Add P-MOS to control 5V output

LSN50 v1.2:




- Add LED. Turn on for every LoRa transmit
- Add pin PA4, PB13, NRST
- Add 5V Output, on/off control by PB5(Low to Enable, High to Disable)

1.7 Hole Option

The LSN50 provides different hole size options for different size sensor cable. The options provided are M12, M16 and M20. The definition is as below:



产品结构 Structure

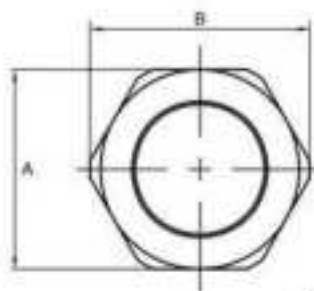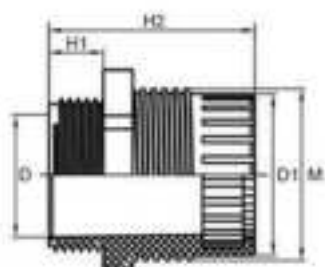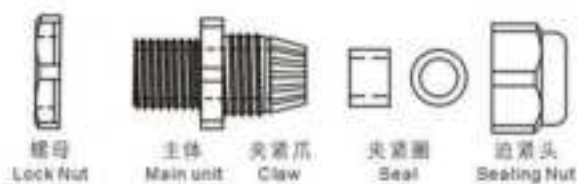

单位: mm


MODEL	H1	H2	H	H1	D	D1	A	B
M12*1.5	8	28.3	12.0	22.0	10.4	8.5±0.2	16.0±0.2	18.0±0.2
M16*1.5	8	30.7	15.1	26.0	13.5	10.9±0.2	18.8±0.2	20.6±0.2
M20*1.5	9	34.0	20.2	28.0	18.7	16.2±0.2	22.8±0.2	25.2±0.2

2. Use LSN50 with LoRaWAN firmware

2.1 How it works

The LSN50 is pre-loaded with a firmware and is configured as LoRaWAN OTAA Class A mode by default. It has OTAA keys to join LoRaWAN network. To connect a local LoRaWAN network, you just need to input the OTAA keys in the LoRaWAN IoT server and power on the LSN50. It will automatically join the network via OTAA.

The diagram below shows the working flow in default firmware (ver 1.6.2):

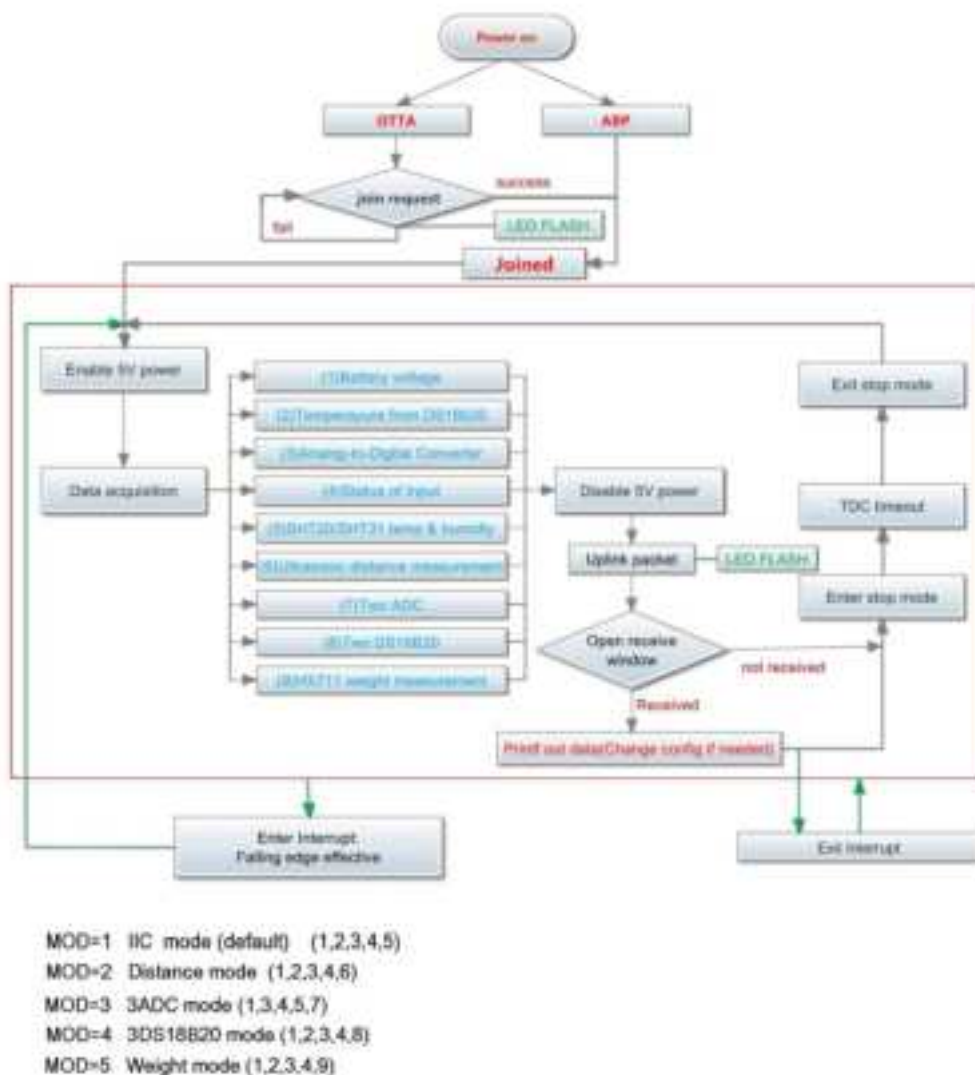

In case you can't set the OTAA keys in the LoRaWAN OTAA server, and you have to use the keys from the server, you can [use AT Commands](#) to set the keys in the LSN50.

2.2 Quick guide to connect to LoRaWAN server (OTAA)

Following is an example for how to join the [TTN LoRaWAN Network](#). Below is the network structure; we use the [LG308](#) as a LoRaWAN gateway in this example.

LSN50 in a LoRaWAN Network




The LG308 is already set to connected to [TTN network](#), so what we need to now is configure the TTN server.

Step 1: Create a device in TTN with the OTAA keys from LSN50.


Each LSN50 is shipped with a sticker with the default device EUI as below:

You can enter this key in the LoRaWAN Server portal. Below is TTN screen shot:

Add APP EUI in the application

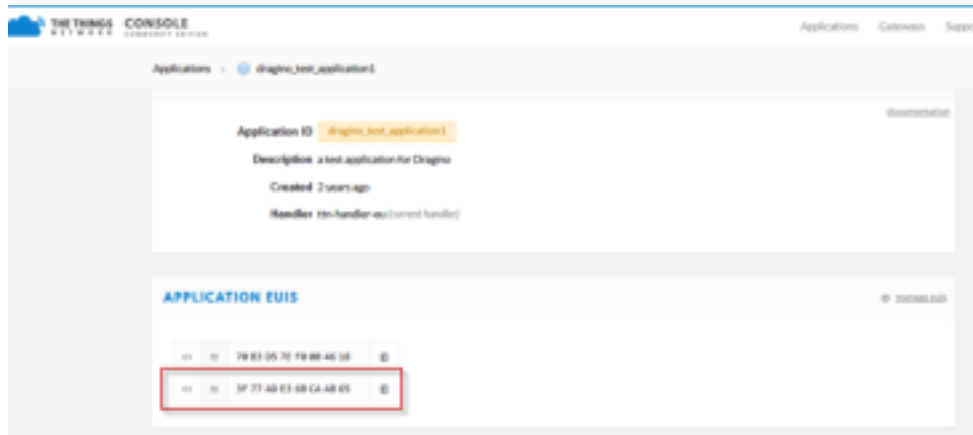


Add APP KEY and DEV EUI

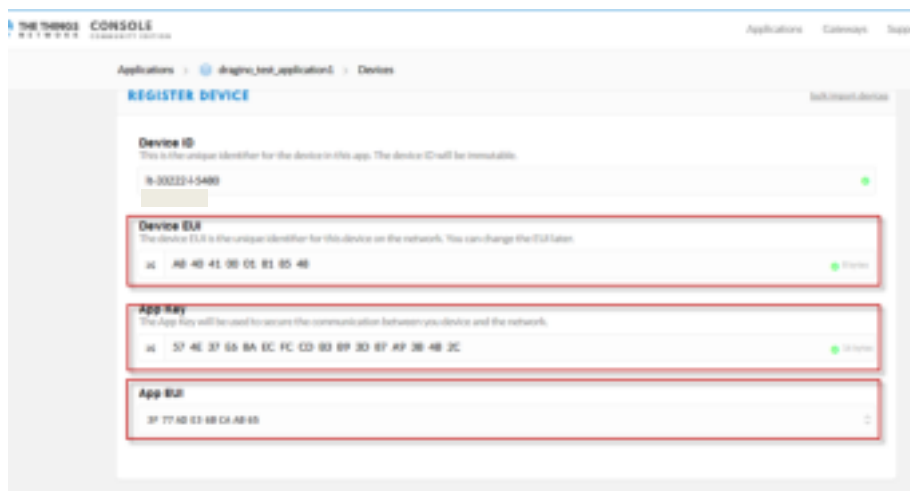


Step 2: Power on LSN50

Put a Jumper on JP2 to power on the device.

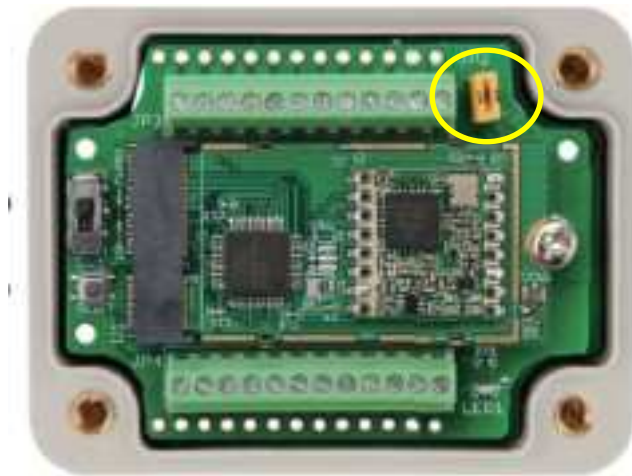

Step 3: The LSN50 will auto join to the TTN network. After join success, it will start to upload messages to TTN and you can see the messages in the panel.

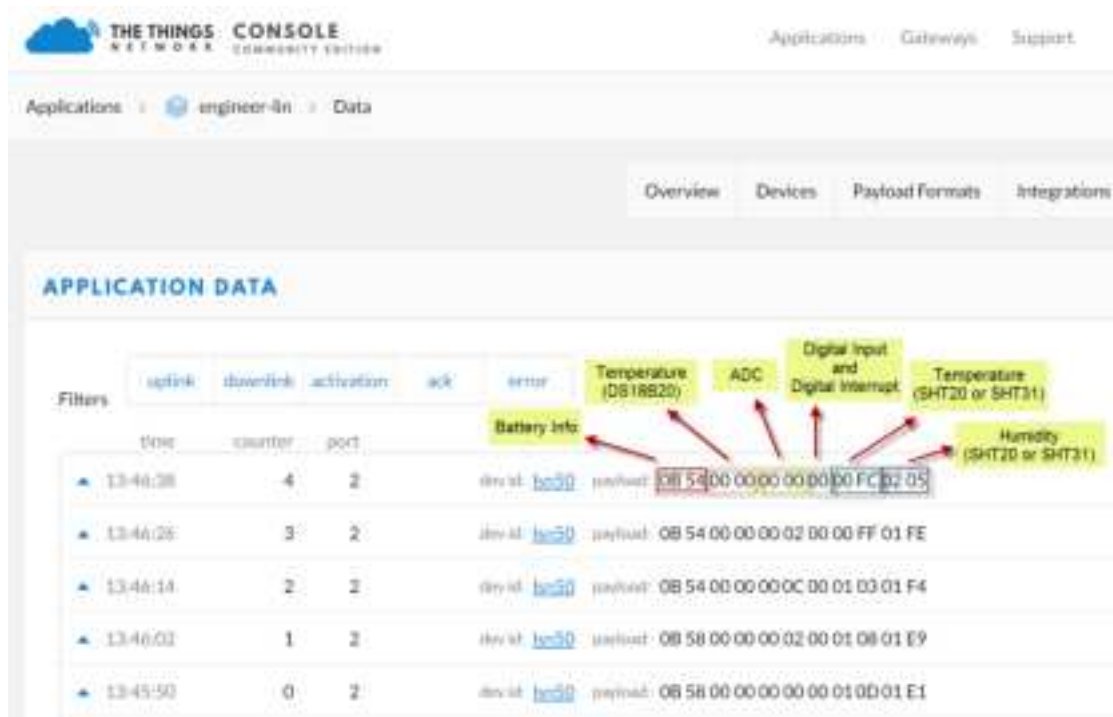

The screenshot shows the 'APPLICATION DATA' section of The Things Console. The data is filtered by 'uplink' and 'downlink' for the application 'engineer-lin'. The table displays several messages with their timestamps, counters, ports, device IDs, and payloads. The payloads are decoded into human-readable data points:

- Battery Info**: 0B 54 00 00 00 00 00 FC 02 05
- Temperature (DS18B20)**: 0B 54 00 00 00 00 02 00 00 FF 01 FE
- ADC**: 0B 54 00 00 00 00 0C 00 01 03 01 F4
- Digital Input and Digital Interrupt**: 0B 58 00 00 00 02 00 01 08 01 E9
- Temperature (SHT20 or SHT31)**: 0B 58 00 00 00 00 00 01 0D 01 E1
- Humidity (SHT20 or SHT31)**: 0B 58 00 00 00 00 00 01 0D 01 E1

2.3 Working Mode & Uplink Payload

LSN50 has different working mode for the connections of different type of sensors. This section describes these modes. Use can use the AT Command AT+MOD to set LSN50 to different working modes.

For example:

AT+MOD=2 // will set the LSN50 to work in MOD=2 distance mode which target to measure distance via Ultrasonic Sensor.


NOTE:

1. Some working modes has payload more than 12 bytes, The US915/AU915/AS923 frequency bands' definition has maximum 11 bytes in **DR0**. Server sides will see NULL payload while LSn50 transmit in DR0 with 12 bytes payload.
2. All modes share the same Payload Explanation from [HERE](#).
3. By default, the device will send an uplink message every 5 minutes.

2.3.1 MOD=1 (Default Mode)

In this mode, uplink payload includes in total 11 bytes. Uplink packets use FPORT=2.

Size(bytes)	2	2	1	2	2	2
Value	BAT	Temperature (DS18B20)	Digital in & Digital Interrupt	ADC	Temperature (SHT20 or SHT31 or Ultrasonic Sensor)	Humidity (SHT20)

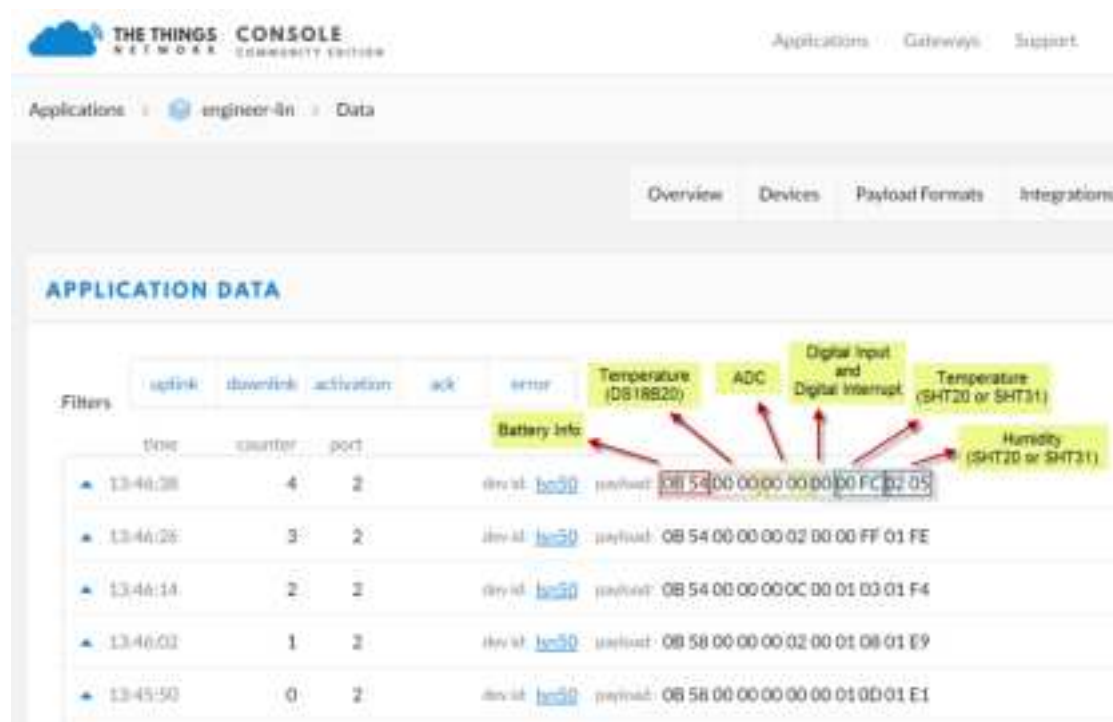

THE THINGS CONSOLE
COMMUNITY EDITION

Applications : Gateways : Support

Applications : engineer-4in : Data

Overview Devices Payload Formats Integrations

APPLICATION DATA


Filters: uplink, downlink, activation, ack, error

time	counter	port	device ID	payload
13:46:38	4	2	lsn50	0B 54 00 00 00 00 00 00 FC 02 05
13:46:26	3	2	lsn50	0B 54 00 00 00 00 02 00 00 FF 01 FE
13:46:14	2	2	lsn50	0B 54 00 00 00 00 0C 00 01 03 01 F4
13:46:02	1	2	lsn50	0B 58 00 00 00 00 02 00 01 08 01 E9
13:45:50	0	2	lsn50	0B 58 00 00 00 00 00 00 01 0D 01 E1

2.3.2 MOD=2 (Distance Mode)

This mode is target to measure the distance. The payload of this mode is totally 11 bytes. The 8th and 9th bytes is for the distance.

Size(bytes)	2	2	1	2	2	2
Value	BAT	Temperature (DS18B20)	Digital in & Digital Interrupt	ADC	Distance measure by: 1) LIDAR-Lite V3HP Or 2) Ultrasonic Sensor	Humidity (SHT20)

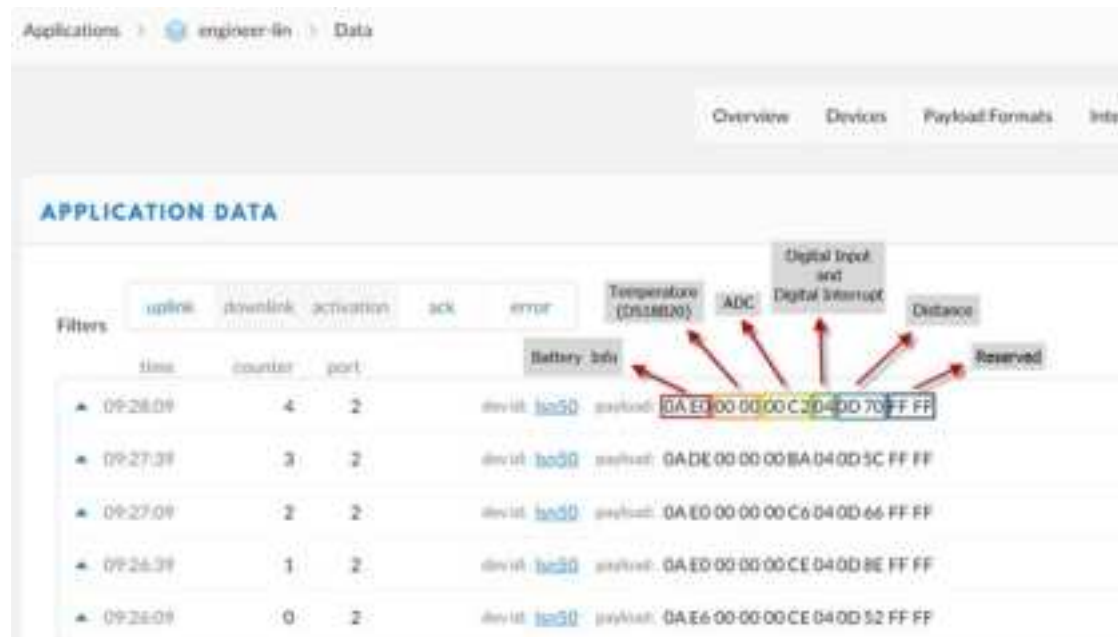

Connection of LIDAR-Lite V3HP:



+5V<...>+5V
Trig<...>PB12
Echo<...>PA11
GND<...>GND

2.3.3 MOD=3 (3 ADC + I2C)

Size(bytes)	2	2	2	1	2	2	1
Value	ADC1 (Pin PA0)	ADC2 (PA1)	ADC3 (PA4)	Digital in & Digital Interrupt	Temperature (SHT20 or SHT31)	Humidity (SHT20 or SHT31)	BAT

[illegible]

2.3.4 MOD=4 (3 x DS18B20)


This mode is supported in firmware version since v1.6.1

Hardware connection is as below, (**Note: R3 & R4 should change from 10k to 4.7k to support DS18B20, Software set to AT+MOD=4**)



This mode has total 11 bytes. As shown below:

Size(bytes)	2	2	2	1	2	2
Value	BAT	Temperature1 (DS18B20) (PB3)	ADC	Digital in & Digital Interrupt	Temperature2 (DS18B20) (PA9)	Temperature3 (DS18B20) (PA10)

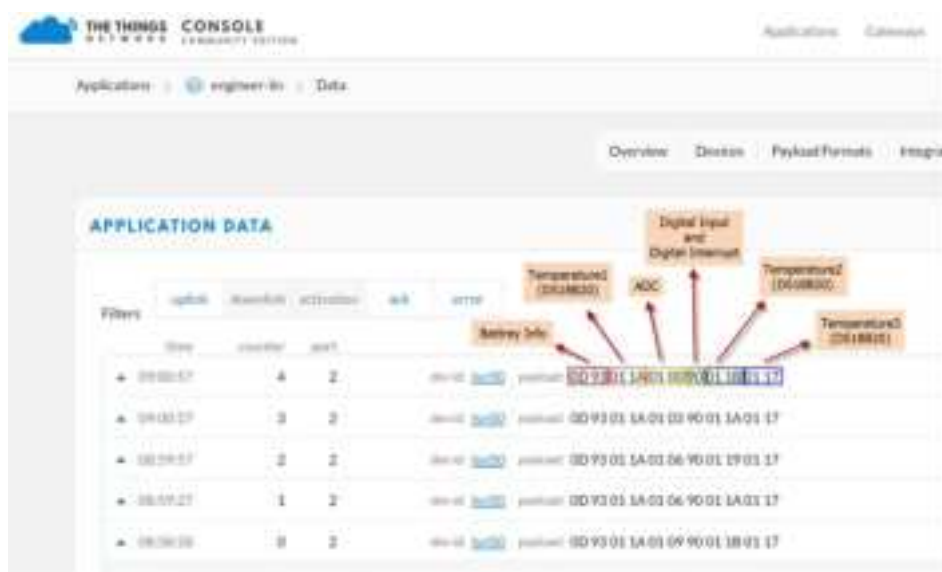

2.3.5 MOD=5(Weight Measurement by HX711)

This mode is supported in firmware version since v1.6.2.



Notes about hardware connection:

- 1) Don't connect the HX711 module VCC to LSN50 3.3v VCC, in this case, the LSN50 will always power on HX711 and the battery will run out soon.
- 2) HX711 support 5v VCC, but while connect the LSN50's +5V to HX711 VCC, the value from HX711 is not stable.
- 3) Connect LSN50 +5V to HX711 VCC via a LDO module is stable.

Each HX711 need to be calibrated before used. User need to do below two steps:

- a) Zero calibration. Don't put anything on load cell and run **AT+WEIGRE** to calibrate to Zero gram.
- b) Adjust calibration factor (default value 400): Put a known weight thing on load cell and run **AT+WEIGAP** to adjust the Calibration Factor.


For example:

AT+WEIGAP =403.0

Response: Weight is 401 g

Check the response of this command and adjust the value to match the real value for thing.

Size(bytes)	2	2	2	1	2	2
Value	BAT	Temperature (DS18B20)	ADC	Digital in & Digital Interrupt	Weight	Reserved

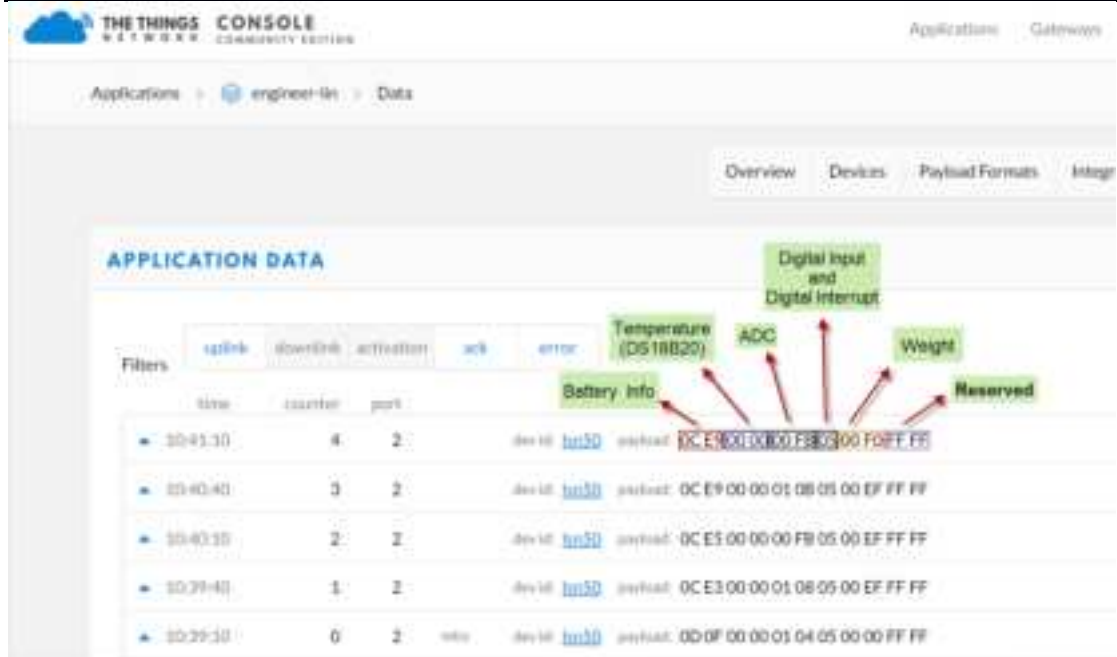


APPLICATION DATA

Filters: uplink downlink activation ack error

time	counter	port	dev id	payload
2019-10-10 10:41:30	4	2	lsn50	0C E9 00 00 01 08 05 00 EF FF FF
2019-10-10 10:40:40	3	2	lsn50	0C E9 00 00 01 08 05 00 EF FF FF
2019-10-10 10:40:30	2	2	lsn50	0C E9 00 00 01 08 05 00 EF FF FF
2019-10-10 10:39:40	1	2	lsn50	0C E9 00 00 01 08 05 00 EF FF FF
2019-10-10 10:39:10	0	2	lsn50	0C E9 00 00 01 08 05 00 EF FF FF

2.3.6 Decode payload in The Things Network

While using TTN network, you can add the payload format to decode the payload.

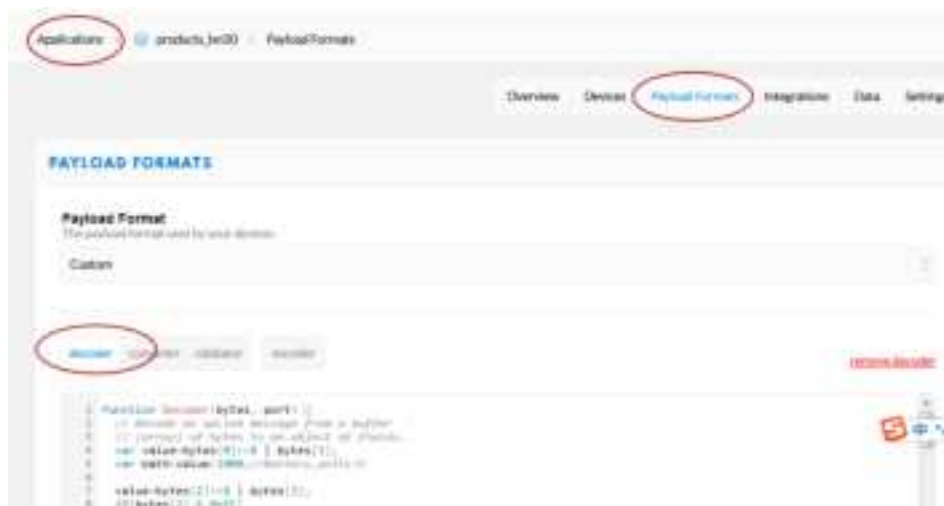

PAYLOAD FORMATS

Payload Format
The payload format used by your device.

Custom

Decoder Encoder Validator Decoder

```

1 function Decoder(bytes, port) {
2   // Decode the payload received from a device
3   // Convert the bytes to an object of floats
4   var valueBytes = bytes[0] < 8 ? bytes[0] :
5     var value = parseInt(valueBytes, 10);
6   valueBytes[0] = 0;
7   return {
8     value: value,
9     port: port
10  }
11 }

```

The payload decoder function for TTN are here:

LSN50 TTN Payload Decoder:

http://www.dragino.com/downloads/downloads/LSN50-LoRaST/Payload_decoder/

2.4 Payload Explanation and Sensor Interface

2.4.1 Battery Info

Check the battery voltage for LSN50.

Ex1: 0x0B45 = 2885mV


Ex2: 0x0B49 = 2889mV

2.4.2 Temperature (DS18B20)

If there is a DS18B20 connected to PB3 pin. The temperature will be uploaded in the payload.

More DS18B20 can check the [3 DS18B20 mode](#)

Connection

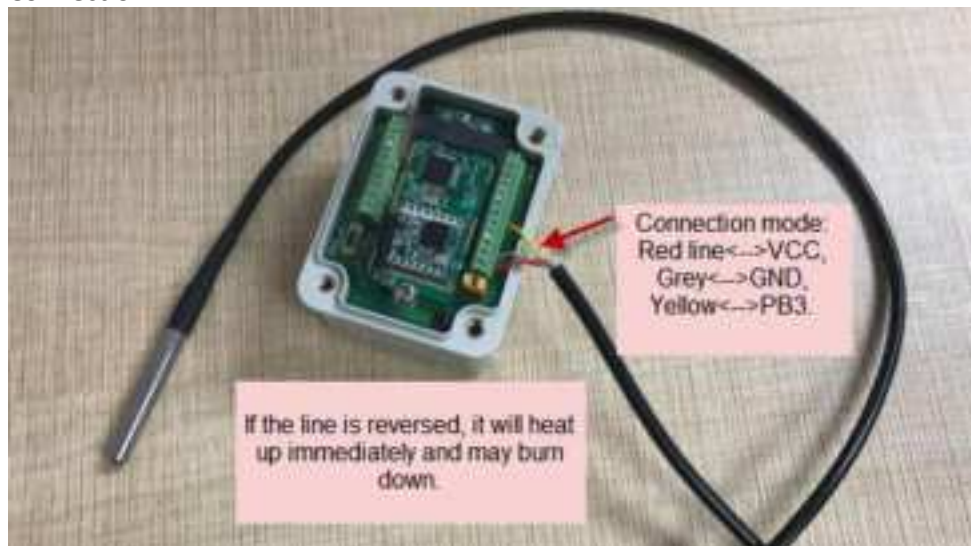

Example:

If payload is: 0105H: (0105 & FC00 == 0), temp = 0105H /10 = 26.1 degree

If payload is: FF3FH : (FF3F & FC00 == 1) , temp = (FF3FH - 65536)/10 = -19.3 degrees.

2.4.3 Digital Input

The digital input for pin PA12,


- When PA12 is high, the bit2 of payload byte 6 is 1.
- When PA12 is low, the bit2 of payload byte 6 is 0.

2.4.4 Analogue Digital Converter (ADC)

The ADC monitors the voltage on the PA0 line, in mV.

Ex: 0x021F = 543mv,

Example1: Reading an Oil Sensor (Read a resistance value):

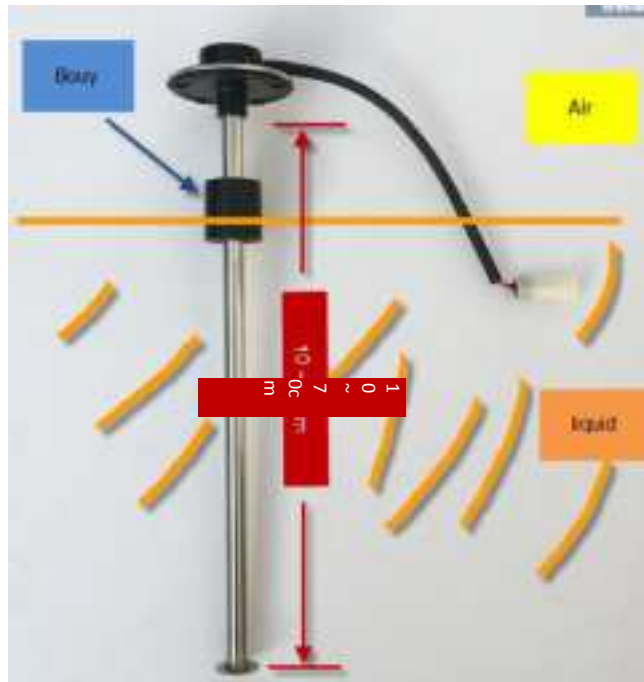

* Bouy on top, the oil sensor act as a 10K resistor.

* Bouy on bottom, it act as a 0ohm resistor,


To get the deep for the liquid, we can measure the output resistance for oil sensor and calculate where the bouy is so to calculate the height of oil.

In the LSN50, we can use PB4 and PA0 pin to calculate the resistance for the oil sensor.

Steps:

1. Solder a 10K resistor between PA0 and VCC.
2. Screw oil sensor's two pins to PA0 and PB4.

The equipment circuit is as below:

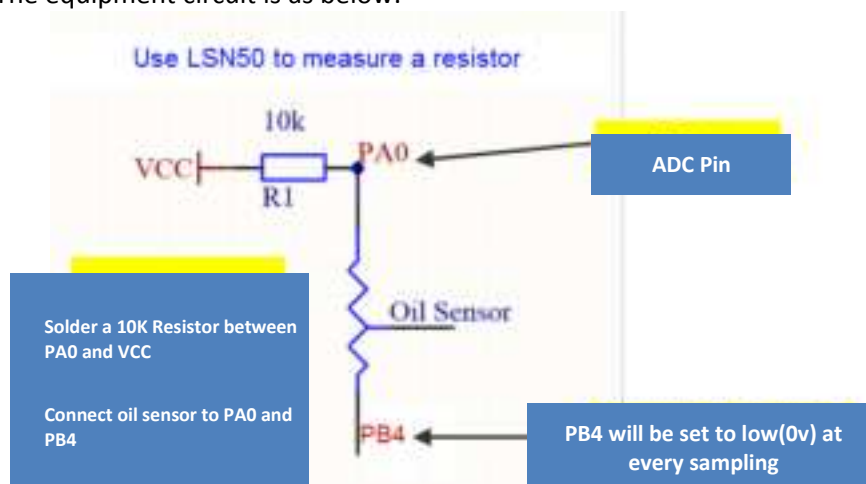

According to above diagram:

$$(VCC - V_{PA0}) \frac{10}{10} k = \frac{V_{PA0}}{R_{oil_{sensor}}}$$

So

$$R_{oil_{sensor}} = V_{PA0} \times 10 \frac{K}{(VCC - V_{PA0})}$$

V_{PA0} is the reading of ADC. So if ADC=0x05DC=0.9 v and VCC (BAT) is 2.9v

$$\text{The } R_{oil_{sensor}} = 0.9 \times \frac{10K}{2.9-0.9} = 4.5K \text{ ohm}$$

Since the Bouy is linear resistance from 10 ~ 70cm.

The position of Bouy is $\frac{4.5K}{10K} \times (70cm - 10cm) + 10cm = 37cm$, from the bottom of Bouy

2.4.5 Digital Interrupt

Digital Interrupt refers to pin PB14, and there are different trigger methods. When there is a trigger, the LSN50 will send a packet to the server.

Example to use with door sensor

(Requires firmware > 1.5.1)

The door sensor is shown at right. It is a two wire magnetic contact switch used for detecting the open/close status of doors or windows.

When the two pieces are close to each other, the 2 wire output will be short or open (depending on the type), while if the two pieces are away from each other, the 2 wire output will be the opposite status. So we can use LSN50 interrupt interface to detect the status for the door or window.



Below is the installation example:


Fix one piece of the magnetic sensor to the door and connect the two pins to LSN50 as follows:

- One pin to LSN50's PB14 pin
- The other pin to LSN50's VCC pin

Install the other piece to the door. Find a place where the two pieces will be close to each other when the door is closed. For this particular magnetic sensor, when the door is closed, the output will be short, and PB14 will be at the VCC voltage.

Door sensors have two types: **NC (Normal close)** and **NO (normal open)**. The connection for both type sensors are the same. But the decoding for payload are reverse, user need to modify this in the IoT Server decoder.

When door sensor is shorted, there will extra power consumption in the circuit, the extra current is $3v3/R14 = 3v3/1Mohm = 0.3uA$ which can be ignored.

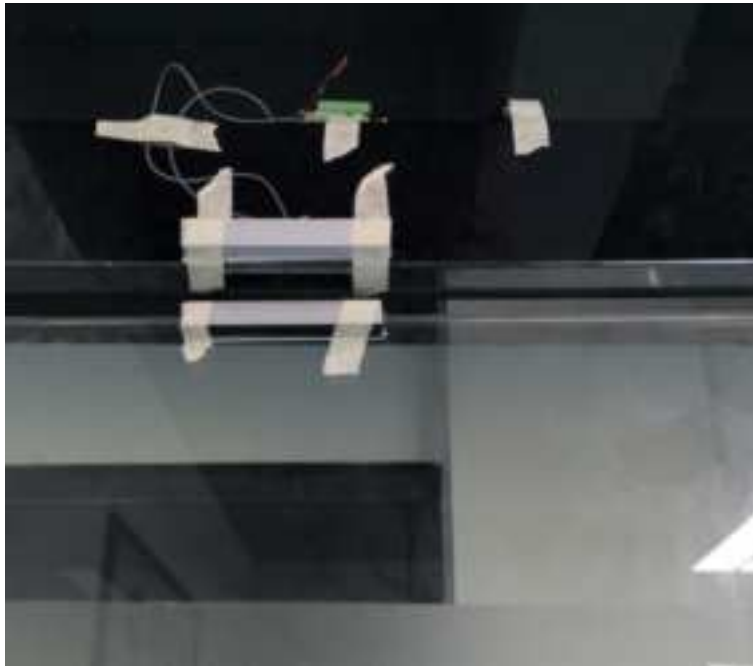

The above photos shows the two parts of the magnetic switch fitted to a door.

The software by default uses the falling edge on the signal line as an interrupt. We need to modify it to accept both the rising edge (0v --> VCC , door close) and the falling edge (VCC --> 0v , door open) as the interrupt.

The command is:

AT+INTMOD=1 //(more info about INMOD please refer [AT Command Manual](#).)

Below shows some screen captures in TTN:



In MOD=1, user can use byte 6 to see the status for door open or close. TTN decoder is as below:


```
door= (bytes[6] & 0x80)? "CLOSE":"OPEN";
```


2.4.6 I2C Interface (SHT20)


The PB6(SDA) and PB7(SCK) are I2C interface lines. You can use these to connect to an I2C device and get the sensor data.

We have made an example to show how to use the I2C interface to connect to the SHT20 Temperature and Humidity Sensor. This is supported in the stock firmware since v1.5 with **AT+MOD=1 (default value)**.

Below is the connection to SHT20.

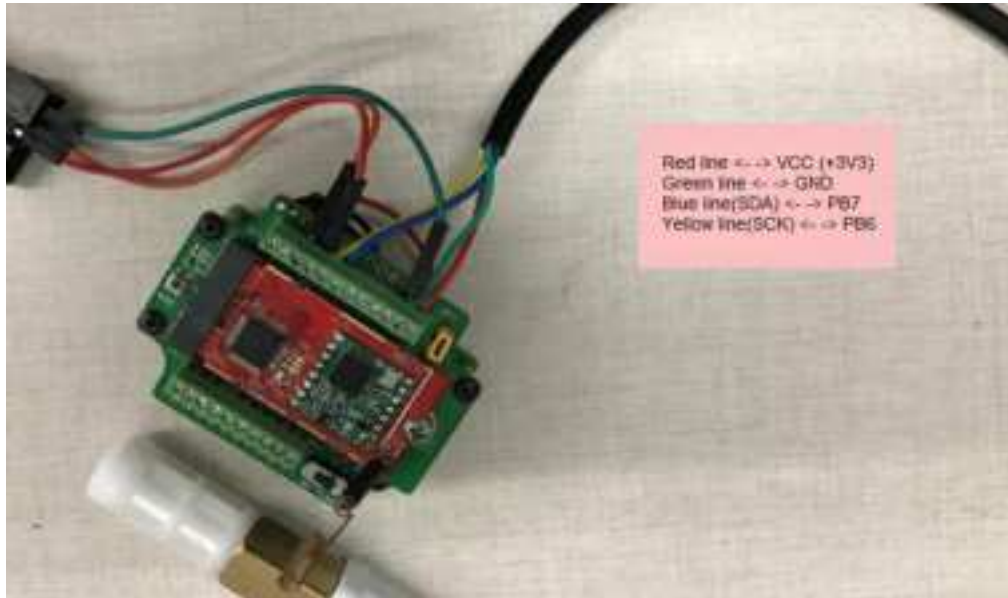

The device will be able to get the I2C sensor data now and upload to IoT Server.

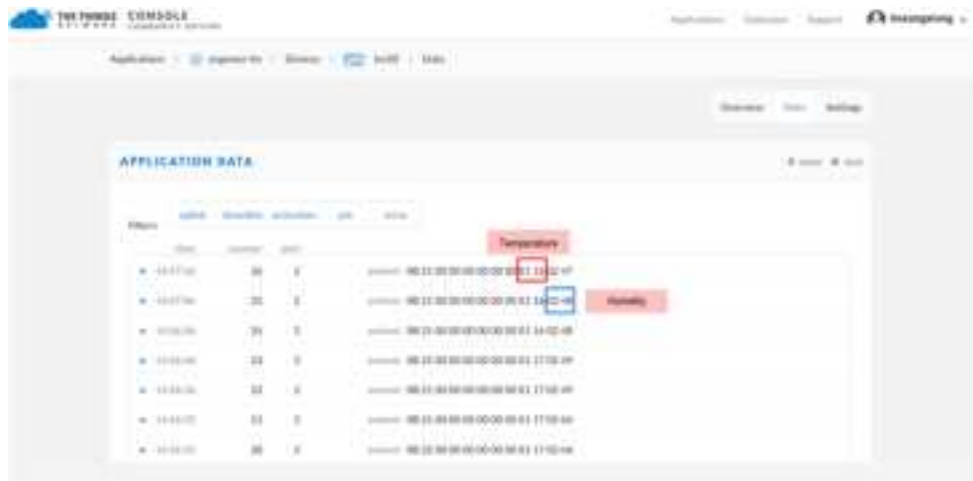

Time	Temperature	Humidity
2018-01-01 10:00:00	0116	0248
2018-01-01 10:00:05	0116	0248
2018-01-01 10:00:10	0116	0248
2018-01-01 10:00:15	0116	0248
2018-01-01 10:00:20	0116	0248
2018-01-01 10:00:25	0116	0248
2018-01-01 10:00:30	0116	0248

Convert the read byte to decimal and divide it by ten.

Example:

Temperature: Read:0116(H) = 278(D) Value: $278 / 10 = 27.8^{\circ}\text{C}$;

Humidity: Read:0248(H)=584(D) Value: $584 / 10 = 58.4$, So 58.4%

If you want to use other I2C device, please refer the SHT20 part source code as reference.

2.4.7 Distance Reading

Refer [Ultrasonic Sensor section](#).

2.4.8 Ultrasonic Sensor

The LSN50 v1.5 firmware supports ultrasonic sensor (with AT+MOD=2) such as SEN0208 from DF-Robot. This Fundamental Principles of this sensor can be found at this link:

https://wiki.dfrobot.com/Weather_-_proof_Ultrasonic_Sensor_with_Separate_Probe_SKU_SEN0208

The LSN50 detects the pulse width of the sensor and converts it to mm output. The accuracy will be within 1 centimeter. The usable range (the distance between the ultrasonic probe and the measured object) is between 24cm and 600cm.

The picture below shows the connection:



Connect to the LSN50 and run **AT+MOD=2** to switch to ultrasonic mode (ULT). The ultrasonic sensor uses the 8th and 9th byte for the measurement value.

Example:

Distance: Read:0C2D(Hex) = 3117(D) Value: 3117 mm=311.7 cm



You can see the serial output in ULT mode as below:

```
LSN50 Device
Image Version: v1.4
Frequency Band: EU868
DevEui= 00 97 16 CF 08 37 CF AE

***** UpLinkCounter= 0 *****
TX on freq 868300000 Hz at DR 5
txDone
rxDone
JOINED
Distance is out of range

***** UpLinkCounter= 0 *****
TX on freq 867700000 Hz at DR 0
txDone
rxTimeOut
rxTimeOut
Distance=3117 m

***** UpLinkCounter= 1 *****
TX on freq 868100000 Hz at DR 0
txDone
rxTimeOut
rxDone
```

In TTN server:



2.4.9 +5V Output

Since v1.2 hardware version, a +5v output is added in the hardware. The +5V output will be valid for every sampling. LSN50 will enable +5V output before all sampling and disable the +5v after all sampling.

Since firmware v1.6.3, The 5V output time can be controlled by AT Command.

AT+5VT=1000

Means set 5V valid time to have 1000ms. So the real 5V output will actually have 1000ms + sampling time for other sensors.

2.4.10 Weigh Sensor HX711

Since v1.6.2 firmware, LSN50 support Weigh Sensor HX711.

2.5 Downlink Payload

By default, LSN50 prints the downlink payload to console port.

Downlink Control Type	FPort	Type Code	Downlink payload size(bytes)
TDC (Transmit Time Interval)	Any	01	4
RESET	Any	04	2
AT+CFM	Any	05	4
INTMOD	Any	06	4

Examples

Set TDC

If the payload=0100003C, it means set the END Node's TDC to 0x00003C=60(S), while type code is 01.

Payload: 01 00 00 1E TDC=30S

Payload: 01 00 00 3C TDC=60S

Reset

If payload = 0x04FF, it will reset the LSN50

CFM

 
Downlink Payload: 05000001, Set AT+CFM=1 or 05000000 , set AT+CFM=0

INTMOD

Downlink Payload: 06000003, Set AT+INTMOD=3

Mydevices provides a human friendly interface to show the sensor data, once we have data in TTN, we can use Mydevices to connect to TTN and see the data in Mydevices. Below are the steps:


Step 2: To configure the Application to forward data to Mydevices you will need to add integration. To add the Mydevices integration, perform the following steps:



Step 3: Create an account or log in Mydevices.

Step 4: Search the LSN50 and add DevEUI.

Use the LSN50 v1.6+ for the firmware version > v1.6 under LoRa --> The things network

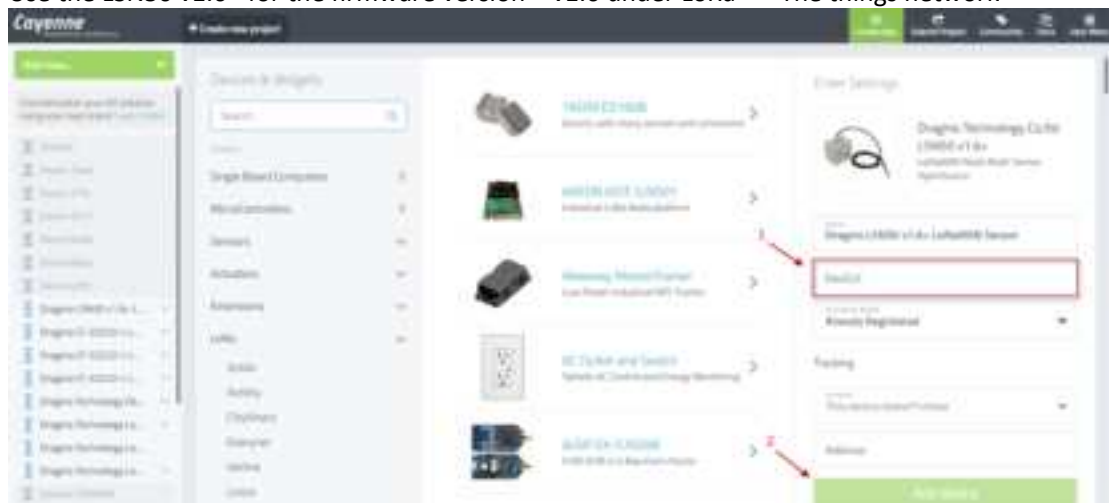

After added, the sensor data arrive TTN, it will also arrive and show in Mydevices.

Example for AT+MOD=1 plus SHT20 + DS18B20 sensor:



MOD=2



MOD=3.



2.7 Firmware Change Log

[Firmware download link](#)

V1.6.3 Firmware(Not Release)

- Add AT+5VT command to control 5v output time.
- Fix payload order error generate in v1.6.2

V1.6.2 Firmware

- Add mode 5: weight mode by HX711 sensor
- Update LoRaWAN stack to DR-LWS-002

V1.6.1 Firmware:

- Add 3 x DS18B20 mod

V1.6 Firmware:

- Improve Interrupt feature.
- Downlink to change AT+CFM. Downlink to change AT+INTMOD
- Add 3ADC + I2C mode.
- Fix power consumption bug in v1.5.
- Fix SHT20, SHT31 reading bug.

V1.5 Firmware:

- Add ultrasonic sensor support.
- Add AT+MOD command to select difference sensors: (Ultrasonic, I2C) (See update AT Command manual)
- Add Downlink command to change TDC and reset the device.
- Add AT+TXP command to be able manually set the exact TX Gain (See update AT Command manual)

V1.4 Firmware:

- Adjust payload, the default firmware include SHT20 and SHT31, If there is no SHT20, SHT31, the related filed will show FF FF FF FF
- Adjust 868 & 915 payload into 11 bytes, now 868 & 915 has same payload
- Fix the 85 degree bug for DS18B20
- Add new AT command which can adjust RX window time for LG01/LG02
- Add AT command to print all parameters.
- Any FPORT can accept downlink message and print.

v1.3 Firmware:

- Add new AT Commands: AT+CHS & AT+CHE
- Change AT+FDR command. This command will reset to factory except the keys
- +5v power will only enable when read sensor data
- Optimize OTAA join procedure. The first 50 joins will act as per LoRaWAN request(request join every few seconds), if devices have not joined in network, the Join Interval will extend to 30 minutes. If devices still not join at 200 tries, it will restart and start to Join again.
- Now print Device Model/Frequency bands/ Image Version/Dev EUI at start.

V1.2 Firmware:

- Support Class C
- After the configuration key can be stored in. No need to configure again even after power off.
- Add auto send feature after power on
- Solve negative temperature issue.
- Support Mydevices_LPP payload, user need to recompile firmware again.

V1.1 Firmware:

- Support Battery Voltage(mV) ,the data of Oil Sensor ,the data of DS18B20, Digital I/O, ADC_IN1(PA1),
- Proximity switch, I2C Device Example

V1.0 Firmware:

- Support ADC monitoring (See how to in the case study of Oil Sensor) and DS18B20 (See how to in the case study of DS18B20)

2.8 Battery Analysis

2.8.1 Battery Type

The LSN50 battery is a combination of a 4000mAh Li/SOCI2 Battery and a Super Capacitor. The battery is non-rechargeable battery type with a low discharge rate (<2% per year). This type of battery is commonly used in IoT devices such as water meter.

The battery is designed to last for more than 5 years for the LSN50.

The battery related documents as below:

- [Battery Dimension](#),
- [Lithium-Thionyl Chloride Battery](#) datasheet, [Tech Spec](#)
- [Lithium-ion Battery-Capacitor](#) datasheet, [Tech Spec](#)



2.8.2 Power consumption Analyze

When connect to different sensors, it is good to test the power consumption with the sensor working. User can remove the ON/OFF Jumper of LSN50, and connect a multimeter between the two pins of this header and measure the current to know the whole system power consumption. Because the sleep mode will have as low as 10uA, at least 4.5 digit multimeter is required to measure this level of current.

A victor VC86E is recommended.




In a minimum system with DS18B20 and Oil Sensor and default firmware, the power consumption includes:

1. Deep Sleep (Stop mode) for STM32. ~ 5uA

2. Sampling current while reading DS18B20 and Oil Sensor
 - Oil Sensor sampling time: 200us, current: 0.3mA
 - DS18B20 sampling time: 750ms, current: 0.64mA
 - Above power should add 8mA CPU power in working mode.
3. LoRaWAN transmit and receive time consumption. The LoRa TX / RX time and power can be found in the [LoRa calculator tool](#).

In a typical LoRaWAN data transmit. The energy profile is as below:

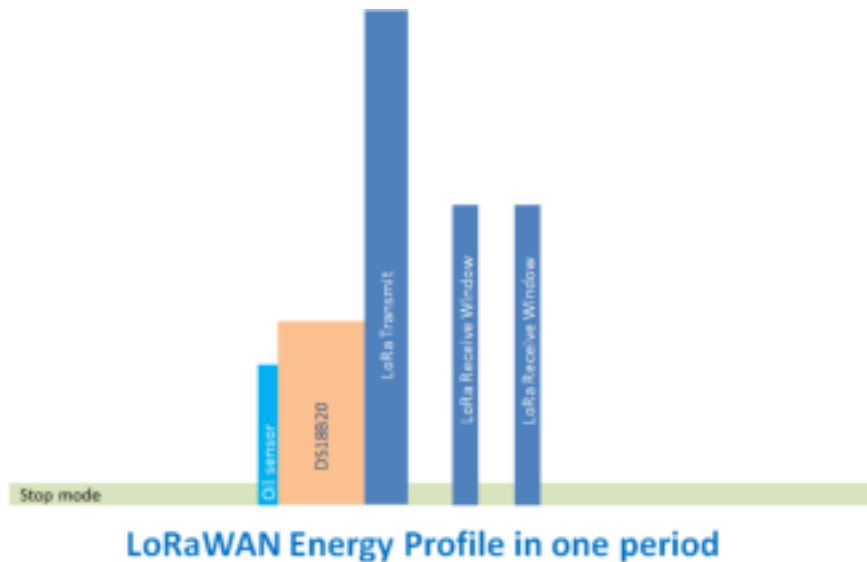

In the LoRaWAN protocol, the device will transfer in different LoRa Radio, and have different energy profile in LoRa part. We can calculate the battery life in two cases:

- 1) Lower power LoRa radio. Device has a good signal to gateway
- 2) Higher power LoRa radio. Device has a poor signal to gateway

Low Power Case:

- Radio Parameter: SF7, 125kHz, 20dbm
- Transmit interval: 15 minutes.
- Payload: 8 Bytes.

High Power Case:

- Radio Parameter: SF10, 125kHz, 20dbm
- Transmit interval: 15 minutes.
- Payload: 8 Bytes.

To simplify the calculation, we can:

- Combine oil sensor and DS18B20 sampling energy together to **751ms@8.64ma**
- Combine the two RX windows together.

There is a [power consumption tool](#) for easy analysis. Below is the analysis result.

Scenarios		A	B	C	D	E	F
Time	Units	Scenario_A	Scenario_B	Scenario_C	Scenario_D	Scenario_E	Scenario_F
Sleep	ms	15	15	15			
Sampling	ms	751	751	908			
Transmit	ms	180	274.4	34.2			
Receive	ms	72	481.4	82			
Radio type		3F7_125K_20dB	3F10_125K_20dB	3F7_125K_14dB			
# of bytes transmitted		8	8	8			
Total System Current							
Sleep	mA	0.005	0.005	0.005			
Sampling	mA	0.54	0.54	0.54			
Transmit	mA	133	133	52			
Receive	mA	18.8	18.8	18.8			
Micro-Controller Active power (mW)							
							8
Power usage comparison							
Sleep	%	22.82%	9.87%	40.82%	0.00%	0.00%	0.00%
Sampling	%	2.45%	0.95%	29.82%	0.00%	0.00%	0.00%
Transmit	%	87.74%	71.88%	18.18%	0.00%	0.00%	0.00%
Receive	%	0.89%	18.22%	11.88%	0.00%	0.00%	0.00%
Legend: Red = 100%, Green = 100%							
Average current	mA	0.021793472	0.056254259	0.012180597	0	0	0
Design Goals							
System efficiency		90%	90%	90%	90%	90%	90%
Target battery life	yr	2	2	2	2	2	2
Required battery capacity	mAh	424.54	988.83	257.25	8.86	8.86	8.86
Given battery capacity	mAh	4000	4000	4000	4000	4000	4000
Estimated battery life	yr	18.64	7.38	33.71	8.86	8.86	8.86

Note: Ignore the 18 year result, because the battery has a max 2% discharge per year.

2.8.3 Battery Note

The Li-SiCO battery is designed for small current / long period application. It is not good to use a high current, short period transmit method. The recommended minimum period for use of this battery is 5 minutes. If you use a shorter period time to transmit LoRa, then the battery life may be decreased.

2.8.4 Replace the battery

 
 
You can change the battery in the LSN50. The type of battery is not limited as long as the output is between 3v to 3.6v. On the main board, there is a diode (D1) between the battery and the main circuit. If you need to use a battery with less than 3.3v, please remove the D1 and shortcut the two pads of it so there won't be voltage drop between battery and main board.

The default battery pack of LSN50 includes a ER18505 plus super capacitor. If user can't find this pack locally, they can find ER18505 or equivalence, which will also work in most case. The SPC can enlarge the battery life for high frequency use (update period below 5 minutes)

3. Using the AT Commands

3.1 Access AT Commands

LSN50 supports AT Command set in the stock firmware. You can use a USB to TTL adapter to connect to LSN50 for using AT command, as below.



(http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/&file=DRAGINO_STM_AT_Commands_v1.3.pdf)

AT+<CMD>? : Help on <CMD>
AT+<CMD> : Run <CMD>
AT+<CMD>=<value> : Set the value
AT+<CMD>=? : Get the value

General Commands

AT : Attention
AT? : Short Help
ATZ : MCU Reset
AT+TDC : Application Data Transmission Interval

Keys, IDs and EUIs management

AT+APPEUI : Application EUI
AT+APPKEY : Application Key
AT+APPSKEY : Application Session Key
AT+DADDR : Device Address
AT+DEUI : Device EUI
AT+NWKID : Network ID (You can enter this command change only after successful network connection)
AT+NWKSKEY : Network Session Key Joining and sending date on LoRa network
AT+CFM : Confirm Mode
AT+CFS : Confirm Status
AT+JOIN : Join LoRa? Network
AT+NJM : LoRa? Network Join Mode
AT+NJS : LoRa? Network Join Status
AT+RECV : Print Last Received Data in Raw Format
AT+RECVB : Print Last Received Data in Binary Format
AT+SEND : Send Text Data
AT+SENB : Send Hexadecimal Data

LoRa Network Management

AT+ADR : Adaptive Rate
AT+CLASS : LoRa Class(Currently only support class A)
AT+DCS : Duty Cycle Setting
AT+DR : Data Rate (Can Only be Modified after ADR=0)
AT+FCD : Frame Counter Downlink
AT+FCU : Frame Counter Uplink
AT+JN1DL : Join Accept Delay1
AT+JN2DL : Join Accept Delay2
AT+PNM : Public Network Mode
AT+RX1DL : Receive Delay1
AT+RX2DL : Receive Delay2
AT+RX2DR : Rx2 Window Data Rate
AT+RX2FQ : Rx2 Window Frequency
AT+TXP : Transmit Power

Information

AT+RSSI : RSSI of the Last Received Packet
AT+SNR : SNR of the Last Received Packet
AT+VER : Image Version and Frequency Band
AT+FDR : Factory Data Reset
AT+PORT : Application Port
AT+CHS : Get or Set Frequency (Unit: Hz) for Single Channel Mode

3.2 Common AT Command Sequence

3.2.1 Multi-channel ABP mode (Use with SX1301/LG308)

If device has not joined network via OTAA:

AT+FDR

AT+NJM=0

ATZ

If device already joined network:

AT+NJM=0

ATZ

3.2.2 Single-channel ABP mode (Use with LG01/LG02)

See [Sect 6.7](#)

4. Upload Firmware

Notes:

- Since image v1.3, the firmware will show version info during boot. If your device doesn't show version info, you may have a very old image version.
- Always run AT+FDR to reset parameters to factory default after an update image.
If the update is from image \geq v1.3 to another image version \geq v1.3, then the keys will be kept after running AT+FDR.
Otherwise (e.g. from v1.2 to v1.3), AT+FDR may erase the keys.

4.1 Upload Firmware via Serial Port


The LSN50's AT Command port can be used for firmware upgrade. The hardware connection for upgrade firmware is as below:



Step1: Download [flash loader](#).

Step2: Download the [LSN50 Image files](#).

Step3: Open flashloader; choose the correct COM port to update

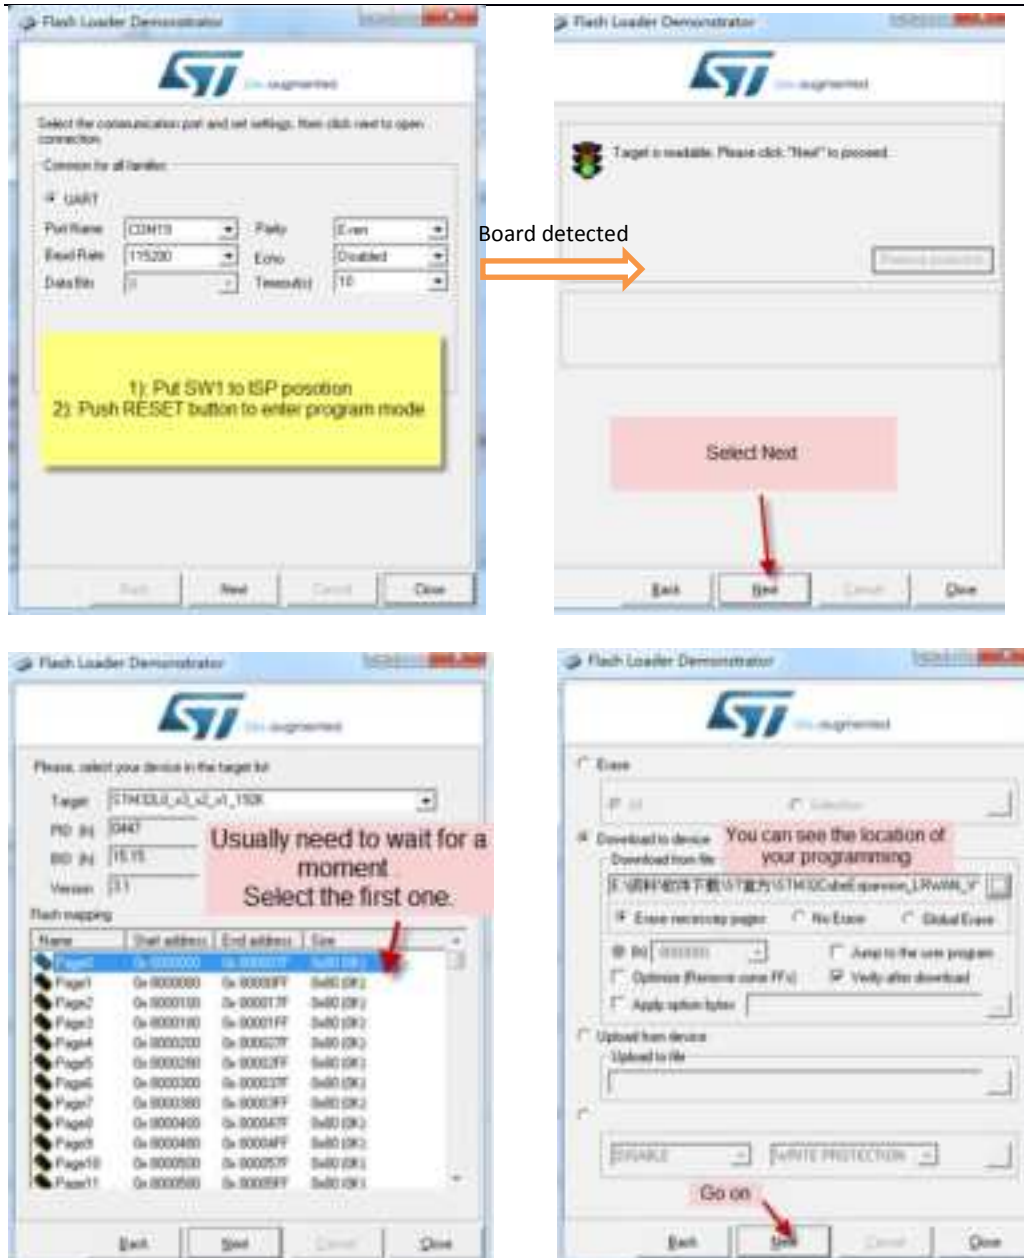




Step4: Switch SW1 back to flash state and push the RESET button.
The LSN50 will then run the new firmware.

4.2 Upload Firmware via ST-Link V2

You can use ST-LINK to upgrade firmware into LSN50. The hardware connection for upgrade firmware is as below:

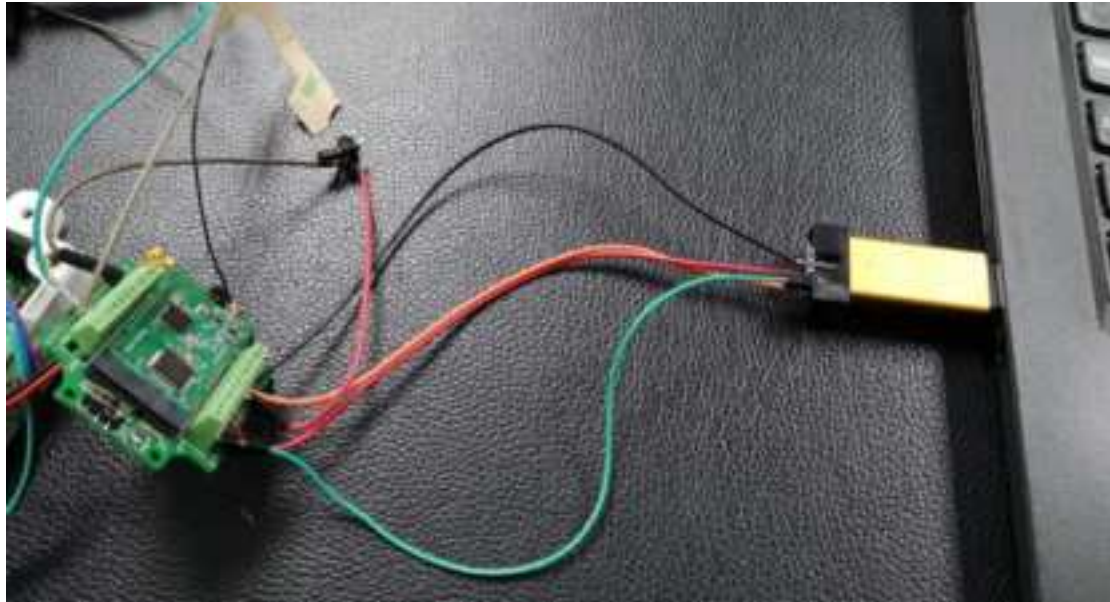

Connection:

- ST-LINK v2 GND <--> LSN50 GND
- ST-LINK v2 SWCLK <--> LSN50 PA14
- ST-LINK v2 SWDIO <--> LSN50 PA13
- ST-LINK v2 RST <--> LSN50 NRST.

Step1: Install [ST-LINK driver](#) first and then install [ST-LINK Utility](#)

Step2: Download the [LSN50 Image files](#).


Step3: Open ST-LINK utility, **file --> open file** to select the image to be upgraded.

Step4: Click the “**Program Verify**” button on ST-LINK.



Step5: The led on the ST-LINK adapter will now blinking, and the ST-Link utility will pop up a download window. Click the start button to download the image to LSN50.

NOTE: If this step fails, ST-LINK can't establish connection to LSN50, please try to swap SWDIO & SWCLK pin. Some ST-LINK v2 devices are incorrectly marked.

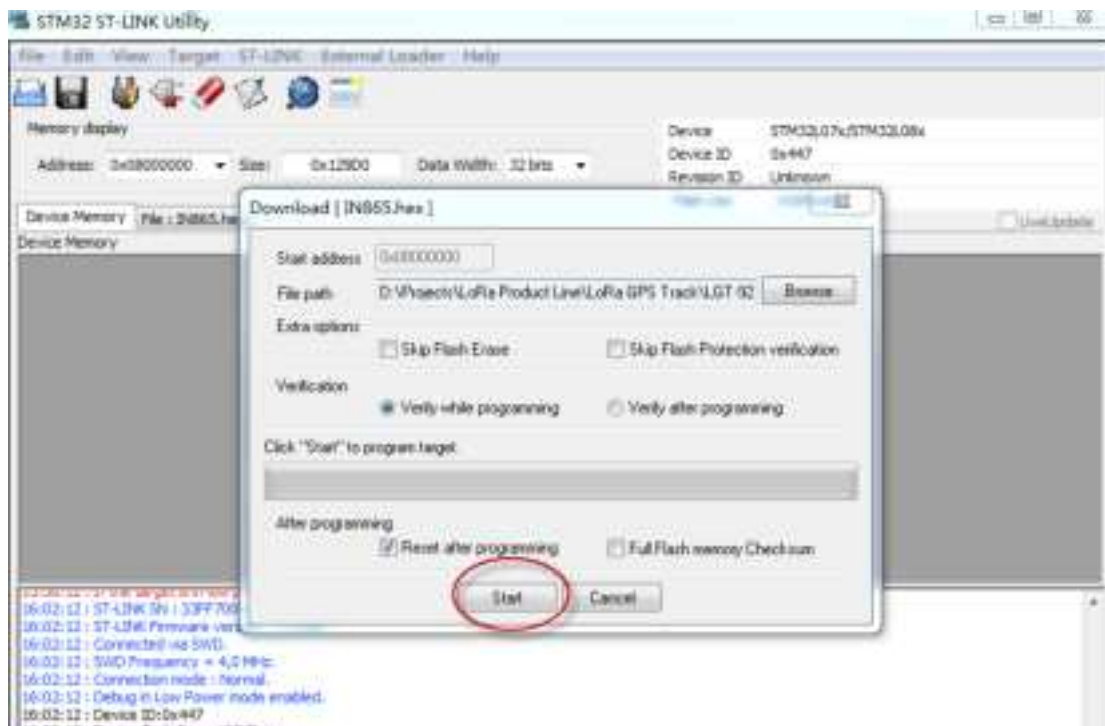

5. Developer Guide

[Software Source Code Download Link.](https://github.com/dragino/LoRa_STM32/tree/master/STM32CubeExpansion_LRWAN)

(https://github.com/dragino/LoRa_STM32/tree/master/STM32CubeExpansion_LRWAN)

[Hardware Source Code Download Link](https://github.com/dragino/Lora/tree/master/LSN50)

(<https://github.com/dragino/Lora/tree/master/LSN50>)


LSN50 is an open source project, developer can use compile their firmware for customized applications. User can get the source code from:

- Software Source Code:
https://github.com/dragino/LoRa_STM32/tree/master/STM32CubeExpansion_LRWAN
- Hardware Design files:
<https://github.com/dragino/Lora/tree/master/LSN50>
- Compile instruction:
http://wiki.dragino.com/index.php?title=Firmware_Compile_Instruction_--_STM32


Use Keil to open project file:

STM32CubeExpansion_LRWAN/Projects/Multi/Applications/LoRa/DRAGINO-LRWAN(AT)/MDK-ARM/STM32L072CZ-Nucleo/Lora.uvprojx

In Keil, you can see what frequency band the code support.

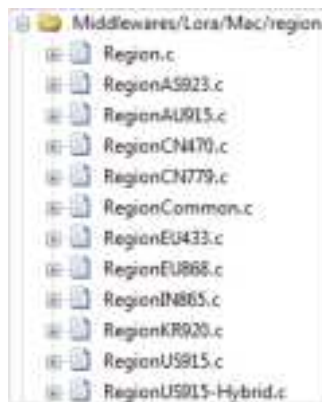

1. If you want to change frequency, modify the Preprocessor Symbols.
For example, change EU868 to US915

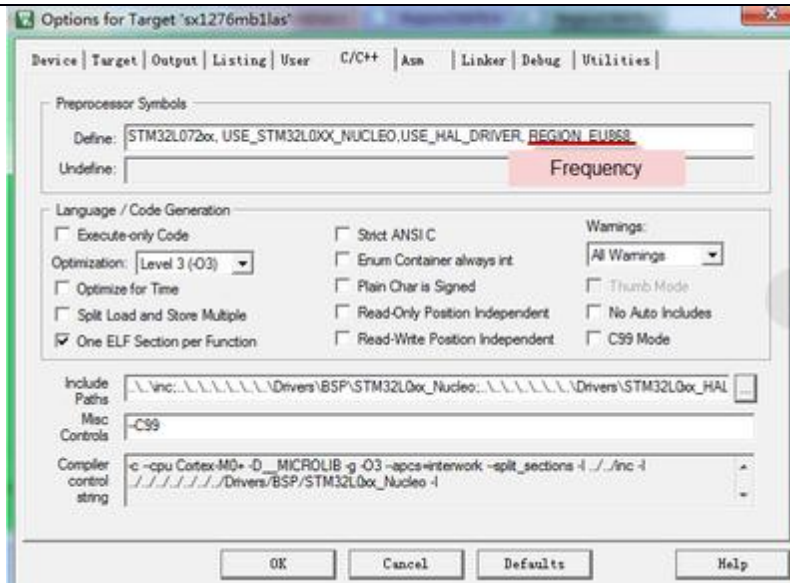

2. Compile and build



6. FAQ

6.1 Why there is 433/868/915 version?

Different countries have different rules for the ISM band for LoRa. Although the LoRa chip can support a wide range of Frequencies, we provide different versions of the hardware for best tune of the LoRa hardware part.

6.2 What is the frequency range of LT LoRa part?

Different LT version supports different frequency range, below is the table for the working frequency and recommend bands for each model.

Version	LoRa IC	Working Frequency	Best Tune Frequency	Recommend Bands
915	SX1276	Band1(HF):902 ~928 Mhz	915Mhz	AS923/AU915/ KR920/US915

6.3 How to change the LoRa Frequency Bands/Region?

You can follow the instructions for [how to upgrade image](#).

When downloading the images, choose the required image file for download.

6.4 Can I use Private LoRa protocol?

The stock firmware is based on LoRaWAN protocol. You can use a private LoRa protocol in LSN50. This section describes an example for base LoRa transfer. It is a reference/demo and we do not provide further software development support on this topic.

In this demo, we will show the communication between LoRa Shield and LSN50, both of them using the basic LoRa library. LSN50 will send a message to a LoRa Shield and the LoRa Shield will print it to the console.

LoRa Shield + UNO:

Use the [LoRa Library](#) and upload the [LoRa Receive](#) Sketch to Arduino.

Refs:

http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/LoRa_Raw_Example/Arduino/&file=LoRa.zip

http://www.dragino.com/downloads/downloads/LSN50-LoRaST/LoRa_Raw_Example/Arduino/LoRaReceiver.ino

Open the serial monitor to Arduino. The device acts as a LoRa Receiver and listen on the frequency 868.3Mhz by default.

LSN50:

Use the <[LoRa RAW code](#)> . The project file is in: MDK-ARM\STM32L072CZ-Nucleo\Lora.uvprojx

[Compile](#) it and [Upload](#) it to LSN50, the LSN50 will transfer on the frequency 868.3Mhz.

In the Arduino Console, it will see the received packets as below.



```
LoRa Receiver
Received packet 'Hello,LoRa shield' with RSSI -72
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -32
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -34
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -33
```

6.5 How to set up LSN50 to work with Single Channel Gateway such as LG01/LG02?

In this case, users need to set LSN50 to work in ABP mode and transmit in only one frequency.

Assume we have a LG02 working in the frequency 868400000 now, below is the steps.

Step1: Log in TTN, Create an ABP device in the application and input the network session key (NETSKEY), app session key (APPSKEY) from the device.

Applications > dragino_test_application1 > Devices > 23232

Application ID

dragino_test_application1

Device ID

23232

Description

LT-33222-4-5645

Activation Method

ABP

Device EUI

<> == 00 89 34 EE 87 8A 98 34

Application EUI

<> == 70 83 05 7E F8 00 46 18

Device Address

<> == 28 80 3A F3

Network Session Key

<> == @ 00 86 97 F6 8D 8E 7F 43 CE 69 44 4F 26 64 56 45

App Session Key

<> == @ 78 48 83 5C D6 8E 8B 2F 8B C8 47 88 13 21 FE 34

Status

4 minutes ago

In ABP mode, The device Address, Network Session Key, App Session Key must match between the End Node and LoRaWAN server


Note: You need to make sure the above three keys match in the device and in TTN. You can change them either in TTN or in the Device to make them match. In TTN, NETSKEY and APPSKEY can be configured in the setting page, but the Device Addr is generated by TTN. You can also change the Device ADDR in TTN by using the [The Things Network CLI](#).

Step2: Run AT commands to make the LSN50 work in Single frequency and ABP mode.

Below are the AT commands:

```
AT+FDR Reset Parameters to Factory Default, Keys Reserve
AT+NJM=0 Set to ABP mode
AT+ADR=0 Set the Adaptive Data Rate Off
AT+DR=5 Set Data Rate (Set AT+DR=3 for 915 band)
AT+TDC=300000 Set transmit interval to 5 minutes
AT+CHS=868400000 Set transmit frequency to 868.4Mhz
AT+DADDR=26 01 1A F1 Set Device Address to 26 01 1A F1
ATZ Reset MCU
```

As shown below:

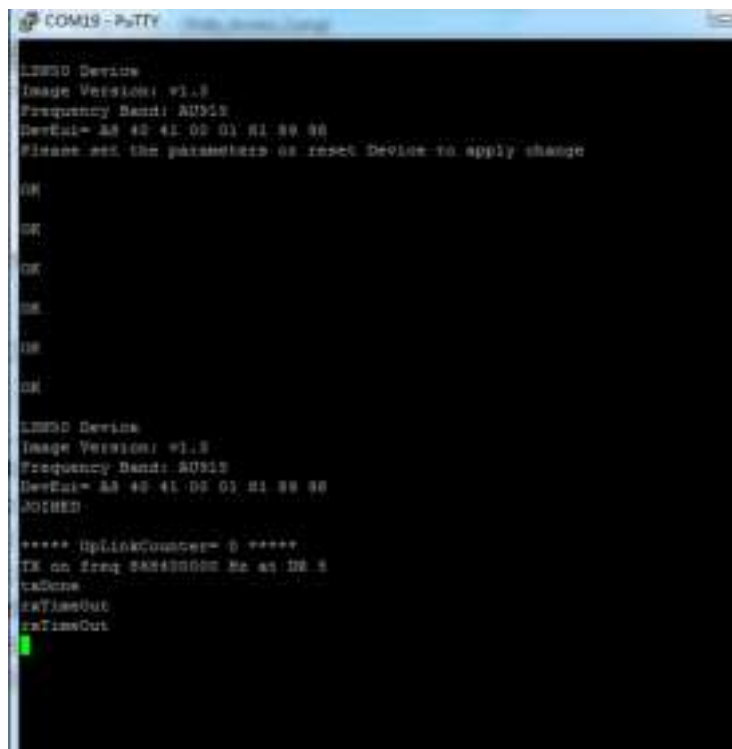

```
COM19 - PTTT
LSN50 Device
Image Version: v1.3
Frequency Band: EU868
DevEui= AA 40 41 00 01 A1 80 00
Please set the parameters as reset Device to apply change

OK
OK
OK
OK
OK
OK
OK
OK

LSN50 Device
Image Version: v1.3
Frequency Band: EU868
DevEui= AA 40 41 00 01 A1 80 00
JOINED

***** HplinkCounter= 0 *****
TX on freq 868400000 Hz at 10.5
txDone
rxTimeOut
rxTimeOut
```

6.6 How to configure the EUI keys in LSN50?

The early version of LSN50 firmware doesn't have pre-configured keys.

It is recommended that you update the image to the latest version before configure the keys.

Refer [upgrade image](#) to update the firmware to the latest version.

Run AT commands to set the keys to desired keys; refer [AT Command manual](#).

7. Trouble Shooting

7.1 Connection problem when uploading firmware.

Please refer to this link:

[http://wiki.dragino.com/index.php?title=Firmware Upgrade Instruction for STM32 base products](http://wiki.dragino.com/index.php?title=Firmware_Upgrade_Instruction_for_STM32_base_products) .

7.2 Why I can't join TTN in US915 / AU915 bands?

Might relate to this:

[http://wiki.dragino.com/index.php?title=LoRaWAN Communication Debug#Notice of US915.2FCN470.2FAU915 Frequency band](http://wiki.dragino.com/index.php?title=LoRaWAN_Communication_Debug#Notice_of_US915.2FCN470.2FAU915_Frequency_band)

7.3 AT Command input doesn't work

In the case if user can see the console output but can't type input to the device. Please check if you already include the **ENTER** while sending out the command. Some serial tool doesn't send **ENTER** while press the send key, user need to add ENTER in their string.

8. Order Info

Part Number: **LSN50-XX-YY or LSN50-v2-XX-YY**

XX: The default frequency band

- **AS923:** LoRaWAN AS923 band
- **AU915:** LoRaWAN AU915 band
- **EU433:** LoRaWAN EU433 band
- **EU868:** LoRaWAN EU868 band
- **KR920:** LoRaWAN KR920 band
- **US915:** LoRaWAN US915 band
- **IN865:** LoRaWAN IN865 band
- **CN470:** LoRaWAN CN470 band

YY:

- **12:** With M12 waterproof cable hole
- **16:** With M16 waterproof cable hole
- **20:** With M20 waterproof cable hole (LSN50 v2 doesn't have this version)
- **NH:** No Hole

9. Packing Info

For LSN50:

Package Includes:

- LSN50 LoRa Sensor Node x 1

Dimension and weight:

- Device Size: 8 x 6.5 x 5 cm
- Device Weight: 137g
- Package Size / pcs : 9 x 7 x 6cm
- Weight / pcs : 160g

For LSN50 v2:

Package Includes:

- LSN50 v2 LoRa Sensor Node x 1
- External antenna x 1
- Spring Antenna (evaluate purpose)

Dimension and weight:

- Device Size: 10 x 4.0 x 4.2 cm
- **Device Weight: 137g**
- **Package Size / pcs : 9 x 7 x 6 cm**
- **Weight / pcs : 160g**

10. Support

- Support is provided Monday to Friday, from 09:00 to 18:00 GMT+8. Due to different timezones we cannot offer live support. However, your questions will be answered as soon as possible in the before-mentioned schedule.
- Provide as much information as possible regarding your enquiry (product models, accurately describe your problem and steps to replicate it etc) and send a mail to

support@dragino.com

11. References

- ✧ [Product Page](#)
(<http://www.dragino.com/products/lora/item/128-lsn50.html>)
- ✧ [Data Sheet](#)
(http://www.dragino.com/downloads/index.php?dir=datasheet/EN/&file=Datasheet_LoRaSensorNode.pdf)
- ✧ [Image Download](#)
(https://github.com/dragino/LoRa_STM32/tree/master/LSN50.hex)
- ✧ [AT Command Manual](#)
(http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/&file=DRAGINO_STM_AT_Commands_v1.3.pdf)
- ✧ Mechanical Drawing:
LSN50 v1:
LSN50 v2:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The distance between user and products should be no less than 20cm