


按照页码顺序,骑马钉装订成册

# REPLAY

HB802-1  
**VELOCITY**  
Electronic Self Balancing Hoverboard



 
**Instruction Manual**

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND  
RETAIN FOR FUTURE USE


## HELMET SAVES LIVES!

**Always wear a properly fitted helmet certified by CPSC (Consumer Product Safety Commission) when you ride your hoverboard.**

**Correct Fitting:** Make sure your helmet covers your forehead.

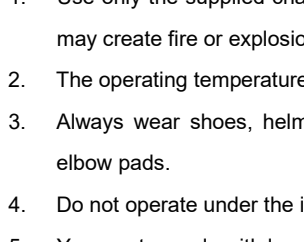

 **Incorrect Fitting:** Forehead is exposed and vulnerable to serious injury.

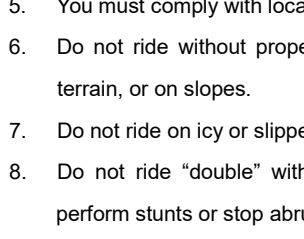

## ⚠️ WARNING

**PLEASE READ THE INSTRUCTION MANUAL THOROUGHLY.**

Thank you for purchasing the VELOCITY Hoverboard. Failure to follow the basic instructions and safety precautions listed in the instruction manual can lead to damage to your device, other property damage, serious bodily injury and even death. Please retain this manual for future use and reference.

 
**CAUTION** when riding the hoverboard in cold temperatures (below 40 degrees F).

Doing so may increase the risk of mechanical failures of the hoverboard, which may lead to damage to your device, other property damage, serious bodily injury and even death.

## SAFETY INSTRUCTIONS

- Keep the device away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the device if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the device.
- Do not use the device if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by the manufacturer. Improper repair voids the warranty and may place the user at serious risk.
- Do not puncture or harm the exterior surface of the product in any way.
- Keep the device free from dust, lint, etc.
- Do not use this device for anything other than its intended use or purpose. Doing so may damage the device or lead to property damage, injury or death.
- This product is not a toy. Keep out of reach of children.
- Do not expose batteries, battery pack, or batteries installed to excessive heat, such as direct sunlight, or open flame.
- Do not allow hands, feet, hair, body parts, clothing or similar articles to come in contact with moving parts, wheels or drive train, while the engine is running.
- Do not operate or allow others to operate the hoverboard, until the user understands all instructions, warnings and safety features described in this manual.
- Check with your doctor if you have a medical condition that could affect your ability to use this hoverboard.

## DESCRIPTION OF PARTS

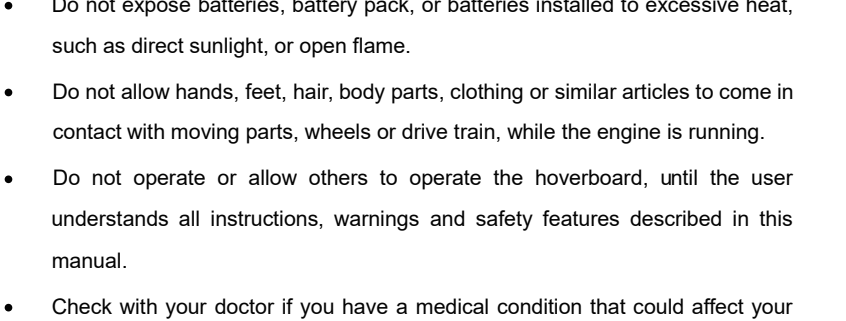

## GETTING STARTED

- Remove the product from the box.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

## PACKAGE CONTENTS

- Hoverboard
- Wall Charger
- Instruction Manual

## KEY FEATURES

- Electronic Self Balancing Hoverboard
- Traction and stability
- Multi-colored LED footpad lights
- Light bars and movement LEDs
- Built-in Bluetooth speaker
- Built-in rechargeable battery

 
## INSTRUCTIONS FOR USE



Please read the following instructions carefully.

## BATTERY SPECIFICATIONS

Battery Type: Rechargeable lithium-ion battery  
Fully Charging Time: 5 hours  
Voltage: 36V  
InNet Capacity: 4.0 Ah

1 Fender	6 Tire
2 Right Foot Mat	7 LED Light
3 Battery Indicator	8 Power Button (located in rear)
4 System Indicator	9 Charge Port (located in rear)
5 Left Foot Mat	10 Speaker (bottom)
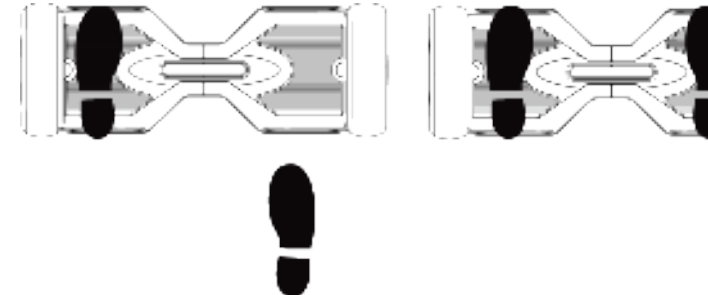
<p><b>BATTERY POWER</b></p> <p>You must be driving your Hoverboard, if it displays low power, otherwise it may affect performance.</p> <ul style="list-style-type: none"> <li>Do not use the battery if it emits an odor.</li> <li>Do not use the battery if it is leaking.</li> <li>Do not allow children or animals near the battery.</li> <li>Remove the charger prior to driving.</li> <li>The battery contains dangerous substances. DO NOT OPEN THE BATTERY. DO NOT INSERT ANYTHING INTO THE BATTERY.</li> <li>Only use the charger that was provided with the Hoverboard. DO NOT USE ANY OTHER CHARGERS.</li> <li>Do not charge a battery that has been overly discharged.</li> <li>Dispose of the battery in accordance with local laws.</li> </ul> <p><b>CHARGING</b></p> <p>Only use the charger that was provided with your Hoverboard.</p> <ul style="list-style-type: none"> <li>Ensure that the charging port is dry.</li> <li>Plug the charging cable into the Hoverboard.</li> <li>Connect the charging cable to the power supply.</li> <li>The red light indicates that it has begun charging. If the light is green, check whether the cable is connected correctly.</li> <li>When the indicator light turns from red to green, this indicates that the battery is fully charged. At this time, please stop charging. Overcharging will affect performance.</li> <li>Use a standard AC outlet.</li> <li>Charging time up to 5 hours.</li> <li>Keep the charging environment clean and dry.</li> </ul> <p><b>TURNING ON/OFF THE HOVERBOARD</b></p> <p>Power On: Place the hoverboard on a flat surface. To turn on your hoverboard,</p>	<p>Press the power button (located in rear) once, check the battery indicator light should be lit, indicating the hoverboard is powered on.</p> <p>Power Off: Press the power button once.</p> <p><b>MAT SENSOR</b></p> <p>There are four sensors under the foot mats. When the user steps on the mats, the Hoverboard will automatically initiate self-balance mode.</p> <p>While driving the Hoverboard, you must be sure to step on the foot mats evenly. DO NOT STEP ON ANY AREA OTHER THAN THE MATS.</p> <p>Please do not put items on the mats. This will make the Hoverboard switch on, which could potentially cause injury to people, or damage to the unit.</p> <p><b>BATTERY DISPLAY</b></p> <p>The display board is located in the middle of the hoverboard.</p> <ul style="list-style-type: none"> <li>Solid Green LED light indicates the hoverboard is fully charged.</li> <li>Red LED light and beeping indicates low battery.</li> <li>Yellow light indicates the board is charging.</li> </ul> <p>When the LED light turns red, please recharge the device.</p> <p><b>SYSTEM INDICATOR</b></p> <p>When the user triggers the foot mats, the system indicator will light up, which means that the system enters the running state.</p> <p>When the system has an error during operation, the system indicator will turn red (for more details see SAFETY ALERTS).</p> <p><b>PAIRING THE SPEAKER WITH BLUETOOTH DEVICE</b></p> <ol style="list-style-type: none"> <li>Turn on the hoverboard and you would hear an indication tone that indicates the unit's speaker is now in pairing mode.</li> </ol>	<ol style="list-style-type: none"> <li>Place the hoverboard and the Bluetooth device so that they are no further than 30 feet apart.</li> <li>Activate the Bluetooth function on your device, select the "VELOCITY" from the list of available Bluetooth devices.</li> <li>You might be prompted with "Pair with VELOCITY?" message on your source device, with "Cancel" and "OK" options. Please click "OK".</li> <li>If required, enter the password "0000" to confirm &amp; finalize pairing.</li> <li>Once paired successful, an indication tone will be heard, and you can now start to use the device.</li> <li>If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.</li> <li>Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.</li> <li>Once the speaker is paired with your device, the music will transmit through the speaker. Volume and controls will be under your music device.</li> </ol> <p>Should you encounter any problems while streaming, please refer to your device's instruction manual for further information.</p> <p><b>BEFORE RIDING</b></p> <p>It is important that you fully understand all elements of your hoverboard. If these elements are not used correctly, you will not have full control of your hoverboard. Before you ride, learn the functions of the various mechanisms on your hoverboard. Practice using these elements of your hoverboard at slow speeds in a flat, open area before taking the device out in public areas.</p> <p><b>PRE-RIDE CHECKLIST</b></p> <p>Ensure that your hoverboard is in proper working order each and every time you ride. If a part of the hoverboard does not function correctly, please contact our customer support center.</p>	<ul style="list-style-type: none"> <li>Ensure the battery is fully charged before riding your hoverboard.</li> <li>Wear your all appropriate safety and protective gear as previously mentioned in the instruction manual before operating your hoverboard.</li> <li>Make sure to wear comfortable clothes and flat closed-toe shoes when operating your hoverboard.</li> <li>Please read carefully the Instruction Manual, which will assist in explaining the basic working principles and provide tips on how to best enjoy your experience.</li> </ul> <p><b>SAFETY PRECAUTIONS</b></p> <p>Different localities and countries have different laws governing riding on public roads, and you should check with local officials to ensure you are complying with these laws.</p> <p>REPLA is not liable for tickets or violations given to riders who do not follow local laws and regulations.</p> <ul style="list-style-type: none"> <li>For your safety, always wear a helmet and wrist guards that meet CPSC safety standards. In the event of an accident, a helmet and wrist guards can protect you from serious injury and in some cases, even death.</li> <li>Obeey all local traffic laws. Obeey red and green lights, one-way streets, stop signs, pedestrian crosswalks, etc.</li> <li>Give pedestrians the right-of-way.</li> <li>Do not ride too close to pedestrians and alert them if you intend to pass them from behind.</li> <li>Your hoverboard is not equipped with reflectors. It is not recommended that you ride in conditions of low visibility.</li> </ul> <p>Think about safety when you ride. You can prevent many accidents if you think about safety. Being a helpful checklist for compact riders.</p> <p><b>SAFE DRIVING</b></p> <p>Carefully read the following safety precautions prior to operating your Hoverboard:</p>	<ul style="list-style-type: none"> <li>When you are driving the Hoverboard, make sure to take all necessary safety measures such as wearing a CPSC certified helmet, knee pads, elbow pads, and other protective gear.</li> <li>The Hoverboard should only be used for personal use and is not designed for commercial applications, or for use on public roads or pathways.</li> <li>You are prohibited from using the Hoverboard on any roadway. Check with your local authorities to confirm where you can safely ride. Obeey all laws that apply.</li> <li>Do not allow children, the elderly, or pregnant women to ride the Hoverboard.</li> <li>Do not drive the Hoverboard under the influence of drugs or alcohol.</li> <li>Do not carry items when driving your Hoverboard.</li> <li>Be alert of obstacles in front of you.</li> <li>Legs should be relaxed, with your knees slightly bent to help you balance.</li> <li>Make sure your feet are always on the mats.</li> <li>The Hoverboard should only be driven by one person at a time.</li> <li>Do not exceed the maximum load.</li> <li>Keep a safe distance from others while driving your Hoverboard.</li> <li>Do not engage in distracting activities while driving your Hoverboard, such as talking on the phone, listening to headphones, etc.</li> <li>Do not drive on slippery surfaces.</li> <li>Do not make reverse turns at high speeds.</li> <li>Do not drive in dark places.</li> <li>Do not drive over obstacles (twigs, litter, stones, etc.)</li> <li>Do not drive in narrow passages.</li> <li>Avoid driving in unsafe locations (around flammable gas, steam, liquid, etc.).</li> <li>Check and secure all fasteners prior to driving.</li> <li>The Hoverboard is recommended for riders ages 15 and older.</li> </ul>	<p>procedures.</p> <p>Make sure the hoverboard is fully charged before your initial use. For charging instructions, please follow details under Charging.</p> <p>Stand directly behind your device and place one foot on the corresponding foot mat (as described in the diagram below). Keep your weight on the foot which is still on the ground, otherwise the device may begin to move or vibrate, making it difficult to step on evenly with your other foot. When you are ready, shift your weight to the foot already placed on the device and step with your second foot quickly and evenly (as described in the diagram below).</p>  <p>Find your center of gravity. If your weight is distributed correctly on the foot mats and your center of gravity is level, you should be able to stand on your device just as if you were standing on the ground.</p> <p>On average, it takes 3-5 minutes just to get comfortable standing on your device and maintaining proper balance. Having a spotter will help you feel more secure. The hoverboard is an incredibly intuitive device; it senses even the slightest bit of motion, so having any anxiety or reservation about stepping on may cause you to panic and trigger unwanted movement.</p> <p>When you first begin using your device, the fastest way to move in your desired direction is to focus in that direction. You will notice that just thinking about which way you would like to go will shift your center of gravity, and that subtle movement will propel you in that direction.</p> <p>Your center of gravity determines which direction you move, accelerate, decelerate,</p>
6	7	8	9	10	11
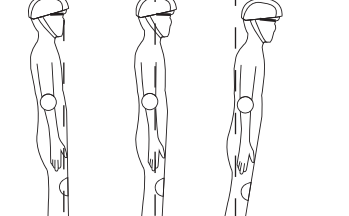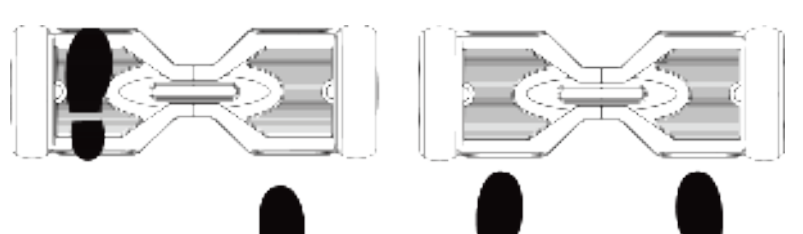  
<p>and come to a complete stop. As described in the diagram below, tilt your center of gravity in the direction you wish to move.</p> <p>To turn, focus on the direction you wish to turn and stay relaxed.</p> <p>As you get comfortable on the device, you will notice it becomes easier to maneuver. Remember at higher speeds, it is necessary to shift your weight to overcome the centrifugal force.</p> <p>Bend your knees if you encounter bumps or uneven surfaces, then dismount and carry your hoverboard to a safe operating surface.</p>  <p>Dismounting your device can be one of the easiest steps, yet when done incorrectly, may cause you to fall. To properly dismount, from a stopped position, lift one leg up and set your foot back down on the ground (STEPPING BACK). Then step off completely as described in the following diagram.</p> 	<p><b>WEIGHT AND SPEED LIMITATIONS</b></p> <p>Speed and weight limits are set for your own safety. Please do not exceed the limits listed here in the manual.</p> <ul style="list-style-type: none"> <li>Maximum Weight: 220 lbs.</li> <li>Minimum Weight: 44 lbs.</li> <li>Maximum Speed: Up to 7 mph</li> </ul> <p><b>OPERATING RANGE</b></p> <p>The hoverboard can travel a distance up to 7 miles on a fully charged battery in ideal conditions. The following are some of the major factors that will affect the operating range of your device.</p> <ul style="list-style-type: none"> <li>Terrain: Riding distance is highest when riding on a smooth, flat surface. Riding uphill or on rough terrain will reduce distance significantly.</li> <li>Weight: A lighter user will have further range than a heavier user.</li> <li>Ambient Temperature: Please ride and store the device under recommended temperatures, which will increase driving distance, battery life, and overall performance of your device.</li> <li>Speed and riding style: Maintaining a moderate and consistent speed while riding produces maximum distance. Traveling at high speeds for extended periods, frequent starts and stops, lifting and frequent acceleration or deceleration will decrease overall distance.</li> </ul> <p><b>BALANCE &amp; CALIBRATION</b></p> <p>If your hoverboard is unbalanced, vibrating, or not turning properly, you can follow below steps to calibrate it.</p> <ul style="list-style-type: none"> <li>First, place the hoverboard on a flat, horizontal surface such as the floor or a table. The foot mats should be even with each other and not tilted forward or backward. Make sure the charger is not plugged in and the hoverboard is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Press and hold the power button for a total of 15 seconds when you hear a beep sound. The hoverboard will turn on, lighting the battery indicator on the board.</li> <li>Turn the hoverboard off and then turn it back on. Calibration will now be completed.</li> </ul> <p><b>SAFETY ALERTS</b></p> <p>While riding your hoverboard, if there is a system error or illegal operation performed the device will prompt the user in a variety of ways.</p> <p>You will notice the system indicator will turn Red and you will hear a beep sound alerting you to take precaution and cease operation, which may make the device stop suddenly.</p> <p>The following are common occurrences where you will hear the safety alerts. These notices should not be ignored, but appropriate action should be taken to correct any illegal operation, failure or errors.</p> <ul style="list-style-type: none"> <li>Unsafe riding surfaces (uneven, too steep, unsafe, etc.)</li> <li>When you step on the device, if the platform is tilted more than 10 degrees forward or backward.</li> <li>Battery voltage is too low.</li> <li>The device is still under charging.</li> <li>During operation, the platform self initiates to tilt due to excess speed.</li> <li>Overheating, or motor temperature is too high.</li> <li>The device has been rocking back and forth over 30 seconds.</li> <li>If the system enters protection mode, the alarm indicator will light up and the board will vibrate. This typically occurs when the battery is about to run out of power and stop abruptly.</li> <li>If the platform is tilted forward or backward more than 10 degrees, your</li> </ul>	<p>hoverboard will power off and stop suddenly, possibly causing the rider to lose balance or fall off.</p> <ul style="list-style-type: none"> <li>If any or both tires are blocked, the device will stop after 2 seconds.</li> <li>When the battery level has depleted below protection mode, the device engine will power off and stop after 15 seconds.</li> <li>While sustaining a high discharge current during use (such as driving up a steep slope for a long period of time), the device engine will power off and stop after 15 seconds.</li> </ul> <p><b>CARE &amp; MAINTENANCE</b></p> <ul style="list-style-type: none"> <li>Do not expose the device to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.</li> <li>Do not use abrasive cleaning agents to clean the device.</li> <li>Do not expose the device to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.</li> <li>Do not dispose of the device in fire as it may explode or combust.</li> <li>Do not dispose of the device to contact with sharp objects as this will cause scratches and damage.</li> <li>Do not allow the device fall from high places, as doing so may damage the internal circuitry.</li> <li>Do not attempt to disassemble the device.</li> </ul> <p><b>SPECIFICATIONS</b></p> <p>Product size: (W)24.64x(D)8.58x(H)8.07inch (62.6x21.8x20.5cm)</p> <p>Net Weight: 20.06 lbs. (9.1 kg)</p> <p>Max Speed: Up to 7 mph (11.3 km/h)</p> <p>Max Distance Range: 7 miles (11.3 km) (110 lbs./50kg rider)</p> <p>Max Climbing Angle: 12°</p>	<p>Battery Type: Lithium-ion  Battery Voltage: 36V  Battery Capacity: 4.0 Ah  Power Requirement: AC 100-240V, 50/60 Hz  Wheel Size: 8 Inches (20.32 cm)  The Type: Non-Pneumatic Solid Tires  Bluetooth Range: 27-33 feet</p> <p><b>FCG INSTRUCTIONS</b></p> <p><b>Caution:</b> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</p> <p><b>NOTE:</b> This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>Reorient or relocate the receiving antenna.</li> <li>Increase the separation between the product and receiver.</li> <li>Connect the product into an outlet on a circuit different from that to which the receiver is connected.</li> <li>Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>	<p><b>LIMITED WARRANTY</b></p> <p><b>This product comes with a 120-day limited parts and labor warranty for manufacturer's defects. This includes defects to the motor, gyroscopic sensor, battery, motherboards, lights, controller and Bluetooth® module.</b></p> <p><b>The conditions of this warranty and our responsibilities under this warranty are as follows:</b></p> <p>Manufacturer's warranty is non-transferable and is limited to the original purchaser only. Manufacturer warranty only applies to products purchased through an authorized REPLAY retailer. Items purchased from private sellers, online auction sites, including eBay, liquidators, sold "as-is" or "final sale" or from clearance or going-out-of-business sales, are not covered by warranty. The warranty period begins on date of purchase, not date of first use. Please retain a copy of your receipt as this will be required to prove date of purchase should a warranty claim be needed.</p> <ul style="list-style-type: none"> <li>The warranty is not applicable if the product has been subject to improper use along with physical abuse, improper installation, modification or repair by unauthorized third party.</li> <li>The responsibility of manufacturer shall be limited to the repair or replacement of the product at its sole discretion.</li> <li>The manufacturer will not take any responsibility if the failure of the unit has resulted from accident, abuse, misuse, or any unauthorized repair, modification or disassembly.</li> <li>This warranty gives you specific legal rights, and you may also have other rights which vary under local laws. The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.</li> </ul> <p><b>We offer a warranty on our products in accordance with the following conditions:</b></p>
12	13	14	15	16	17

<p>1) The warranty does not cover over-charging, or damages due to improperly maintaining lithium-ion battery installed in unit. The warranty does not cover tires, charge ports and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water, moisture, debris or generally from abnormal conditions.</p> <p>2) The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts. REPLAY reserves the right to exchange the product for a replacement product of equal or greater value if the product cannot be repaired within a reasonable time or at a reasonable cost. Products and/or parts that have been replaced or exchanged become property of REPLAY.</p> <p>3) The warranty is voided if repairs or modifications are performed without the written consent of REPLAY or if our products are equipped with additional parts or accessories that are not approved for the REPLAY. Using any charger, other than a genuine REPLAY charger, or a charger for a different model, voids the warranty and is a serious fire hazard. Exposure to water, moisture, mud, dirt or debris, voids the warranty.</p> <p>4) Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.</p> <p>5) Any other further claims are excluded, especially those for replacement due to damage caused to the outside of the product, provided there is no obligatory legal liability.</p> <p>We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, and loss of earnings or interruption to business. If you have purchased an extended warranty,</p> <p>18</p>	<p>You will need to contact the retailer it was purchased from for assistance.</p> <p><b>Asserting a warranty claim:</b></p> <p>1) To make use of the warranty services, you must contact the Replay Service Center by visiting <a href="http://www.replay.com">www.replay.com</a>. Please contact Replay Customer Service at <a href="mailto:info@replay.com">info@replay.com</a> or by calling (888) 451-0954.</p> <p>2) REPLAY will try to diagnose and solve your problem. We may require photos and/or videos to properly diagnose the issue and verify warranty eligibility. A copy of your receipt or online order confirmation, with purchase date visible, is required. REPLAY reserves the right to verify purchases with the retailer and/or asset protection databases, and will deny warranty claims if the receipt is invalid, cannot be verified, or if the item has been returned or exchanged. If it is determined that a warranty claim exists, at our sole discretion, REPLAY may send replacement parts and/or issue an RMA number (Return Material Authorization) to send the product to REPLAY. If an RMA is issued, the package must be shipped within 14 days of the RMA issuance or the package will be refused and returned to sender. If, at the sole discretion of REPLAY's technicians, the item is found not to have a manufacturer defect, has been subject to abuse, the malfunction is due to water, debris or moisture exposure, or the item has been improperly maintained, customer will be charged for return shipping and no repairs will be completed.</p> <p><b>IMPORTANT: REPLAY will only accept parcels that have an RMA number.</b></p> <p>The limited warranty stated above is only valid for products sold in the Contiguous U.S. by REPLAY or its authorized resellers. Items purchased in Alaska, Hawaii and Puerto Rico have shipping restrictions on batteries and we cannot ship replacement units or batteries outside of the Contiguous U.S.</p> <p>YOU EXPRESSLY UNDERSTAND AND AGREE THAT, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, REPLAY'S TOTAL LIABILITY IN CONNECTION WITH THE APPLICABLE REPLAY PRODUCTS OR THIS WARRANTY POLICY WILL NOT EXCEED THE AMOUNT YOU ACTUALLY PAID FOR THE PRODUCT.</p> <p><b>Remarks:</b> REPLAY reserves the right, at its sole discretion, to interpret, modify and</p> <p>20</p>	<p>assert this warranty policy at any time.</p> <p>PARTS AVAILABILITY IS NOT GUARANTEED</p>		
--	--	---	--	--