



CHRONIS

User Manual

Retro Style Alarm Clock + Bluetooth® Speaker

Read Before Use

- Protect your device from impact from bumps and falls.
- Avoid using this device in strong magnetic and static environments as much as possible.
- If the device comes into contact with water or any other liquid, power it off immediately and wait for it to dry completely before turning it on again.
- Do not clean the device with any cleaning products containing chemicals, to avoid damage caused by corrosion and dampness. When cleaning is necessary, use a dry, soft cloth.
- Please do not disassemble the device by yourself; doing so will void the warranty.

 
Clock Illumination

The clock face has a solar-powered coating that glows by absorbing surrounding light sources. For best results, place the clock near a light source (i.e. near a window or close to a lamp) for 5-7 hours during the day. This will allow for approximately 2 hours of illumination at night.




The clock's glow intensity depends on the strength of the light source. The longer the clock is exposed to a light source, the better the illumination will be.

Overview

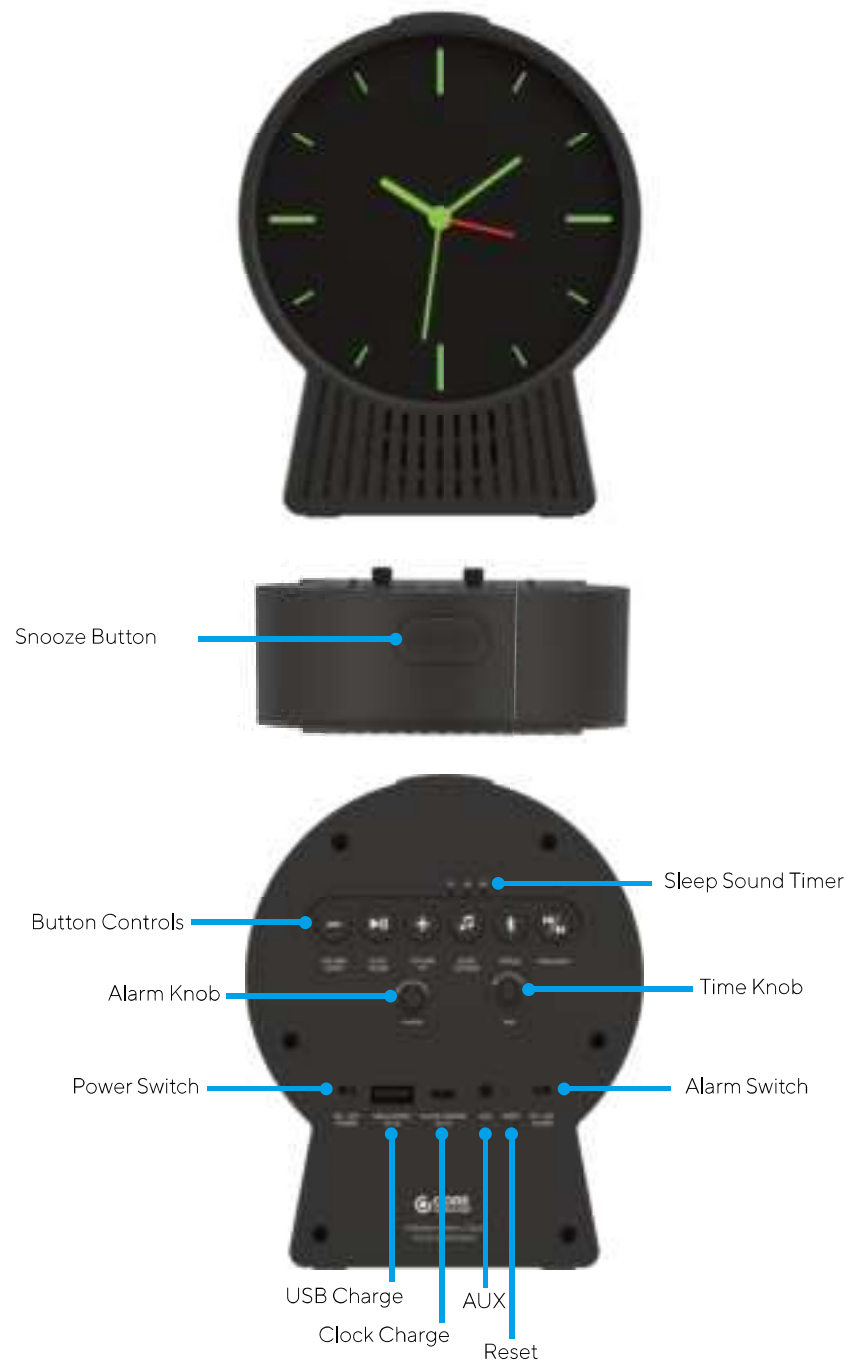

Buttons

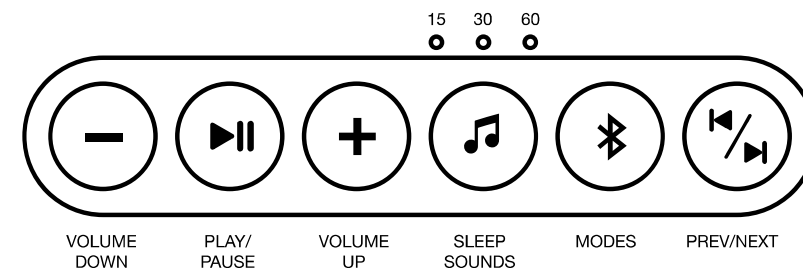 

- Volume Down** - Press to decrease volume
- Pause & Play** - Press to pause/play music
- Volume Up** - Press to increase volume
- Sleep Sound** - Press to turn on sleep sounds; press again to set sleep sounds timer to 15, 30 or 60 minutes, respectively
- Modes / Bluetooth® Setup** - Press to switch between FM radio, Bluetooth® Setup, Snooze Sound Setup, and Alarm Song Setup
- Previous/Next** - Press once to skip to the next track. Press twice to return to the previous track

Time & Alarm Setup

Setup Time: Turn the **TIME** knob to adjust the clock's time.



Setup Alarm: Turn the **ALARM** knob to setup the alarm. Make sure the alarm switch is also set to **ON**

 


Snooze: To snooze the alarm, press the top snooze button once. The alarm will snooze for 4 minutes 16 seconds.

Turn Off Alarm: To turn off the alarm, flip the alarm switch to **OFF**.

Set Alarm Sound


To setup the Alarm Sound, press the **MODES** button until you hear the "Setup Alarm Song" voice prompt

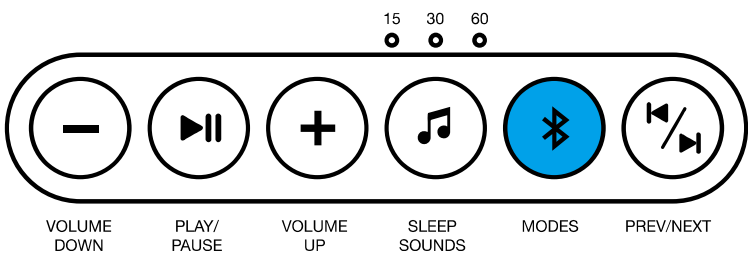

Use the **PREV/NEXT** button (⏮️) to select your desired alarm song. Press the **MODES** button again to confirm your selection

Set Snooze Sound

 
To setup the Snooze Sound, press the **MODES** button until you hear the "Setup Snooze Sound" voice prompt

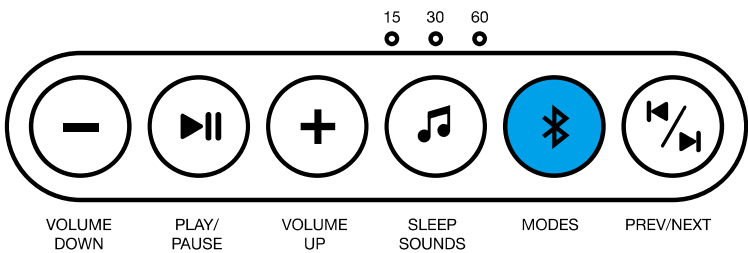

Use the **PREV/NEXT** button (⏮️) to select your desired snooze sound. Press the **MODES** button again to confirm your selection

Sleep Sounds

 
To play sleep sounds, simply press the **Sleep Sounds** button

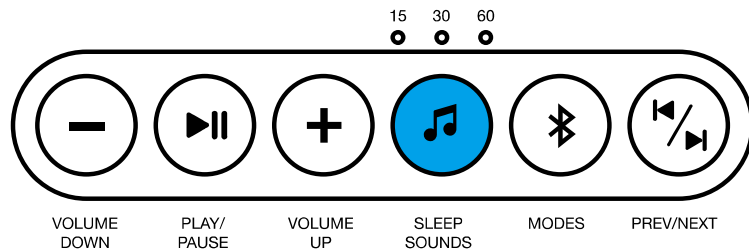

Press the **Sleep Sounds** button again to turn on the timer. The blue light indicator will turn on, allowing you to set the timer to 15, 30 or 60 minute intervals.

Note: To turn off sleep sounds, press the **Sleep Sounds** button again after the 60 minute timer is enabled.

 FM Radio

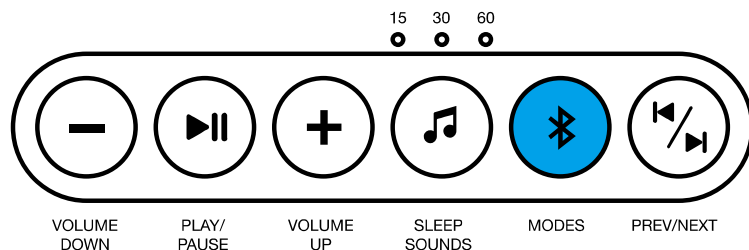

Press the **MODES** button until you hear the "FM Radio" voice prompt

 
Press and hold the same **MODES** button to scan radio stations automatically.

If you want to search radio stations manually, press the **PREV/NEXT** button (↔)

Note: Press the **PREV/NEXT** button once to search forward; press twice to return to the previous station

For optimal radio reception, plug one end of the included AUX cable into the clock's AUX input

Bluetooth® Setup

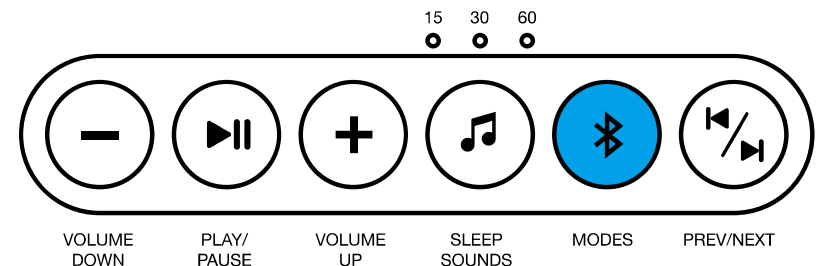

Press the **MODES** button twice, and you will hear a "Bluetooth® Setup" voice prompt

Enter Bluetooth® settings on your smartphone or other Bluetooth®-enabled device, and search for "**CHRONIS**". Tap to connect to Bluetooth®.



AUX

Insert an AUX cable to automatically play music from any device compatible with an AUX cable.



Charging the Clock

Insert the included micro USB cable to charge the alarm clock.

NOTE: You will need to connect the USB end of the cable into a wall adapter or computer (not included).



Charging a Phone

Charge your mobile phone or other portable device by plugging in your device's USB charging cable (sold separately) into the clock's USB Charge port.



Resetting the Clock

Using a paper clip, press and hold the **Reset** button for 3 seconds to reset the alarm clock to factory default settings.



Specifications

- Model: CTAC01
- Output power: 3W
- Input voltage: DC5V-1A
- Frequency response: 100Hz-20KHz
- Signal to noise ratio: $\geq 80\text{dBA}$
- Distortion: $< 10\%$
- Compatible with Bluetooth®
- Up to 24 hours battery life
- Battery: 1200mAh, 3.7V
- Input: DC 5V/1A

In The Box

- Alarm Clock
- Micro USB Cable
- AUX Cable
- Quick User Guide
- User Manual
- Warranty Card

Need Help?

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a Core Innovations customer service representative by calling **1-833-909-CORE (1-833-909-2673)**. We are available Monday–Friday, 9am – 5pm PST, except major holidays. Core Innovations strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a Core Innovations product.

© 2021 Core Innovations. All rights reserved. Core Innovations is a trademark of Core Innovations LLC. © 2021 Bluetooth SIG, Inc. All rights reserved. The Bluetooth trademarks—including the BLUETOOTH word mark, the figure mark (the runic “B” and oval design), and the combination mark (Bluetooth word mark and design)—are owned by the Bluetooth SIG. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 1 year warranty from date of purchase, 90 days only on labor.

Warranty Information

Limited Warranty

Core Innovations (the "Company") warrants this new product purchased and contained in this package (the "Product") against defects in material or workmanship for 90 Days (Parts & Labor) and 1 Year (Limited). In order for the Company to honor this limited warranty, you must present a valid proof of purchase (i.e. a receipt) of this Product. IMPORTANT NOTE: The customer is encouraged to carefully inspect the Product upon receipt after purchase – especially prior to any assembly, disassembly, mounting, installation or utilizing a third-party product of any kind, such as a decorative or protective cover or case.

This warranty is void if the Company deems, in its discretion, that the Product may have been damaged when the packaging was opened, through modification, improper transport, improper storage, improper use, improper assembly or disassembly, exposure to adverse elements, mounting or other installation, end user negligence, water damage or tampering of the barcode of the Product. This warranty does not apply: (a) to cosmetic damage, including but not limited to screen damage, a cracked display, scratches, dents and broken ports; (b) to damage caused by accident, abuse, misuse, fire, water vapor exposure, excessive exposure to humidity, water or other liquid contact, earthquake or other external cause; (c) to defects caused by normal wear and tear or otherwise due to the normal aging of the product; (d) if any serial number has been removed or defaced from the product; or (e) to damage caused by installation or mounting, assembly or disassembly, use with a third party device, cable, protective or decorative cover/case, component or product that does not meet the Company's product specifications. This warranty is a limited warranty for repair of the Product or replacement of the Product with a new or refurbished product, subject to the conditions set forth herein.

The Company is not liable for consequential, indirect, incidental, special or punitive damages and the Company's total liability hereunder shall not exceed an amount greater than the retail purchase price of the product.

90 Days Parts & Labor

The Company warrants to you as the original retail purchaser of the Product, that should the Product have any warranted defect out of the packaging, under normal conditions, such defect(s) will be repaired or replaced with a new or refurbished part (at the Company's sole discretion) without charge, if the Product is submitted to the Company within a period of ninety (90) calendar days from the date of purchase of the Product. The customer is responsible for transportation cost and insurance charges (if applicable) to the Company and must be able to document a clear proof of delivery to the Company as well as proof of registered receipt by the Company.

Warranty Information

It is the customer's responsibility to retain original packaging or provide like packaging in order to facilitate the warranty repair or replacement process. The Company will incur no liability whatsoever to provide packaging for warranty items. Should the product be damaged en route to the Company due to insufficient or improper packaging or improper transport, the warranty may be voided. You must receive a return authorization number (RMA#) before sending the unit in for service. This warranty only applies to manufacturer defects, and the Product must be returned to the Company in its original condition.

1 Year Limited Parts

If determined to be covered under warranty, the one (1) year limited parts warranty gives the customer the option to return the Product to the Company for repair or replacement. The customer will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.



Core Innovations intends to make this manual accurate and complete. However, Core Innovations makes no claim that the information contained herein covers all details and conditions. The information in this document is subject to change without notice at any time. Core Innovations assumes no responsibility for accuracy or completeness of the information contained in this manual.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.