
型号: WM760 成品尺寸: 78*120MM 材质: 80g书写纸, 折页 工艺: 四色印刷 版本号: V1.1-20230605

正面

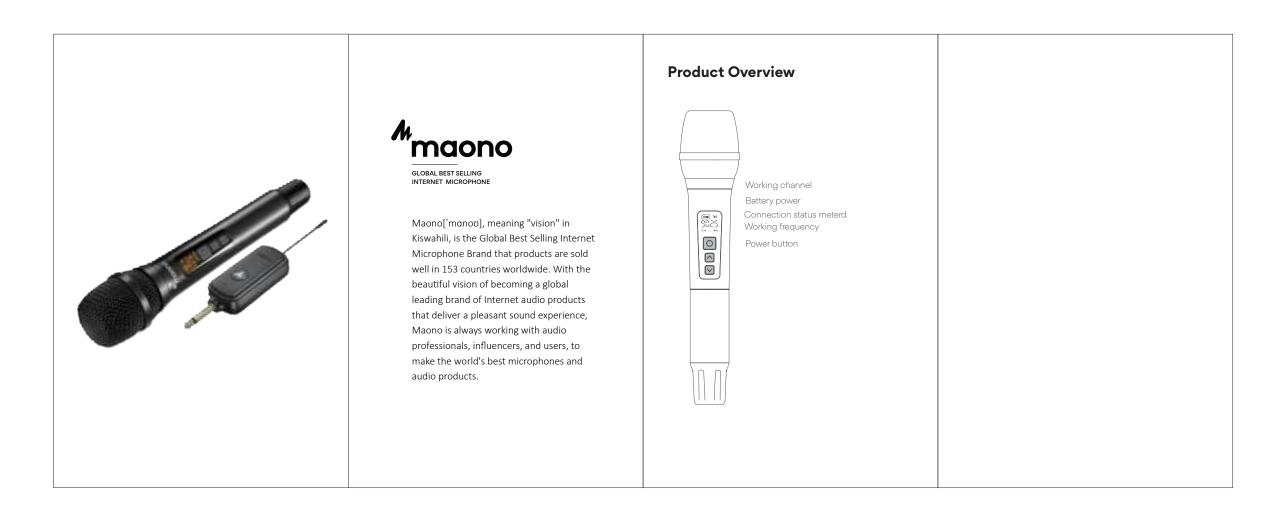

背面

Hold for 3 seconds to turn the transmitter on/off, When the transmitter is turned off, hold " " and " "for 6 seconds to switch channels.

Note: WM760 A1 kit only include A channel, B channel is unavailable.

Press it to increase volume by step by step, there are 11 levels of volume, from U-00 to U-10.
Hold " "and " "for three seconds to enter frequency switching mode, which will end automatically after 10s. Press " "to move to next frequency.
Press " "to exist frequency switching mode, or you can wait it to end after 10s.

Press it to decrease volume by step by step, there are 11 levels of volume, from U-00 to U-10.

Hold " "and " "for three seconds to enter frequency switching mode, which will end automatically after 10s. Press " "to move to previous frequency.

Press " "to exist frequency switching mode, or you can wait it to end after 10s.



