


S18 说明书/成品尺寸： 100x65 mm 材质： 100g 铜版纸 印刷： 黑白印刷

S18


User Manual

Please review this manual thoroughly before operating your device. In order to avoid unnecessary injuries, please do not Disassemble this product by yourself, and please use a standard charger.


Product Contains




Earbuds x2



Charging Case x1



Earplugs x3
(m is on earbuds)




USB Charging
Cable x1

Product Specification


Driver: 10mm
Support Profile: HFP / AVRCP / A2DP
Earbuds Charging Time: Up to 1.5 Hour
Charging case Charging Time: Up to 1.5 Hours
Working Voltage: 5V
Transmission Range: Up to 10m
Working Temperature: -30° - 70°

Power On / off

1)Earbuds will auto power on and connect when you take out earbuds from charging case.
2)Earbuds will auto power off and disconnect when you put the earbuds back to charging case.
3)If you take out earbuds but earbuds don't power on, please charge the charging case.
4)If you take out earbuds but earbuds don't power off, please charge the charging case.

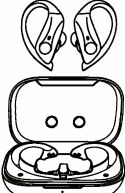



Open



Close

Bluetooth Pairing

Step1: Please turn on the Bluetooth function on your cell phone/laptop.
Step2:Open the charging case, take out the earbuds, the green lights flash on earbud.
Step3: Select "S18" on your phone/laptop and connect the device, the green lights off when you connect successfully.
(The earbuds will automatically turn off if not connected the device within 5 minutes.)






Reset Earbuds


If only one earbud connects to phone / earbuds can not pair together. Please try to reset earbuds:
Step1: Open the charging case, and take out the earbuds.
Step2:Short press the earbud five times to reset earbuds.
Step3:The red and white light flash quickly and red light off, which means reset successfully.

Product Wear


Step1: Take out the earbuds from charging case.
Step2: Put the earbuds on your ears.
Step3: Adjust by twisting the earbuds for comfort and secure.

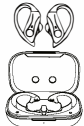


Product Control




2X **Play/Pause**
Short press the touch button twice




2S **Previous Song**
Long press Left touch button for 2 seconds




2S **Next Song**
Long press Right touch button for 2 seconds




1X **Volume Up**
Short press Right touch button once




1X **Volume Down**
Short press Left touch button once




2X **End a Call**
Short press the button twice



3X **Voice Assistant**
Short press the touch button three times to call voice assistant.




2X **Answer a Call**
Short press the button twice




2S **Reject Call**
Long press the button for 2 seconds

Product Charging


1)Put the earbuds back charging case to charging earbuds.
2)Plug the USB type-C to charging the charging case.
3)The power display will tell you the charging case power and Earbuds




Type-C
charging Port



Charging
Pins of
Earphone



Power Display
of Case



Charging Display
of Earbuds


Wireless charging

S18 can also charging the charging case and earbuds by wireless charging, please use a regular wireless charging pad for charging.


Certification

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."
FCC ID: 2A7GB-S18


Safety For You




Do not expose device to liquids, moisture or humidity. It has electronics and a battery in it. Neither of them likes getting wet.




Don't use abrasive cleaning solvents to clean your device. Wipe them down with a slightly damp cloth if and when necessary.




Remove and clean the earbuds tips regularly, to ensure that you always enjoy the best sound possible from your device.




Do not expose device to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.




Don't throw your device in a fire to dispose it. The internal battery may explode.




Don't try to disassemble your device. There are no user serviceable parts inside it.




Try not to drop your device and keep it away from sharp objects such as keys in your pockets.



Only charge your device from 5V USB ports such as phone chargers and laptops or PCs.



Never listen to music at high volumes or you may permanently damage your hearing.



Pay attention to your surroundings and never wear any headphones while riding, driving or walking in traffic. You do not come with any warranty.

FCC Warning
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

