
 
#### **Device basics**

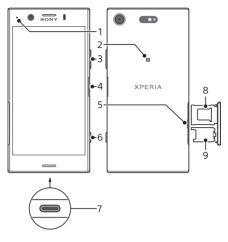

- 1 Charging/Notification light
- 2 NFC
- 3 Volume/Zoom key
- 4 Power key/Fingerprint sensor
- 5 Nano SIM/Memory card slot
- 6 Camera key
- 7 Charger/USB Type-C™ cable port
- 8 Memory card tray
- 9 SIM card tray

## To insert a nano SIM card and a memory card



- Do not cut your SIM card, as this may damage your device.
- 1 Drag out the memory card tray and the SIM card tray.
- 2 Place the SIM card securely in the SIM card tray, as shown in the illustration.
- 3 Place the memory card securely in the memory card tray, as shown in the illustration.
- 4 Gently push first the SIM card tray, then the memory card tray, back into their slots until they fit into place.

## To turn on your device

 It is recommended to charge the battery for at least 30
 minutes before you turn on your device for the first time. It is important to use the USB Type-C cable provided when charging your device, as other types of USB cables can damage your device.

- 1 Press and hold down the power key (1) until the device vibrates.
- 2 Wait a moment for the device to start.

#### To activate the screen

Briefly press the power key (1).

## Screen protection

Before using your device, remove the protection film bypulling up on the protruding tab.

Screen covers and protectors may help you protect your device against damage. We recommend you use only those screen covers intended for your Xperia™ device. The use of third party screen protection accessories may prevent your device from working correctly by covering sensors, lenses, speakers, or microphones and can invalidate the warranty.

## Support for you

Use the Support app to find your device's model name, software information, help topics and support tools. Visit support.sonymobile.com from the Support app or any browser for user guides, troubleshooting tips, support forum and support contact information.

 You can find support contact information in the Support app even without a network connection. The Support app is not available in all countries and regions.

#### To access the Support app

Find and tap ?.

## Warranty, SAR and usage guidelines

For information about warranty, SAR (Specific Absorption Rate) and safety guidelines, please read the **Important information** provided under **Settings** > **System** > **About phone** > **Legal information** on your device.

 
## Transferring contacts and content

For transferring contacts, messages, photos or other data from an old device to your new device, we recommend that you use the Xperia<sup>™</sup> Transfer application.

Visit https://www.sonymobile.com/xperiatransfer for more

information.

To view the CE marking and the FCC ID



1 Drag out the memory card tray.

- 2 Drag out the label strip in the same way.
- To see the full text of the EU declaration of conformity, visit: http://www.compliance.sony.de/.

#### To view the regulatory compliance mark

Open the phone dialer, then enter \*#07#.

#### Legal information

Publication number: XXXX-XXXX.1

See regulatory information such as the device CE marking in the relevant label tray in the device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. 

Visit www.sonymobile.com/global-en/legal/ for more information. 

Manufacturer: Sony Mobile Communications Inc., 4-12-3 Higashi-Shinagawa, Shinagawa-ku, Tokyo, 140-0002 Japan. For EU product compliance: Sony Belgium, bijkantoor van Sony Europe Limited, Da Vincilaan 7-D1, 1935 Zaventem, Belgium.

© 2017 Sony Mobile Communications Inc. All rights reserved.

#### Supported frequency bands

Some frequency bands might be turned off in certain markets or by certain operators G8441

UMTS HSPA+ (Bands 1, 2, 4, 5, 6, 8, 19) GSM GPRS/EDGE 850, 900, 1800, 1900 LTE (Bands 1, 2, 3, 4, 5, 7, 8, 12, 13, 17, 19, 20, 25, 26, 28, 29, 32, 38, 39, 40, 41, 66) WLAN, 2.4G/5G, NFC SGM 850/900 : Power Class 4, DCS(1800)/PCS(1900) : Power Class 1, UMTS : Power Class 3, LTE : Power Class 3, 2.4GHz<100mW, 5.15-5.35GHz<200mW, 5.47-5.725GHz<500mW, 5.735-5.835GHz<250mW, F. 13.56MHz

# SONY

Startup guide

Xperia™ G8441

XPERIA CE