



Walking Device User Manual

Please read this manual carefully before using and then keep it properly.



Manufacturer : Beijing Kingsmith Technology Co.,Ltd.
Address : Floor 4, Building 25, Area 18, ABP Park, Fengtai, Beijing, China.
After-sale service email : walkingpad@kingsmith.com.cn
Made in China

Model No. : **WPS1F**

WalkingPad

KING SMITH



User Manual



WARNING

IMPORTANT SAFETY INSTRUCTIONS

FCC CAUTION: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The appliance is intended for household use.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Electric shock hazard, where the appliance is used without the earth connection.

User Manual

DANGER

— To reduce the risk of electric shock: Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING

— To reduce the risk of burns, fire, electric shock, or injury to persons: 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts. 2) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons. 3) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. 4) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair. 5) Do not carry this appliance by supply cord or use cord as a handle. 6) Keep the cord away from heated surfaces. 7) Never drop or insert any object into any opening. 8) Do not use outdoors. 9) Do not operate where aerosol (spray) products are being used or where oxygen is being administered. 10) To disconnect, turn all controls to the off position, then remove plug from outlet.

Connect this appliance to a properly grounded outlet only. See Grounding Instructions.

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this machine.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

To reduce the risk of personal injury, read and understand all the instructions before using this product.

Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

User Manual

IC WARNING: Privacy of communications may not be ensured when using this telephone.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des indiscretions.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The device is compliance with RF exposure guidelines, user can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme

Après examen de ce matériel aux conformités ou aux limites d'intensité de champ RF,

 
Les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquiescer.

Content

1. Product and Accessories	02
2. Function schematic diagram	03
3. Guide for initial operation	07
4. Learn to use WalkingPad	09
5. Safety Notice	13
6. Maintenance and Service	16
7. Trademark and Legal Declaration	17
8. Replacement and Disposal	18

Welcome to use


Thank you for choosing the KingSmith WalkingPad Walking device, hereinafter referred to as a WalkingPad, which possess various advantages including exquisite, foldable, innovative integral design. From now on, enjoy the quality life of walking at home.

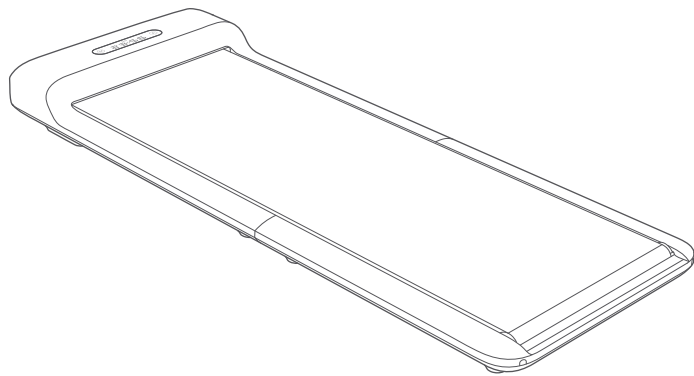

Performance &indicators	Detailed parameters
Expansion dimensions	1445 x 518 x 125 mm 56.9" x 20.4" x 4.9"
Folding dimensions	825 x 518 x 140 mm 32.5" x 20.4" x 4.9"
Walking Area	1200 x 400 mm 47" x 15.7"
Gross weight	30 kg / 66.0 lbs
Net weight	27 kg / 59.4 lbs
Maximum load	100 kg / 220 lbs
Applicable age	14 ~ 60 years old
Applicable height	Unlimited
Minimum speed	0.5 km/hr 0.5 mi/hr
Maximum speed	6 km/hr 3.75 mi/hr
Power Input	735 W
Frequency	60 Hz
Rated voltage	110 - 120 V ~
Sport mode	Standby mode/ Manual mode/ Automatic mode


01 Product and Accessories

 Please carefully check whether the contents of the package are complete and intact. If there is any missing or damaged, please contact the seller.

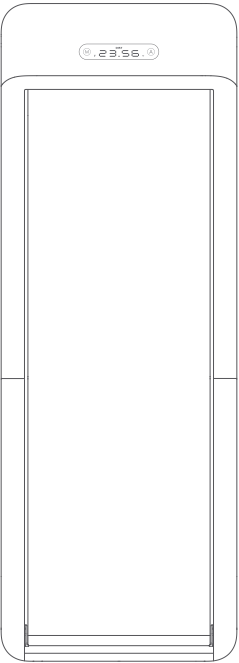

Main Product

 Parts



Power Cable



Remote Controller



Lanyard



Wrench



Silicone Oil

 
Other accessories



User Manual

02 Function schematic diagram

1. Product main body

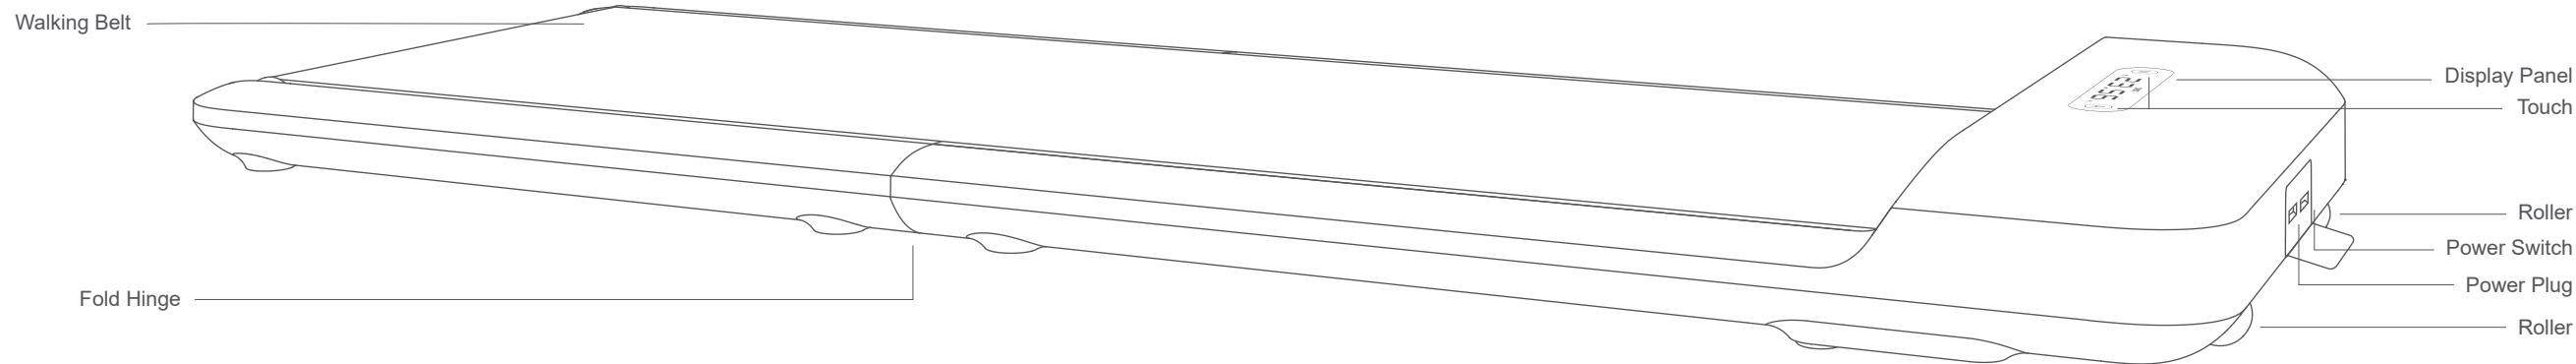


02 Function schematic diagram


2. Introduction of the function of the indicator panel



 
3. Walkingpad remote control

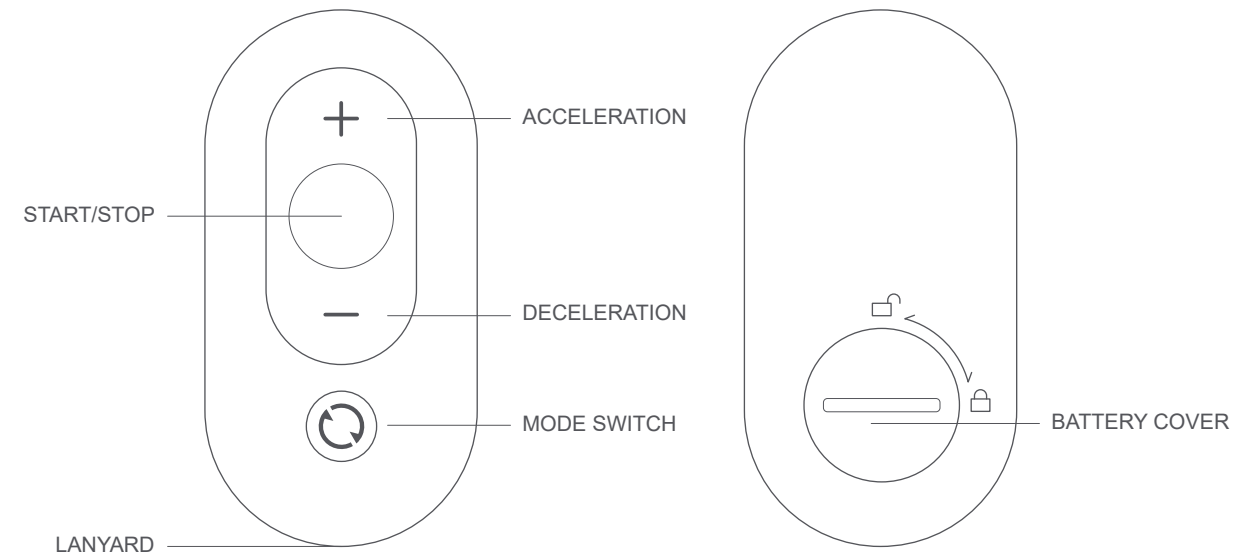


03 Guide for initial operation

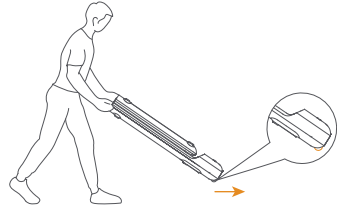 

 
1. Choose flat ground to place the WalkingPad. It is forbidden to place it on thick and soft cushion. Please note: Don't connect the power before the WalkingPad is fully unfolded.



 2. Unfold the walkingpad slowly and press it down to completely flat.

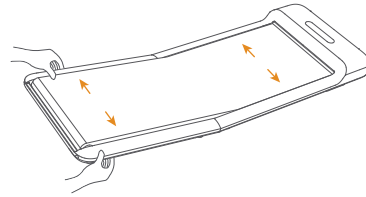

 
3. Check and adjust the walking belt to make sure it's centered.

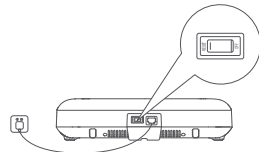


4. Connect the power cord and press the button to switch on.



 
5. Search "KS Fit" App from Apple Store or Google Play and complete installation.

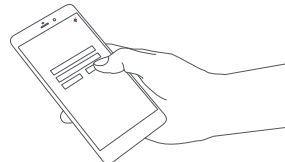

 6. Open the App, follow the prompts to set up the device.



 
7. Enter novice guide.

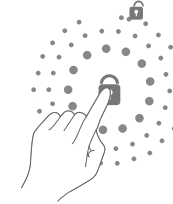


8. Complete Novice Guide to unlock all Functions (maximum speed 3.75 mi/hr). Otherwise the speed limit remains at 1.75 mi/hr.

How to release the speed limit:

 1. Complete novice guidance through app.
2. Or 1 km in total.

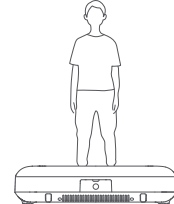

 9. Start to use the WalkingPad.

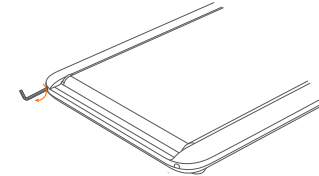

10. If the belt deviates from the orbit in use, please adjust properly. SEE: 06 Maintenance and service.

04 Learn to use WalkingPad

1. Mode instruction

M Manual mode

Light of the manual mode is on;
Control the speed through the remote control or APP.

A Automatic Mode

Light of the automatic mode is on;
Speed is automatically controlled by intelligent algorithm.
It follows the speed of walking.

2. Instructions of the standby mode control

The motor and sensor stop responding in this mode to prevent nonusers from accidentally triggering the WalkingPad.



 
Mode Switch
Short press: return to the previous mode.

3. Instructions of manual mode control (primary mode)




Manual Mode

In this mode, the speed of the WalkingPad can be controlled by the remote control. It is recommended that beginners use the manual mode first and then use the automatic mode after being skilled in using the WalkingPad. The manual mode is controlled by remote control by default, that is, the START/STOP button of the remote control is used to start or stop the WalkingPad. You can also operate the same on the app side and customize the maximum speed.

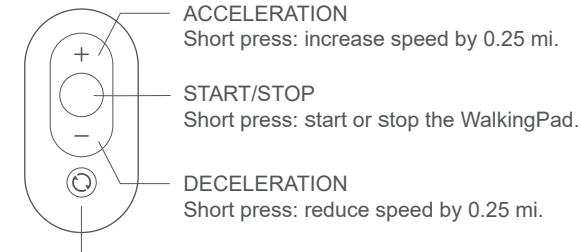

 MODE SWITCH
Short press: switch to automatic mode.
Long press: switch to standby mode.

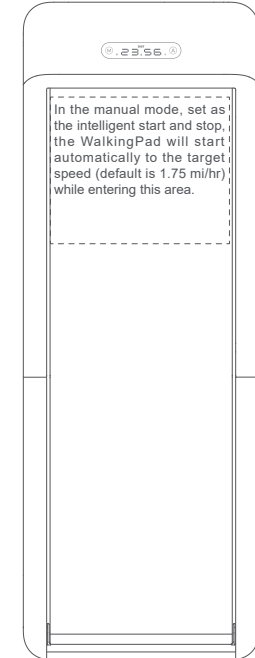


04 Learn to use WalkingPad

4. Description of automatic mode control (advance mode)




Automatic mode

 This is a challenging and higher-class mode, User can walk on the Walkingpad completely out of remote controller. We only recommend those who have good sports skills or walking-device experience to take the challenge.

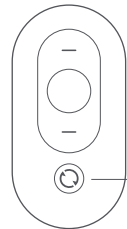

 Mode Switch
Short press: switch to manual mode.
Long press: switch to standby mode.

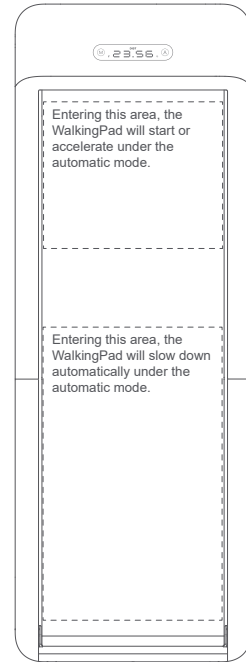

5. Remote Controller Notice

If the remote controller has no response or you change a new one, the remote controller and walking device need to re-establish communication.

Remote control pairing method:

Restart the WalkingPad, press and hold down the mode switch button on the remote control immediately, hearing the sound of "Beep" indicates the success of pairing. Note: During the operation, the remote control should be close to the LED display panel of WalkingPad.

6. Communication Reminder Light

Not connected: not displayed;

In connection: flashing (1s / cycle);

Connected: long light;

Network instability: flicker (3S / cycle).

* Long press the manual mode (m) and automatic mode (a) keys on the panel to start the distribution network mode.

7. Error Warning Light

Error Warning Light on the display panel is off when Walkingpad works well. When error occurs, Error warning light turns on and shows its error code.

E01 - upper control receives lower control data abnormally;

E02 - hall fault;

E03 - Software overcurrent protection;

E04 - locked rotor protection;

E05 - the data received by the lower control is abnormal;

E06 - hardware overcurrent protection;

E07 - motor undervoltage protection;

E08 - motor overvoltage protection;

 
E09 - motor phase loss protection;

E10 - motor overload protection;


E20 - abnormal communication;

E21 - sensor failure.


05 Safety Notice

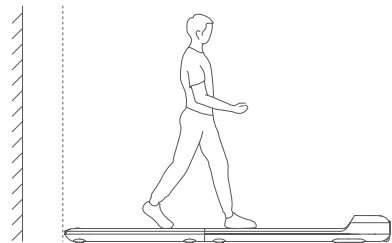

 
⚠ Please keep a rear distance of 1000 mm or more.

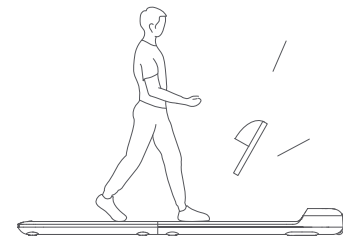


⚠ Please choose sport shoes.

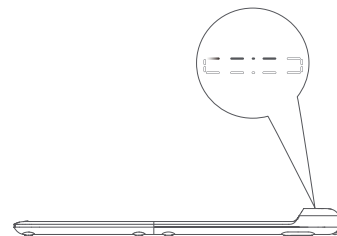 

 
⚠ Please do not stand up on the walking machine when it is under auto calibration situation.

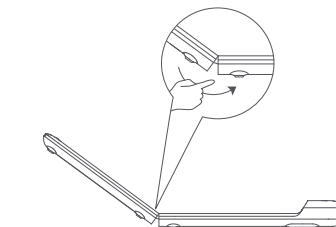


⚠ Anti-pinch.

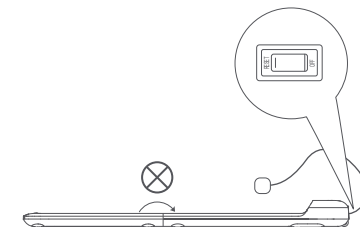 

 
⊗ Turn the power off before fold up the WalkingPad.

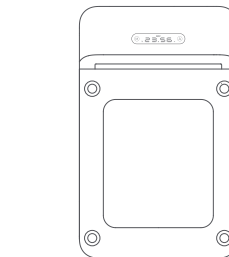


⊗ Prohibition of vertical placement.

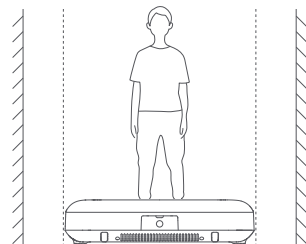 

 
⚠ Please keep a distance of 500 mm or more for both sides.

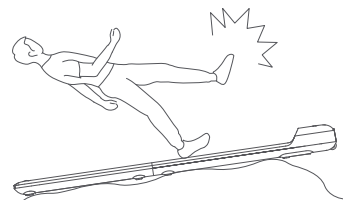


⊗ Using on uneven ground is prohibited.

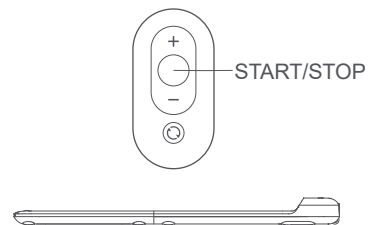 

 
⊗ It is strictly forbidden to walk up and down the walking pad while walking. When an emergency occurs, please press the remote control START/STOP and step away from the walking pad from one side.

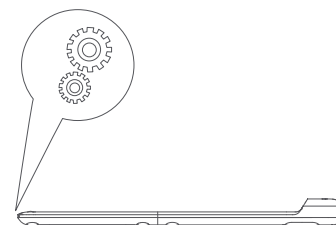

⚠ Anti-involved, please do not trample.

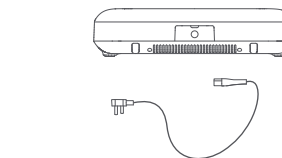 


 ⚠ Please pull out the plug when you are not using it.

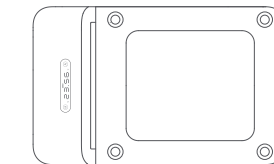


⊗ Prohibition of lateral placement.

 
05 Safety Notice

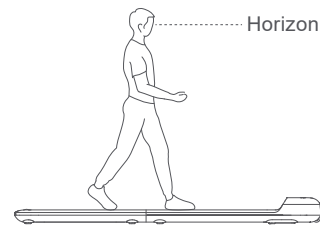

 
⚠ Please keep your sight horizontal to avoid dizziness.

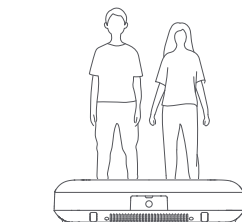

 
⊗ More than one person on the Walkingpad is prohibited.

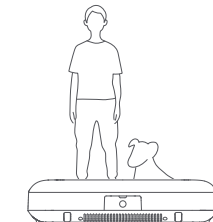


⊗ Using machine with pet is prohibited.

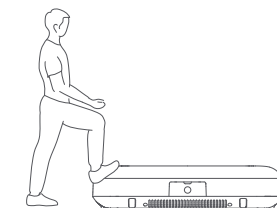 

 
⊗ Trampling the machine head is prohibited.

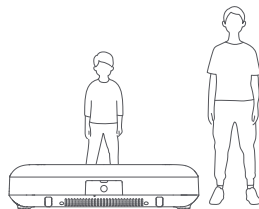

 
⚠ Children should be supervised to ensure that they do not play with the Walkingpad.

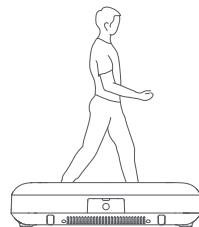

 ⊗ Walking sideways on the machine is prohibited.

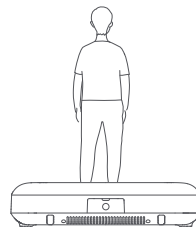

 ⊗ Walking backwards on the machine is prohibited.

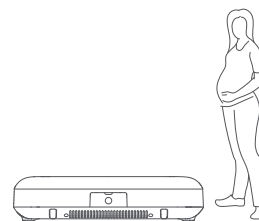

⚠ Please use this product reasonably according to your physical condition (the elderly and pregnant women should use it cautiously). If you feel unwell, stop exercising immediately. If necessary, please seek medical attention.

 
06 Maintenance and Service

1. Clean the walking machine




- Turn off the machine and unplug the power cord.
- Add several drops of detergent on cotton rag or towel. Don't pour the detergent on the belt directly, and don't use acid or corrosive cleaners.
- Wipe off dust and stains on the frame, front panel and belt. Do not wipe backside of the belt.
- After using for a period, dust and stains may appear on the back part, that is normal situation, and just clean them up.

2. Adjust the belt

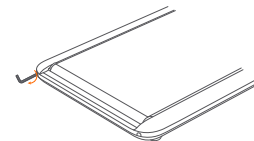

- Press and hold both Mode Switch Button and Acceleration Button on the remote control over 3 seconds.
- Front panel shows "CALI" and the speed is 4 km/hr (2.5 mi/hr).
- If belt deviates to the left: Turn the left adjusting screw for a half-circle clockwise.
- If belt deviates to the right: Turn the right adjusting screw for a half-circle clockwise.
- If belt is slipping: Turn both left and right adjusting screw for a half-circle clockwise at same time.
- Keep the machine running for 1-2 minutes and check whether it needs to readjust.

 3. Lubricate the Belt

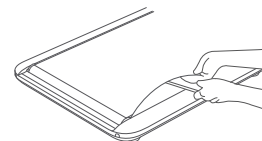

- Turn off the machine and unplug the power cord.
- Lift up the belt and apply silicone oil on the backside of the belt.
- Turn on the machine again
- Keep the machine running under 4 km/hr (2.5 mi/hr) for 10-20 20 seconds.
- Only apply 5 ml ~ 10 ml lubricant oil each time, too much lubricant oil makes the belt become slipping.
- Apply for silicone oil once every 3 months.

07 Trademark and Legal Declaration

Beijing Kingsmith Technology Co., Ltd holds the patents of KingSmith Walkingpad Walking Device series products. Kingsmith edits and owns the copyright of this manual book. Without Kingsmith's written permission, any form of unauthorized distribution, reproduction, publication, release or quotation by any institution or individual is prohibited. This manual contains as many as possible of all the functions and instructions for use. However, due to product imperfections, design changes, etc., the description may still have discrepancies with what you have purchased. In view of product updates, description in this manual book may differ from what you have purchased in color, appearance, etc. Actual supplies prevail. This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Children aged from 8 years and above and persons can use this appliance with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understood the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Product performance standard : Q/FTSMS0001-2017

08 Replacement and Disposal



The battery contained in this appliance must be removed for or disposal.

When replacing the battery, use only original battery, available from our online parts shop.

The battery compartment is located on the underside of the appliance. Open the compartment by removing the screw in the cover using a suitable screwdriver, and then press the lower end of the locking catch on the connectors. In that way, both sides of the connection can be separated by pulling them apart.

When inserting a new battery, push together the two connectors and ensure that the catch locks over the stop.

Never dispose of old battery in domestic garbage, but only through the proper public collection points. This also applies to the battery of defective appliances.



Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.