
LAGUTE®

Towel Warmer

APP Intelligent Control | Target Time Appointment | Heat Time Setting

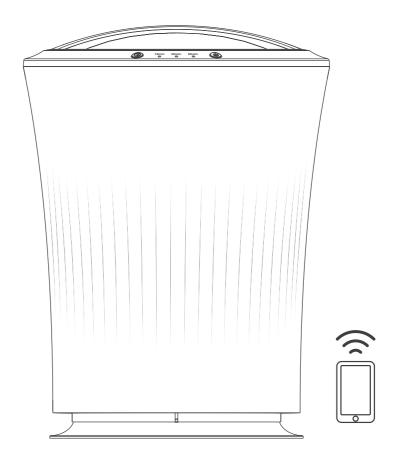

USER MANUAL

Please read the instructions before use and keep for future reference



Important Safety Instructions

When using an electrical appliance basic precautions should always be observed, including the following.

- FOR HOUSEHOLD USE ONLY
- FOR ADULT USE ONLY
- FOR DRY FABRIC ITEMS ONLY

DANGER:

To reduce the risk of electric shock:

- I. Do not reach for an appliance that has fallen into the water. Unplug it immediately from the power outlet.
- 2. Do not use it in the shower.
- 3. Do not place or drop into water or other liquid.
- 4. Do not place or store this appliance where it is nearby the tub or sink.
- 5. Unplug this appliance before cleaning.

WARNING:

To reduce the risk of burns, fire, electric shock or injury:

- I. This appliance is for household use only.
- 2. The appliance should never be left unattended when it is powered on.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- 4. Children should not play with this appliance.
- 5. Use this appliance only for its intended use as described in this manual.
- 6. Keep the cord away from heated surfaces.
- 7. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- 8. Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- 10. Keep the appliance dry.
- 11. Make sure the cord is disconnected from the groomer stand when not in use.
- 12. Do not use this appliance with a damaged or broken cutter unit as injury may occur. Always make sure blades are aligned properly.
- 13. Do not use an extension cord or a voltage converter with this appliance.
- 14. Do not wrap the cord around the appliance.
- 15. The power unit is intended to be correctly oriented in a vertical or table-mounted position.
- 16. If power supply unit is damaged, it should be replaced with new power supply unit available from the manufacturer. Please contact customer support for further instructions.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Technical Specification

Housing Material: PP Power Supply: 480W Power Output: I20V AC


Frequency: 60Hz

Volume: 20L / 676.40 OZ Weight: 5 kgs / 11 lb

Dimensions (L x W x H): 348mm x 348mm x 470mm / 13.7inch x 13.7inch x 18.5 inch

Product Instruction

Overview

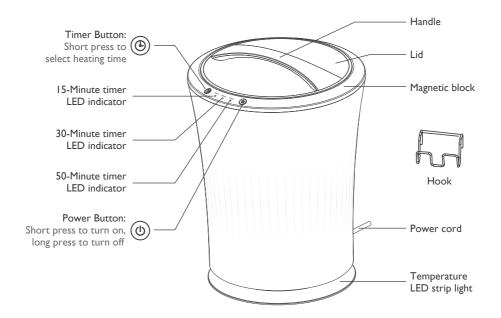

Getting to know the indicator

Button status	Towel warmer working status
(b) green + (b) flash red	Ready to configure the network
(b) green + (b) bright red	Configuration is done. It is available to set up via the APP
(b) green + (b) bright green	In button operation
(1) not bright + (1) bright red	Child lock-on in the APP, NO response when pressing buttons


Getting to Use Your Towel Warmer

Before use:


- 1. Open the lid and remove any packaging contents.
- 2. Place the towel warmer on a dry, level, hard surface.
- 3. Wipe with a dry cleaning cloth.

How to use:


I. Plug into an electrical outlet.

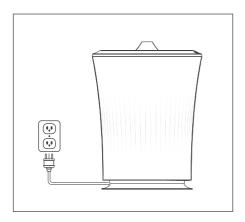


 Open the lid and place the **ONLY DRY** towel(s)/ blanket inside or hang towelette/small clothes on the hook. The hook is for hanging small clothes in order.

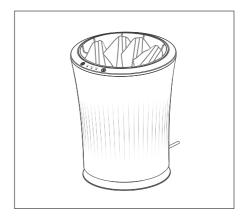


3. Put the lid on to ensure the mark line be aligned

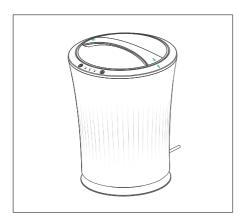

4. Short press the power button to turn on, and the indicator turns green.

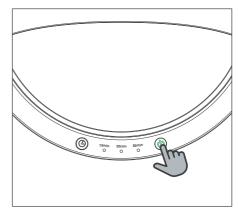

 
5. Short press the timer button to select the heating time (15/30/50 mins) to start heating.




6. After heating, open the lid to take out towel(s) or blanket.

CAUTION: HOT SURFACE INSIDE DO NOT TOUCH

Note: The towel warmer will beep if the lid is removed when the interior wall surface temperature exceeds I58°F/70°C.

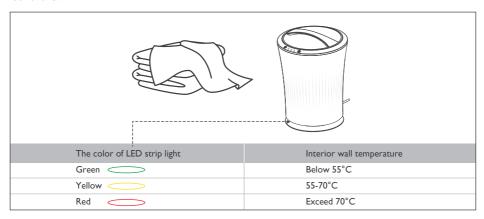

 7. Long press the power button to turn off



APP Setup

- I. Scan the QR code below to download the App.
- Open the App. If you already have an account, tap login. If not, to create a new account, tap Sign Up.









Wi-Fi Connection

- Step I: Short press the power button to turn on.
- Step 2: Open the APP, and add the device.
 - (I) Click " 🕕 " in the upper right corner of the interface and select " 🛱 Add Device" to search for devices.
 - (2) When the towel warmer appears in the list of nearby devices, click " Add ".
 - (3) Enter the password of the WIFI you are connected to. After the password is entered correctly, the network configuration is completed.
 - (4) Follow the in-app instructions to set up your towel warmer.

Note:

- I. Your phone must have Bluetooth, Location, and WIFI turned on while connecting to your towel warmer.
- 2. If you need to reset the network, you can simultaneously press the (a) and (b) on the towel warmer to reset the network configuration.
- 3. If network configuration fails, we recommend the following:
 - (I) Place the towel warmer directly next to the router to complete the first network configuration, no more than 3 meters away.
 - (2) Check if the 2.4G of the router is turned on.

Tip 1: How to distinguish whether I am using 2.4G or 5G Wi-Fi network?

- The steps of the PC side are as follows:
- (I) Click the network icon in the bottom right corner on the system desktop.
- (2) Click [Network and Internet settings] in the pop-up box.
- (3) Click WLAN on the left handside.
- (4) Click [Hardware Properties] under [WLAN].
- (5) Then you will see the information of network band.
- The steps for viewing on the mobile side are as follows:

Android:

Different brands of Android phones are different. Take Huawei mobile phone as an example.

You can click on the connected Wi-Fi name in the Wi-Fi list, and the corresponding information will be displayed, including the frequency.

iOS:

- (I) Download AirPort tool in the App Store
- (2) Turn on the Wi-Fi Scanner in "Settings Airport Tools"
- (3) Open the App and click on "Wi-Fi Scan" in the upper right corner. Channel 1-13 band is 2.4G, and larger than 13 is 5G.

Tip 2: (For most of Routers) How to turn on 2.4 GHz for Wi-Fi SSIDs?

Firstly, you need to make sure that you are connected to a 2.4GHz network. If you are not sure what your network is, you can follow the method provided below to separate Wi-Fi SSIDs for 2.4 GHz and 5 GHz bands. Then it is recommended that you use the AP mode (the AP mode will automatically select the 2.4GHz network for connection), and then add it again.

If your router supports both the 2.4 GHz and 5 GHz bands, but only one Wi-Fi name is displayed on the Wi-Fi search page of your mobile phone, perform these steps:

- (I) Go to the Wireless page of the router. (The entry address is usually provided on the label attached to the back of the router).
- (2) Go to the 2.4 GHz setting page, and set the Wi-Fi name (SSID) to (XXX) -2.4G, where xxx indicates the Wi-Fi name. Save setting.
- (3) Go to the 5 GHz setting page, and set the Wi-Fi name (SSID) to (XXX) -5G, where xxx indicates the Wi-Fi name. Save setting.

When the preceding settings are complete, the new Wi-Fi names will Appear on the Wi-Fi settings page of your mobile phone.

Note: After the Wi-Fi names are changed, you need to reconnect the devices that use this wireless router. The password remains the same if it has not been changed.

4. Please refer to the device FAQs of the APP for more details. The FAQ path is as follows:



Features:

- I. Connect APP to appoint the target time
- 2. Auto shut-off
- 3. 3-color LED light strip to indicate inner wall temperature
- 4. High-Temp Opening Alarm
- 5. Come with removable hooks for hanging small clothing

Care And Maintain

- 1. Remove the power cord from the electrical outlet before cleaning.
- 2. Wipe with the dry cleaning cloth only when the appliance is cool to the touch.
- 3. Use original packaging for storage when the appliance is not used.

