 


YOUR KIDJAMZ

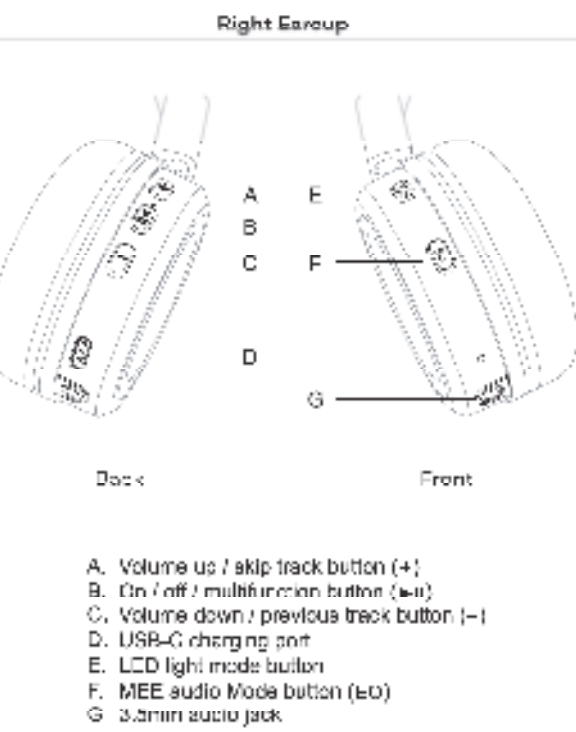

GETTING STARTED

Charge for 2 hours. The indicator will turn blue once fully charged.



Press and hold the multifunction (B) button for approximately 5 seconds until you hear the KidJamz say "Pairing" and the light flashes red and blue.

Select "MEE audio KidJamz" from the Bluetooth menu of your device.


	Volume Up / Skip Track button (+) [TAP] - Increase volume [HOLD 2 sec] - Next track
	Multifunction button (B) [HOLD 2.5 sec] - Power off [TAP] - Play / pause / answer / hang up call [HOLD 1 sec] - Power off [TAP twice] - Call / Google Assistant / Voice commands
	Volume Down / Previous Track button (-) [TAP] - Decrease volume [HOLD 2 sec] - Previous track

*Not all devices support the functionality. For more information, refer to the user manual for your device.

ABOUT OUR VOLUME-LIMITING TECHNOLOGY

Regular headphones and earbuds can easily exceed safe listening volumes by as much as 80% when used with portable audio devices, and may cause permanent hearing damage with lengthy or repeated exposure. KidJamz headphones utilize an integrated volume limiter to maintain the sound pressure level (SPL) near 85dB, protecting young ears and helping create good lifelong listening habits.

 Note: It is important for parents and guardians to periodically check children's use of these headphones and ensure that they are being used in a safe and responsible manner.

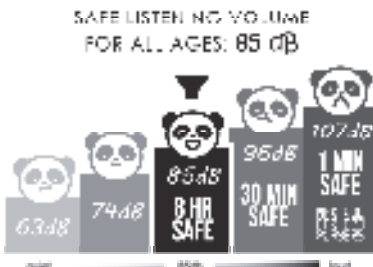


USING THE VOLUME LIMITER

KidJamz headphones allow the volume limiter to be disabled in emergency situations.

There are two optional volume-limited (85dB) mode and unlimited (travel) mode.


To disable and re-enable the volume limiter, press the (+) and (-) buttons simultaneously.

Note: Using headphones at higher volume levels for extended periods of time may result in listening fatigue and hearing damage. Children should take a 10-minute break every hour while listening in travel mode and switch back to the volume-limited mode when possible.

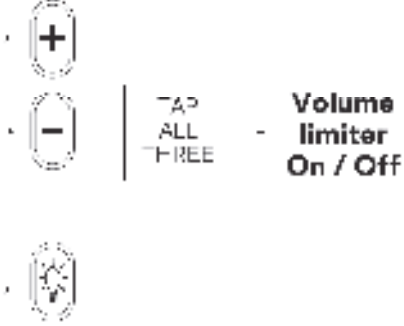

LED LIGHT MODES

Cycle through different light colors and patterns.

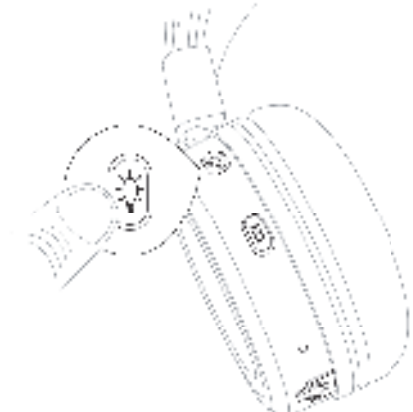


LIGHT MODE BUTTON:

Function	Operation
Cycle through different light colors and patterns	Single press
Turn on / Turn off lights	Press & hold 3s

MEE audio MODES

Cycle through different sound modes.

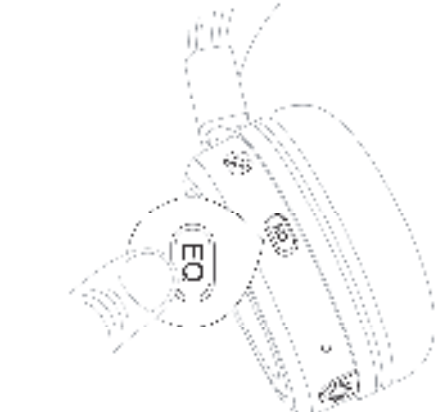

MEE audio MODE BUTTON:


Function	Operation
Cycle through different sound modes	Single press
Audio modes:	Balanced / Bass Boost / Vocal Boost / Dynamic

TROUBLESHOOTING

Factory Reset

Press and hold the (+) and (-) buttons for 5 seconds.

 All previously paired devices will be cleared from memory and a new pairing will need to be created.

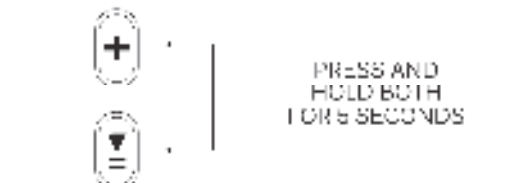

Warranty

MEE audio products purchased from authorized resellers are covered by a 1-year manufacturer warranty. For more information, contact your local MEE audio dealer or visit MEEaudio.com/support.

MEE audio and its logo are registered trademarks of MEE Inc. All rights reserved.

Apple is a registered trademark of Apple Inc. Android is a registered trademark of Google Inc.

SAFETY AND CARE

- Clear with a soft cloth. Do not use alcohol-based water to clean. Increase volume gradually and slowly.
- The lifespan of the battery will be significantly reduced if the device is not charged for a long time. It is recommended to charge your device at least once a month.
- Do not use headphones if the device is in contact with liquids. If the device is exposed to liquids, please stop using it immediately and contact your dealer for more information.

WARNINGS

Children should not use headphones for more than 2 hours.

Keep headphones out of the reach of children.

Do not use headphones while operating machinery or performing other activities that require hearing or focused attention.

This device is designed and manufactured to operate within its certified frequency range. It is not recommended to use the device outside of its certified frequency range.

- If you notice any noise, do not turn the device on until it completely dries.
- Do not use headphones in wet conditions.
- Do not use headphones in high temperatures. Keep away from direct sunlight, naked flames, flames, cigarettes, or other sources of heat or radiation.
- Battery and/or device will be severely damaged if exposed to extreme temperatures. Do not use headphones in extreme heat or cold.
- Do not use headphones to listen to music at high volumes.
- Do not use headphones to listen to music at high volumes.
- Do not use headphones to listen to music at high volumes.

Do not use headphones to listen to music at high volumes.

QUESTIONS?
WE'RE HERE TO HELP!

Phone Support: 626-965-1008
Monday ~ Friday 9:00 am to 5:00 pm PST

Email Support: support@MEEaudio.com
All emails are responded to within 2 business days.

