 


Scan the QR code for support information



VG232-X (US)

VG232-X (CA)

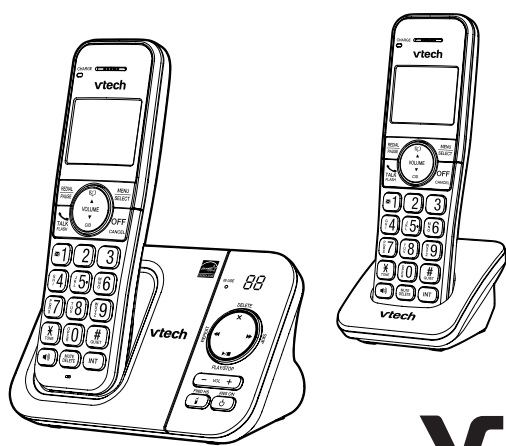

vtech®

Abridged user's manual

VG232

VG232-2

VG232-3



















































































































































































































































VG232-4

VG232-5



WHAT'S IN THE BOX

                                                                                                                                                                                                                                                  Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.

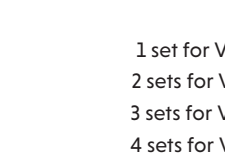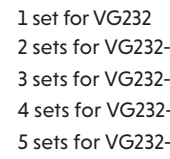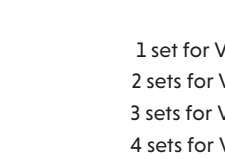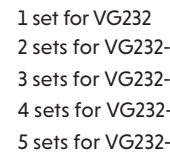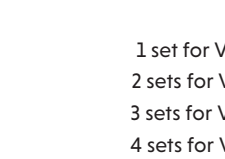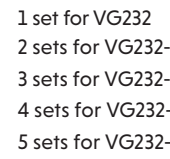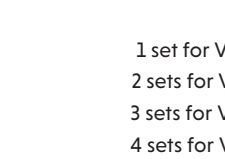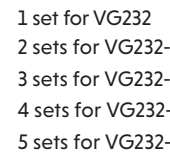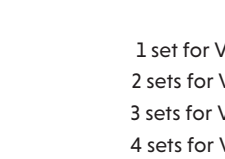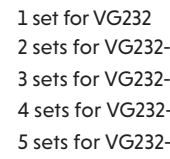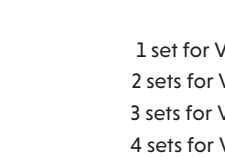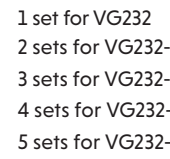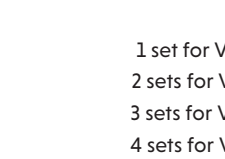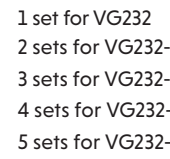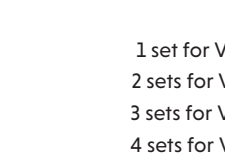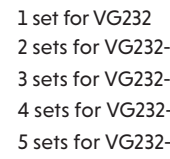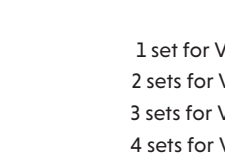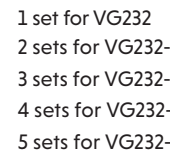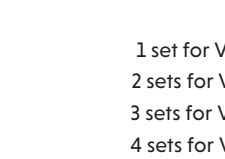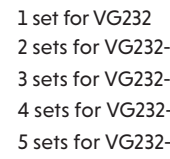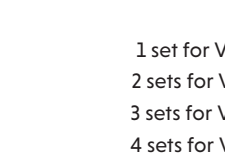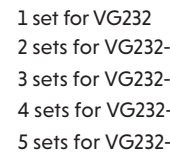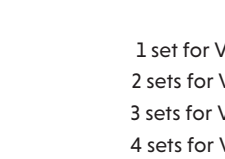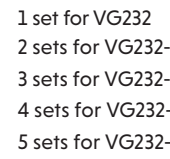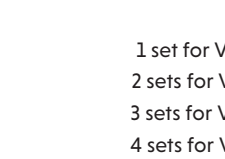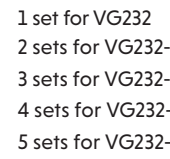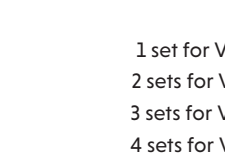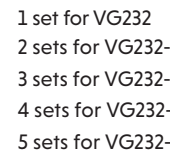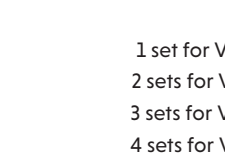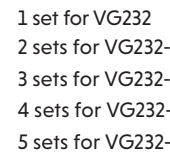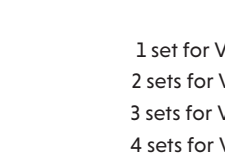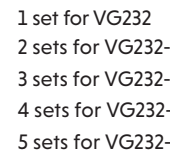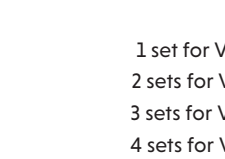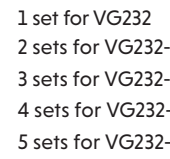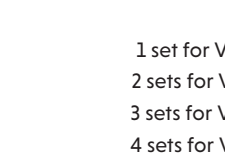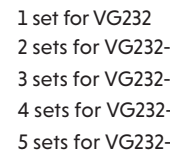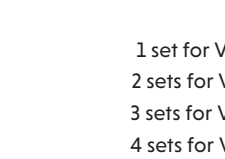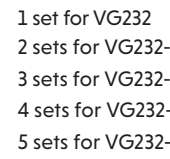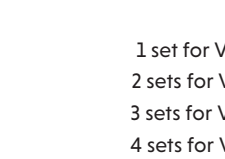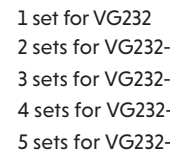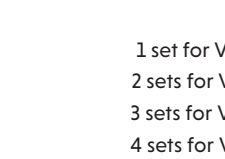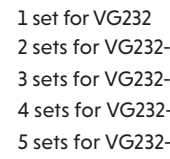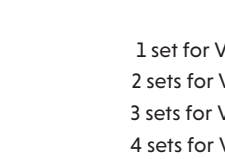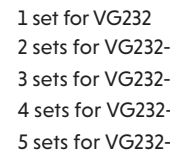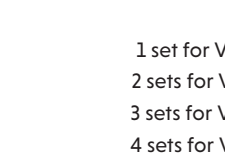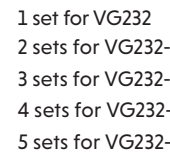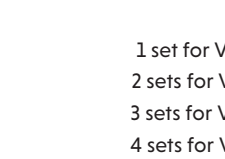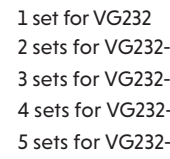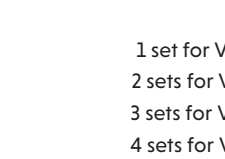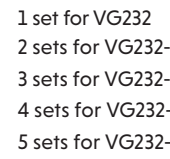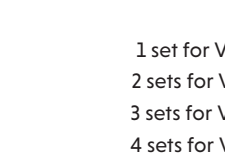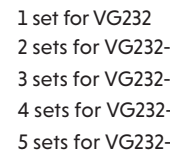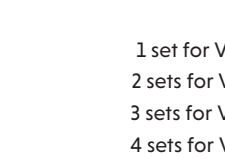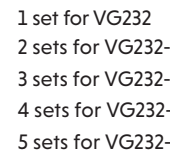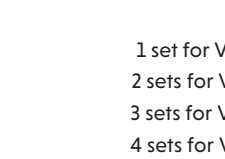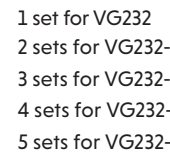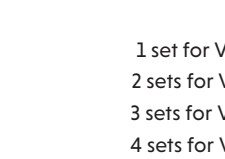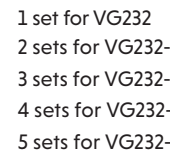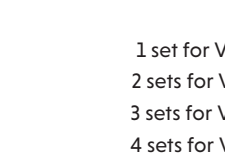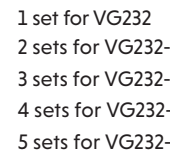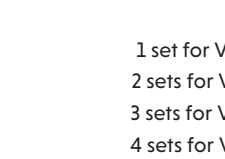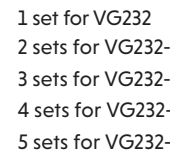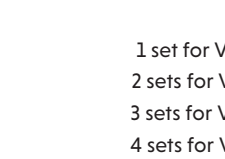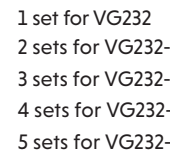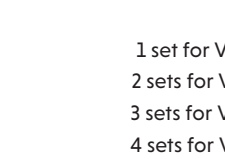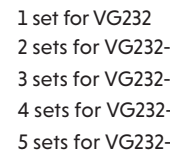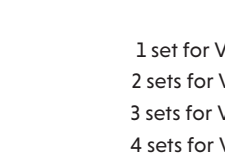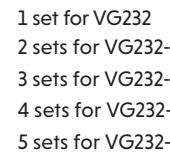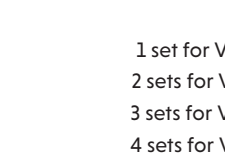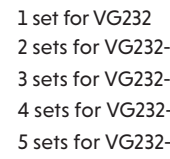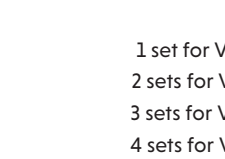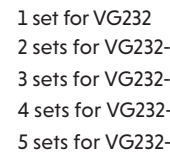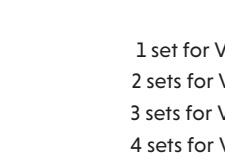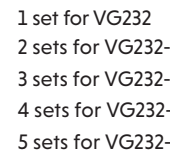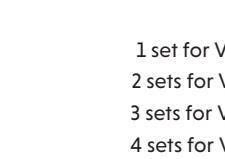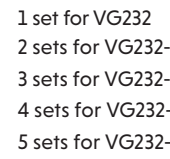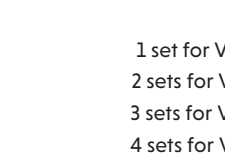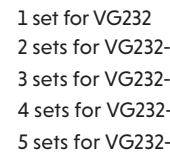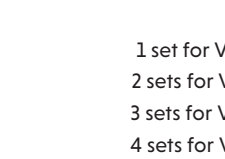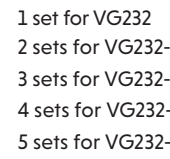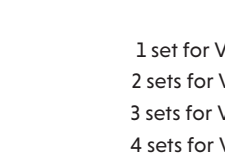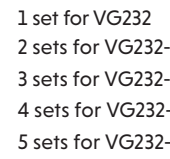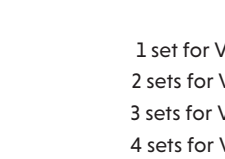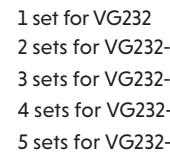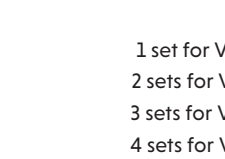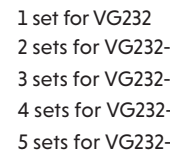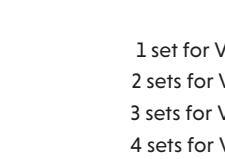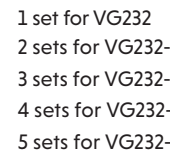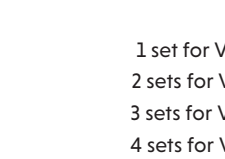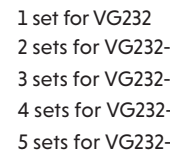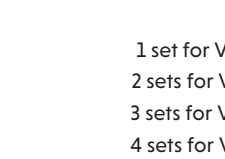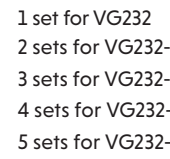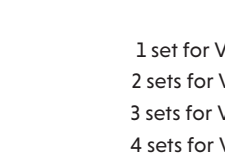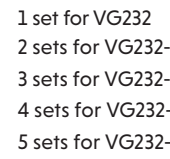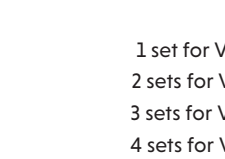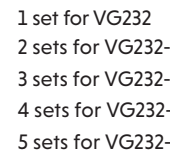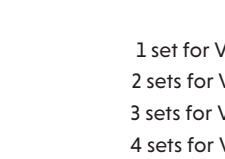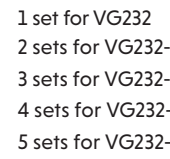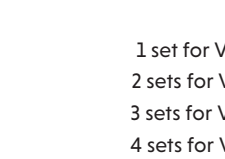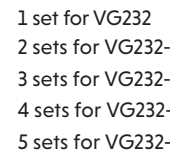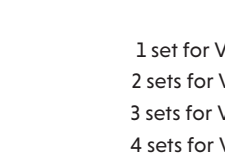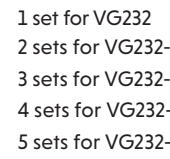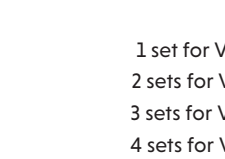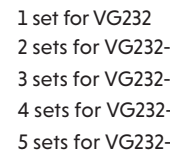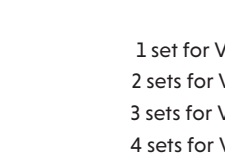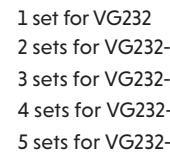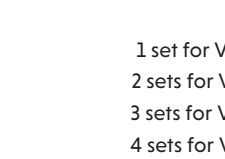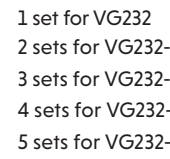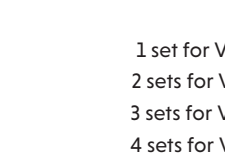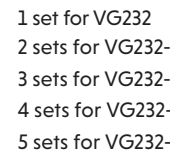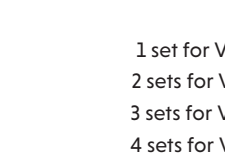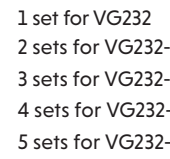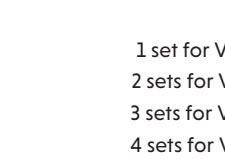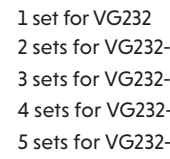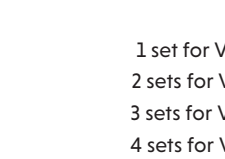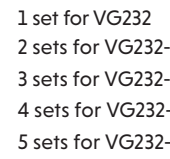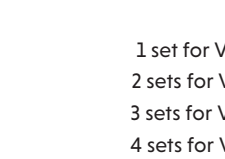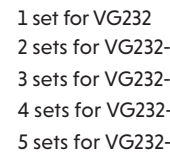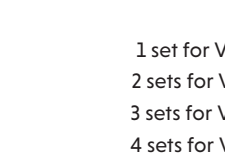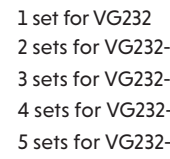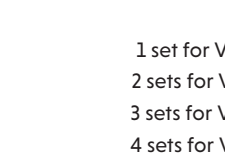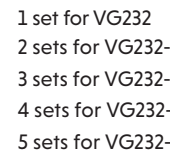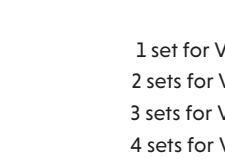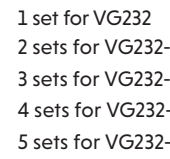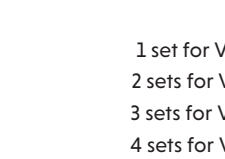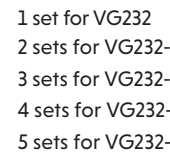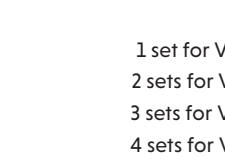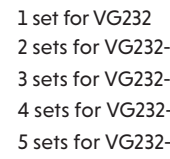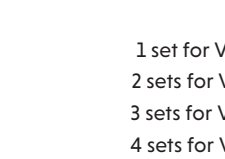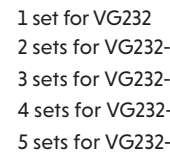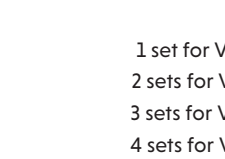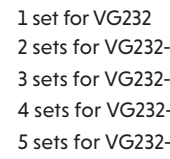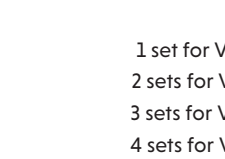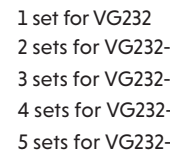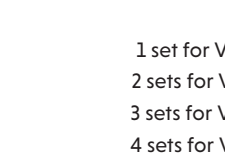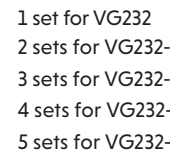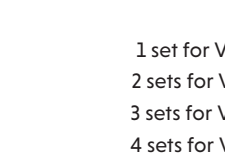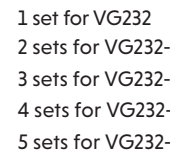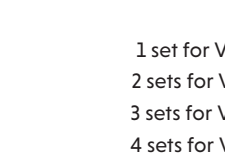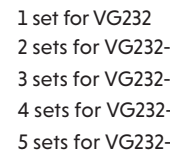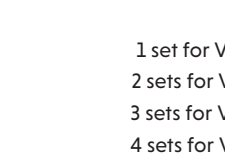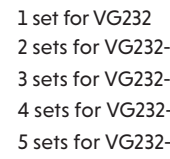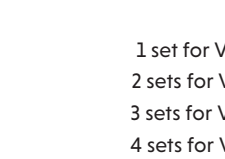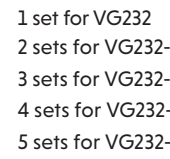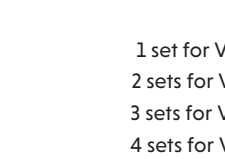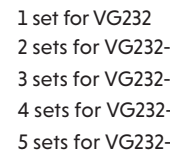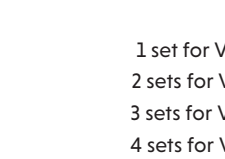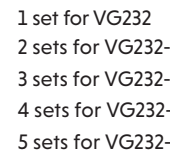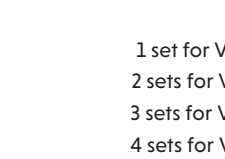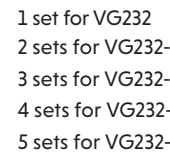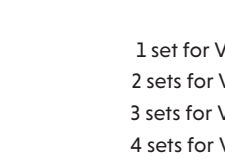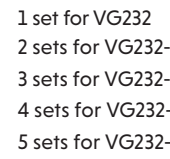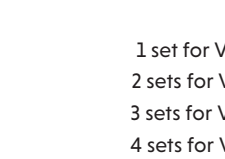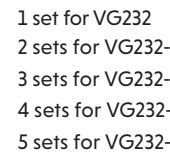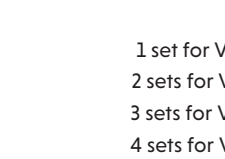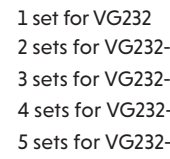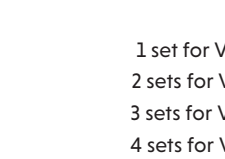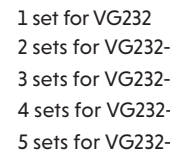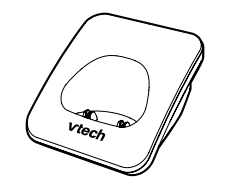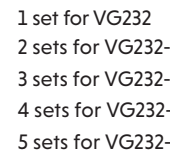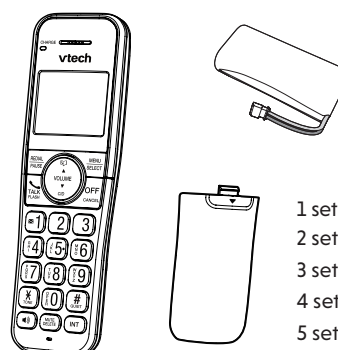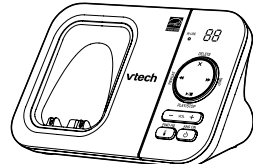

SOUND SETTINGS

Key tone

You can turn the key tone on or off.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to scroll to **Settings** and then press **SELECT**.
- Scroll to choose **Key tone**, then press **SELECT**.
- Scroll to choose **On** or **Off**, then press **SELECT**.

Ringer tone

You can choose from different ringer tones for each handset.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to scroll to **Ringers** and then press **SELECT**.
- Scroll to **Ringer tone**, then press **SELECT**.
- Scroll to sample each ringer tone, then press **SELECT** to save.



NOTE: If you turn off the ringer volume, you will not hear ringer tone samples.

Ringer volume

You can adjust the ringer volume level, or turn the ringer off.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to scroll to **Ringers** and then press **SELECT**.
- Press **SELECT** again to choose **Ringer volume**.
- Scroll to choose a volume level. A sample of each ringer volume plays as you scroll through the choices.
- Press **SELECT** to save.

NOTES:

- If you turn off the volume, the handset will be silenced and displays **Ringer off**.
- When the ringer volume is set to **Off**, the handset still rings when you press **▮/FIND HS** at the telephone base.

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **MUTE** or **OFF**. The handset displays **Ringer muted**.

Turn on or off the call screening

Use this feature to choose whether incoming messages can be heard over the telephone base when they are being recorded. If you turn call screening on, you hear the incoming message.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Scroll to choose **Ans sys setup** and press **SELECT**.
- Press **SELECT** again to choose **Call screening**.
- Scroll to choose **On** or **Off**, then press **SELECT** to save.

Screen a call with answering system

Screen calls at the cordless handset:

If the answering system is on and a call is being answered by the answering system, the handset shows **To screen call** and press **[SELECT]** alternately. Press **SELECT** to screen the call on your handset. The handset shows **Screening...**

Option while a message is being recorded

- Press **VOLUME ▼** or **VOLUME ▲** on the handset to adjust the call screening volume.

Screen calls at the base:

If the answering system and call screening are on, the announcement and the incoming message broadcast at the telephone base when a call is answered by the answering system.

Option while a message is being recorded

- Press **VOL -** or **VOL +** on the telephone base to adjust the call screening volume.
- Press **►/PLAY/STOP** to temporarily turn on the screening if the call screening is set to off.

RETRIEVE VOICEMAIL FROM TELEPHONE SERVICE

Voicemail is a feature available from most telephone service providers. It may be included with your telephone service, or may be optional. Fees may apply.

Retrieve voicemail

If you subscribe to a voicemail service offered by your telephone service provider, the handset displays **✉** and **New voicemail** when you received a voicemail. To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

NOTE: After you have listened to all new voicemail messages, the indicators on the handset turn off automatically.

Set speed dial voicemail number

You can save the voicemail number to **✉** on each handset for easy access. When you want to retrieve voicemail messages, press and hold 1. Contact your

Quiet mode

You can turn on the quiet mode for a period of time. During this period, all tones (except paging tone) and call screening are muted.

- Press and hold **QUIET #** on the handset when it is not in use.
- Use the dialing keys (**0-9**) to enter the duration, and then press **SELECT** to save.
- To turn off the quiet mode, press and hold **QUIET #** on the handset when it is not in use.

ABOUT THE BUILT-IN ANSWERING SYSTEM AND VOICEMAIL SERVICE

For message recording, your telephone has a built-in answering system, and it also supports voicemail service offered by your telephone service provider (subscription is required, and fee may apply).

The main differences between them are:

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.
Display new message	When you received new messages, the handset displays XX new messages , and the message window on the telephone base flashes.	When you received new messages, the handset displays ✉ and New voicemail .
Method to retrieve messages	To retrieve messages: <ul style="list-style-type: none">Press ►/▮ on the telephone base; orPress MENU on the handset, and then select Play messages; orAccess remotely with an access code.	Press ✉ on the dialpad, and enter an access number from your telephone service provider; <ul style="list-style-type: none">- OR -Press and hold ✉ to dial if you have saved the access number.

New message indication

When there are new messages in the built-in answering system, the handset displays **XX new messages**, and the message window on the telephone base flashes.

Message window display	Description
	No messages.
	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
	Total number of old messages and memos recorded. The current message number during old message playback.
	<ul style="list-style-type: none">Total number of new messages and memos. The number flashes when there are new messages that have not been reviewed.Current message number during new message playback.After a power failure, the number in the message window flashes.Indicate that the date and time need to be set.
	Memory is full. Messages must be deleted before new messages can be recorded.
	The telephone base speaker volume level while adjusting.
	The telephone base ringer level while adjusting.
	<ul style="list-style-type: none">The answering system is being programmed by a system handset.The answering system is answering a call or recording a memo or announcement.The answering system is being accessed remotely.The directory or caller ID log is being accessed by a system handset.

TURN ON/ OFF THE ANSWERING SYSTEM

The answering system must be turned on to answer and record messages.

When the answering system is turned on, the **ON/ANS** light on the telephone base turns on and **ANS** ON displays on the handset.

Press **ON/ANS** on the base to turn the answering system on or off. - **OR** -

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Scroll to choose **Answer on/off** and then press **SELECT**.
- Scroll to choose **On** or **Off**, then press **SELECT** to save.

ANSWERING SYSTEM SETTINGS

Set your built-in answering system

The answering system can record and store up to 99 messages. Each message can be up to 3 minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message characteristics. Messages remain available for replay until you delete them.

If the answering system has less than 3 minutes of recording time left, "*Less than 3 minutes to record*" is announced before the message playback and **Rec mem** log appears on the handset screen.

If the memory is full, the answering system announces, "*Memory is full*." The number of messages and F flash, alternatively, in the message window, and **Rec mem** log appears on the handset screen. You must delete some messages before recording new ones.

Your answering system allows you to set your announcement, to save and delete messages, activate call screening, to set number of rings before pick up, and to access remotely.

Voice language

NOTE: This feature is available in Canada version only.

The voice prompt language is preset to English. You can select English or French to be used for all voice prompts.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Settings** and then press **SELECT**.
- Scroll to choose **Voice language** and then press **SELECT**.

- Scroll to choose **English** or **Français** and then press **SELECT**.

Announcement

Your outgoing announcement plays when calls are answered by the answering system. The telephone has a default outgoing announcement, "*Hello, please leave a message after the tone.*" You can use this announcement, or record your own.

Record a new outgoing announcement:

The announcement can be up to 90 seconds in length.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Scroll to choose **Ans sys setup** and then press **SELECT**.
- The screen displays **Play [2] Del [3] Rec [7]** and it announces, "*To play, press 2. To record, press 7. Press 7 to record.*"
- The handset announces, "*Record after the tone. Press 5 when you are done.*" and it displays **Recording... Stop [5]**.
- After the tone, speak towards the handset microphone.
- Press 5 when finished. The handset plays back the recorded announcement. Press 5 or **OFF** to stop the playback at any time.

To listen to the recorded announcement again, wait after playback has completed, then press 2.

NOTE: Announcements shorter than two seconds will not be recorded.

Play your announcement:

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Scroll to choose **Ans sys setup** and press **SELECT**.
- The screen displays **Play [2] Del [3] Rec [7]** and it announces, "*To play, press 2. To record, press 7.*" Press 2 to play the current announcement.

Options during playback:

- Press **VOLUME ▼** or **VOLUME ▲** to adjust the listening volume.
- Press 5 or **OFF** to stop at any time.

Delete your announcement:

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **SELECT** to choose **Announcement**.
- The screen displays **Play [2] Del [3] Rec [7]** and it announces, "*To play, press 2. To record, press 7.*" Press 3 to delete your recorded announcement. The handset displays **Ann**

deleted and announces "Announcement deleted."

NOTE: After you deleted your own recorded announcement, the answering system answers calls with the default announcement.

Set number of rings

You can set the answering system to answer an incoming call after two, three, four, five or six rings, or select toll saver.

If you choose toll saver, the answering system answers a call after two rings when you have new messages, or after four rings when you have no new messages. This enables you to check for new messages and avoid paying unnecessary long distance charges if you are calling from outside your local area.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Scroll to choose **Ans sys setup** and then press **SELECT**.
- Scroll to choose **# of rings** and then press **SELECT**.
- Scroll to choose from **2, 3, 4, 5, 6** or **Toll saver**, then press **SELECT** to save.

Turn on or off the message alert tone

When the message alert tone is set to on, and there is at least one new message, the telephone base beeps every 10 seconds. The tone stops when all new messages have been reviewed.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Scroll to choose **Ans sys setup** and press **SELECT**.
- Scroll to choose **Msg alert tone** and press **SELECT**.
- Scroll to choose **On** or **Off**, then press **SELECT** to save.

NOTE: The message alert tone beeps only if all the following conditions are met.

- Answering system is on.
- Message alert tone setting is on.
- There are new messages.

Playback messages

You can listen to messages at the telephone base or on a cordless handset. When playback begins, the total number of messages is announced. Before each message, you hear the day and time of the recording. After the last message, you hear, "*End of messages.*" Make sure you set the date and time correctly. Refer to **Set date and time** for more details.

To listen to messages at the base:

- Press **►/PLAY/STOP** when the phone is not in use. When you have no message in the answering system, the telephone base announces, "*You have no message.*"

Options during playback

- Press **VOL -** or **VOL +** to adjust the listening volume.
- Press **►/SKIP** to skip to the next message.
- Press **►/REPEAT** to repeat the playing message. Press **►/REPEAT** twice to listen to the previous message.
- Press **X/DELETE** to delete the playing message. The telephone base advances to the next message.
- Press **►/PLAY/STOP** to stop the playback.

To listen to messages with the handset:

- Press **MENU** when the handset is not in use. The handset displays **Play messages**.
- Press **SELECT**. If you have either new or old messages, the messages play automatically.
 - The system announces the number of messages, and then begins playback. The message sequence is shown on the handset's screen.
- Press **OFF** to stop the playback.

Options during playback

- Press **VOLUME ▼** or **VOLUME ▲** to adjust the listening volume.
- Press **6** to skip to the next message.
- Press 4 to repeat the playing message. Press 4 twice to listen to the previous message.
- Press 3 to delete the playing message. The telephone base advances to the next message.
- Press **OFF** to stop the playback.

Delete all messages

Using the base

- Press **X/DELETE** when the telephone is not in use. The telephone base says, "*To delete all old messages, press X/DELETE again.*"
- Press **X/DELETE** again. All previously reviewed messages are erased and the telephone announces - *All old messages deleted.*

Using the handset

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Scroll to choose **Delete all old** and then press **SELECT**.
- Press **SELECT** to confirm. The handset displays **Deleting...** and then **No old messages**. It returns to the previous menu, and you hear a confirmation tone.

Answering system remote access

You can reach your answering system remotely by dialing your home telephone number from any touch-tone telephone.

- Dial your telephone number from any touch-tone telephone.
- Once the system plays your announcement, enter the two-digit remote access code (**19** is the default code).
 - The system automatically announces the number of new or old messages (if any), and then begins to play them.

You can also enter the following remote commands.

Command	Description
1	Play all messages.
2	Play only new messages.
3	Delete the current message (during playback).
33	Delete all old messages.
4	Repeat the current message (during playback).
5	Stop.
*5	Hear a list of remote commands.
6	Skip to the next message (during playback).
*7	Record a new announcement.
8	End the call.
0	Turn the answering system on or off.

- Hang up or press **8** to end the call.

NOTES:

- If you do not press any key after you enter the remote access code, all new messages play. If there are no new messages, all old messages play.
- Once the new messages have played, the telephone announces the help menu options. If you do not press any key within 20 seconds, the remote access call automatically disconnects.
- When the answering system is turned off, the telephone answers after 10 rings, and announces, "*Please enter your remote access code.*"
- When the memory is full, the answering system answers incoming calls after 10 rings and announces, "*Memory is full. Enter your remote access code.*"

Change remote access code

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Scroll to choose **Ans sys setup** and press **SELECT**.
- Scroll to choose **Remote code** and press **SELECT**.
- Use the dialing keys to enter a two-digit number.
 - **OR** -
 - Scroll to a desired two-digit number.
- Press **SELECT** to confirm.

Call intercept while using answering system

When a caller is leaving a message on your answering system, you can stop recording and talk to the caller by pressing **⏏** on the handset.

Recording memo

Memos are your own recorded messages used as reminders for yourself or others using the same answering system. You can record your own memos using a system handset. Playback and delete them in the same way as incoming messages.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Scroll to choose **Record memo** and then press **SELECT**. The handset displays **Recording... Stop [5]** and announces, "*Record after the tone. Press 5 when you are done.*"
- Speak towards the handset microphone. Press **5** or **OFF** when you finish recording. The handset announces "*Recorded.*"

NOTES:

- If you record a memo when the answering system memory is full, the system announces, "*Memory is full.*"
- Each memo can be up to three minutes in length. Memos shorter than two seconds are not recorded.
- When the answering system has less than three minutes of recording time left, the handset announces, "*Less than three minutes to record.*" and displays **Rec mem** log.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase

TECHNICAL SPECIFICATIONS

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	Handset: 1921.536-1928.448 MHz Telephone Base: 1921.536-1928.448 MHz
Channels	DECT channel: 5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirement	Handset: 2.4V Ni-MH battery Telephone Base: 6V DC @ 0.4A Charger: 6V DC @ 64A
Memory	Directory: 50 memory locations; up to 30 digits and 15 characters Caller ID log: 50 memory locations; up to 24 digits and 15 characters

DISCLAIMER AND LIMITATION OF LIABILITY

Vtech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. Vtech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product.

Company: Vtech Communications, Inc.

Address: 9020 SW Washington Square Road - Ste 555 Tigard, OR 97223, United States

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in Canada

Telephone identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.

The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR label indicating it meets the latest energy efficiency guidelines.