

KENWOOD

FreeTalk[®]FM



UBZ-GR14

FM TRANSCEIVER/ STEREO RADIO
INSTRUCTION MANUAL

ÉMETTEUR-RÉCEPTEUR/ RADIO STÉRÉO FM
MODE D'EMPLOI

TRANSCEPTOR FM/ RADIO ESTÉREO
MANUAL DE INSTRUCCIONES

KENWOOD CORPORATION

© B62-1578-10 (K)

09 08 07 06 05 04 03 02 01

ENGLISH



THANK YOU

We are grateful for your purchase of this **KENWOOD** product and welcome you to the Family Radio Service (FRS). FRS is a personal, short range 2-way radio band for family & friends to keep in touch without the need for a license, radio knowledge, or monthly charges. Your **KENWOOD FreeTalk^{FM}** radio is called a "transceiver", meaning "transmitter & receiver". Your transceiver provides safety and convenience almost anywhere.

Communication distance depends on your location; you'll get a maximum distance of up to approximately 2 miles (3.2 km) in open areas, less in buildings and vehicles.

PRECAUTIONS

- Do not modify or attempt to adjust the transceiver for any reason.
- Avoid extremes in exposure to weather, heat, and cold. This transceiver can be used in mild weather conditions, but it is not waterproof.
- Do not expose the transceiver to long periods of direct sunlight, nor place it close to heating appliances.
- Do not place the transceiver in excessively dusty, humid, or wet areas, nor on unstable surfaces.
- If an abnormal odor or smoke is detected coming from the transceiver, immediately switch OFF the power and remove the batteries from the transceiver. Contact your **KENWOOD** dealer.

FEATURES

- 14 transceiver channels
- 38 code settings for each channel
- Call alert
- Automatic battery power saver
- Low battery power warning tone
- Key lock
- 2 mile (3.2 km) communication range
- FM radio (in stereo when using the supplied headphones)

CONTENTS

ORIENTATION	1
DISPLAY	2
PREPARATION	3
INSTALLING/ REMOVING THE BATTERIES	3
INSTALLING/ REMOVING THE BELT HOOK	4
INSTALLING/ REMOVING THE STEREO HEADPHONES	4
INSTALLING/ REMOVING OPTIONAL ACCESSORIES	5
GETTING STARTED	6
① SWITCHING THE POWER ON/ OFF	6
② SELECTING AN OPERATING MODE	6
③ ADJUSTING THE VOLUME	6
FRS MODE	7
① SELECTING A CHANNEL	7
② LISTENING FOR A CALL	7
③ MAKING A CALL	8
④ CHANNEL SCANNING	9
⑤ CODE SCANNING	9
FM MODE	10
① SELECTING A STATION	10
② SCANNING THE FM BAND	10
FRS/FM MODE	11
① SELECTING AN FRS CHANNEL	11
② SELECTING AN FM STATION	11
③ SCANNING THE FM BAND	12
④ MAKING A CALL	12
OPERATING FEATURES	13
MONITORING AN FRS CHANNEL	13
KEY LOCK	13
DISPLAY ILLUMINATION	14
BATTERY POWER SAVER	14
LOW BATTERY WARNING	14
NOTICES TO THE USER	15
LIMITED WARRANTY STATEMENT (U.S.A.)	17
LIMITED WARRANTY STATEMENT (CANADA)	19

ORIENTATION

ENGLISH

PTT switch

Press and hold while speaking into the microphone, to transmit.

Power switch

Press and hold for 3 seconds to switch the transceiver ON or OFF.

M key

Press before making a call, to alert the other party. Press and hold to turn the squelch OFF.

MIC-SP jacks

▲ / ▼ keys

Press ▲ or ▼ to increase or decrease the volume, channel number, channel code, or station when in the appropriate mode. Also used to scan the radio band.

Microphone

Speak here when making a call.

Speaker

 
Listen here for received calls.

L key

Press to turn the display backlight ON. Press and hold to lock the **MODE** key and Power switch.




MODE key

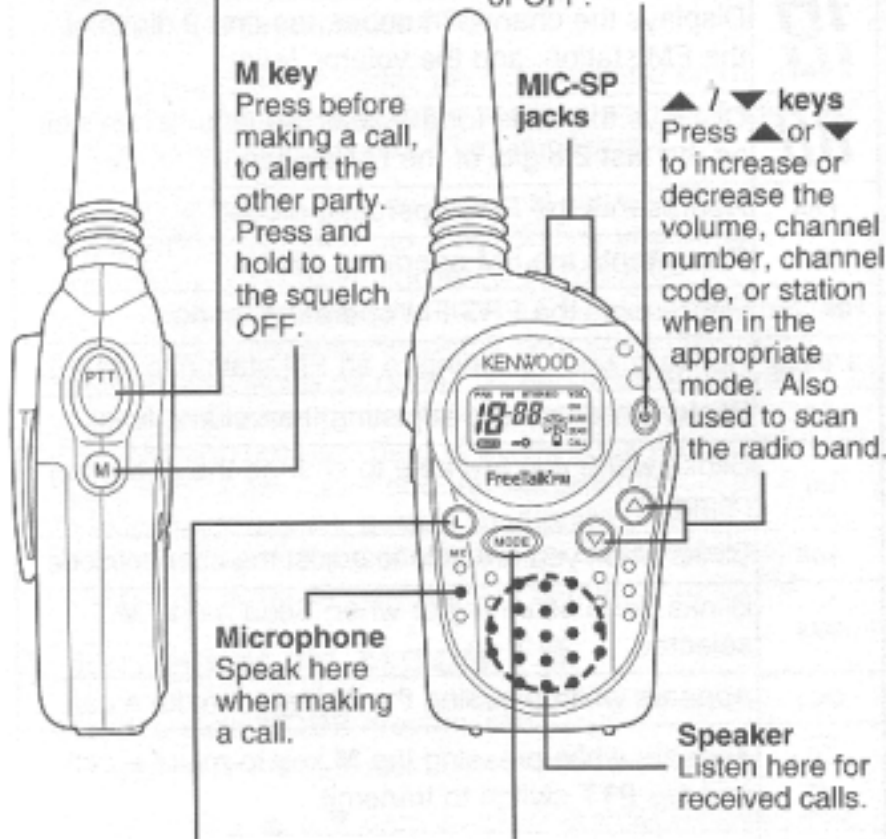Press and hold to select the FRS, FM, or FRS/FM operating mode. Press while in an operating mode to change the transceiver settings.



DISPLAY



18	Displays the channel number, the first 2 digits of the FM station, and the volume level.
88	Displays the code for the selected channel as well as the last 2 digits of the FM station.
FRS	Represents the FRS operating mode.
FM	Represents the FM operating mode.
FRS FM	Represents the FRS/FM operating mode.
STEREO	Appears when listening to an FM station in stereo.
VOL	Blinks while you are adjusting the volume level.
CH	Blinks when you are able to change the operating channel.
SUB	Blinks when you are able to adjust the channel code.
SCAN	Blinks while scanning or when Scan mode is selected.
CALL	Appears while pressing the M key to make a call.
	Appears while pressing the M key to make a call and the PTT switch to transmit.
	Appears when a signal is present on the selected channel.
	Blinks while the Key Lock function is activated.
BATT	Blinks when the battery power is low.

 
PREPARATION

INSTALLING/ REMOVING THE BATTERIES

This transceiver requires 4 AAA batteries. Use high quality alkaline batteries to enjoy longer periods of battery life.


- 1 If the belt hook is installed, first remove it from the transceiver (refer to "INSTALLING/ REMOVING THE BELT HOOK" on page 4).

- 2 Pull back on the battery cover latch, then remove the battery cover.

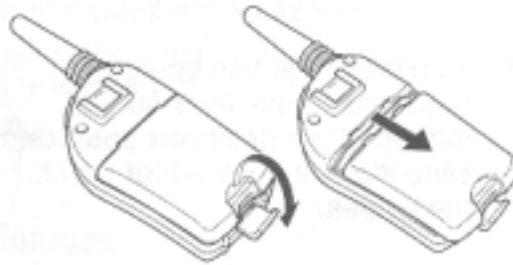

- 3 Insert or remove 4 AAA batteries.

 - When inserting batteries, be sure to match the battery polarities with those marked in the battery compartment.
- It is normally easier to install the batteries by starting at either end and inserting the batteries side by side, as there are no grooves in the battery compartment.

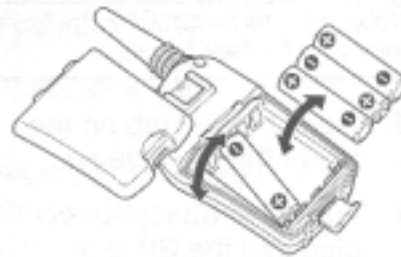

- 4 Replace the battery cover, making sure the battery cover latch locks in place.

INSTALLING/ REMOVING THE BELT HOOK

- 1 Align the belt hook tabs with the guides on the rear of the transceiver.

- 2 Slide the belt hook down the guides until it locks in place.



 
- 3 To remove the belt hook, pull back on the lever on the top of the belt hook and slide the belt hook out of the guides.



INSTALLING/ REMOVING THE STEREO HEADPHONES

Note: Always switch OFF the transceiver power when installing or removing the headphones.

- 1 Open the **SP** tab on the top of the transceiver.
- 2 Insert the headphone plug into the **SP** jack.
- 3 When you remove the headphones from the transceiver, be sure to cover the **SP** jack with the attached tab in order to keep dust and dirt away from the contacts.

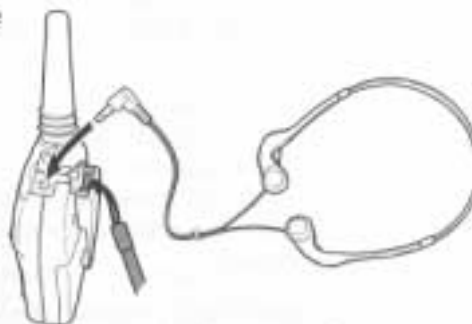

INSTALLING/ REMOVING OPTIONAL ACCESSORIES

Note: Always switch OFF the transceiver power when installing or removing the optional accessories.

The following accessories can be used with this transceiver:

- SMC-34 Speaker-Microphone
- HMC-3 Headset
- EMC-3 Clip Microphone with Earphone

To install these accessories:


- 1 Open the **MIC-SP** tabs on the top of the transceiver.
- 2 Insert the accessory's plugs into the **MIC-SP** jacks.
- 3 When you remove the accessory from the transceiver, be sure to cover the **MIC-SP** jacks with the attached tabs in order to keep dust and dirt away from the contacts.

Note:

- ◆ Refer to the accessory instruction manuals for detailed instruction on each of the accessories.
- ◆ The 3 programmable function keys on the SMC-34 cannot be used with this transceiver. To use the speaker-microphone, press the **PTT** switch to transmit and release it to receive. You can also adjust the volume level using the SMC-34 **Volume** control.

GETTING STARTED

① SWITCHING THE POWER ON/ OFF

To switch the transceiver power ON (or OFF), press and hold the  switch for 3 seconds.

- A tone sounds to confirm that the power has been switched ON (or OFF).

② SELECTING AN OPERATING MODE

- 1 Press and hold the **MODE** key to cycle through FRS, FM, and FRS/FM Models.



- Each time you press and hold the **MODE** key for 0.5 seconds, the operating mode cycles to the next mode.
- FRS, FM, or both icons appear, indicating the selected operating mode.

- 2 Depending on the operating mode you have selected, refer to the appropriate section:

- FRS Mode – page 7. FRS Mode allows you to send and receive transmissions.
- FM Mode – page 10. FM Mode allows you to listen to FM radio broadcasts.
- FRS/FM Mode – page 11. FRS/FM Mode allows you to monitor only a single channel for sending and receiving transmissions, while also listening to FM radio broadcasts.

③ ADJUSTING THE VOLUME

Press the  or  key to increase or decrease the volume level.

- Press and hold the  or  key to continuously increase or decrease the volume until you release the key, or until the volume is at its maximum or minimum level.
- The volume level (1 ~ 8) appears for approximately 2 seconds before returning to the channel number/ station.

FRS MODE

① SELECTING A CHANNEL

- 1 Press the **MODE** key momentarily.
 - The **FRS** and **CH** icons blink.
- 2 Press the **▲** or **▼** key to increase or decrease the channel number.
 - Press and hold the **▲** or **▼** key to continuously increase or decrease the channel number until you release the key.
- 3 Once you have selected your desired channel number (1 ~ 14), press the **PTT** switch to complete the selection and return to normal operation.

② LISTENING FOR A CALL

- 1 If a calling party first presses their **M** key to alert you that they are going to speak, you will hear a 2 second ringing tone.
- 2 You will hear audio from the speaker. Readjust the volume if necessary.
 - The reception indicator appears while you are receiving.
- 3 When the party has finished speaking, you can respond to the call (refer to "③ MAKING A CALL" on page 8).

This transceiver has a feature that allows you to ignore unwanted calls. To ignore unwanted calls, you can set up a code on your selected channel. However, you must ensure that each member of your group is using the same code, otherwise you will be unable to communicate with each other. If you set the code on your selected channel to "OF" (off), you will hear calls from everyone within range who is using the same channel you have selected.

- 1 Press the **MODE** key momentarily, two times.
 - The **FRS** and **SUB** icons blink.
- 2 Press the **▲** or **▼** key to increase or decrease the code number of the selected channel.
 - Press and hold the **▲** or **▼** key to continuously increase or decrease the code number until you release the key.
- 3 Once you have selected your desired code number (01 ~ 38 or OF), press the **PTT** switch to complete the selection and return to normal operation.
- 4 Make sure your other party members are using the same code that you have set up.
 - If each party member is using a different code, you will not be able to hear each other's calls.

③ MAKING A CALL

- 1 When you want to make a call on your selected channel, first press the **M** key to alert the other party that you are about to make a call.
 - The transmission indicator and **CALL** icon appear.
 - This step is not necessary when you are responding to a call, as the other party is already expecting a response.
- 2 Press and hold the **PTT** switch, hold the transceiver about 3 inches (7 1/2 cm) from your mouth, then speak into the microphone using your normal voice.
 - The transmission indicator appears while you are transmitting.
- 3 When you finish speaking, release the **PTT** switch.

Note: If you do not release the **PTT** switch after you finish talking, you will not be able to receive any calls. Additionally, pressing the **PTT** switch for extended periods will reduce the battery power.

④ CHANNEL SCANNING

- 1 When you want to scan all channels for a signal, press the **MODE** key momentarily, three times.
 - The **FRS**, **CH**, and **SCAN** icons blink.
- 2 Press the ▲ or ▼ key to begin scanning the channels from channel 1 to 14.
 - All channel codes are turned off during scan.
- 3 When a signal is found on a channel, scan will pause at that channel for 10 seconds.
 - To resume scanning before the 10 second timer elapses, press the ▲ or ▼ key.
- 4 To end scan and return to normal operation, press the **PTT** switch.

⑤ CODE SCANNING

- 1 When you want to scan all code settings on a single channel, press the **MODE** key momentarily, four times.
 - The **FRS**, **SUB**, and **SCAN** icons blink.
- 2 Press the ▲ or ▼ key to begin scanning the codes from code 01 to 38.
- 3 When a signal is found at a code setting, scan will pause at that code for 10 seconds.
 - To resume scanning before the 10 second timer elapses, press the ▲ or ▼ key.
- 4 To end scan and return to normal operation, press the **PTT** switch.

FM MODE

① SELECTING A STATION

- 1 Press the **MODE** key momentarily.
 - The **FM** icon blinks.
- 2 Press the **▲** or **▼** key to increase or decrease the FM station.
- 3 Once you have selected your desired station, press the **PTT** switch.
 - Pressing the **M** key after selecting a station will return to the last station you were using.

② SCANNING THE FM BAND

- 1 Press the **MODE** key momentarily.
 - The **FM** icon blinks.
- 2 Press and hold the **▲** or **▼** key for 0.5 seconds.
 - The **FM** and **SCAN** icons blink and the transceiver scans the FM radio band.
- 3 When a station is found, scan will pause at that station for 10 seconds.
 - To resume scanning before the 10 second timer elapses, press the **▲** or **▼** key.
- 4 To end scan and keep the radio station that has been found, press the **PTT** switch.
 - Pressing the **M** key after finding a station will end scan and return to the last station you were using.

FRS/FM MODE

① SELECTING AN FRS CHANNEL

Only one FRS station can be monitored while in FRS/FM Mode. The channel monitored is the last channel you used while in FRS Mode.

To select a channel, you must first enter FRS Mode, then select a channel as described in "① SELECTING A CHANNEL" on page 7.

While operating the transceiver, the FRS channel is continuously monitored. When a signal is present and the code matches, the transceiver automatically switches to the FRS channel. When the signal is finished, the transceiver will wait for 1 second before returning to the FM radio band. However, if a signal is present but the code does not match, the receive icon appears but the transceiver will not switch to the FRS channel. To force the transceiver to switch to the FRS channel at such a time, press and hold the **M** key. When you release the **M** key, the transceiver will wait for 1 second before returning to the FM radio band.

② SELECTING AN FM STATION

- 1 Press the **MODE** key momentarily.
 - The **FM** icon blinks.
- 2 Press the **▲** or **▼** key to increase or decrease the FM station.
- 3 Once you have selected your desired station, press the **PTT** switch.
 - Pressing the **M** key after selecting a station will return to the last station you were using.

3 SCANNING THE FM BAND

- 1 Press the **MODE** key momentarily.
 - The **FM** icon blinks.
- 2 Press and hold the **▲** or **▼** key for 0.5 seconds.
 - The **FM** and **SCAN** icons blink and the transceiver scans the FM radio band.
- 3 When a station is found, scan will pause at that station for 10 seconds.
 - To resume scanning before the 10 second timer elapses, press the **▲** or **▼** key.
- 4 To end scan and keep the radio station that has been found, press the **PTT** switch.
 - Pressing the **M** key after finding a station will end scan and return to the last station you were using.

4 MAKING A CALL

- 1 When you want to make a call on the FRS channel, first press the **M** key to alert the other party that you are about to make a call.
 - The transmission indicator and **CALL** icon appear.
 - This step is not necessary when you are responding to a call, as the other party is already expecting a response.
- 2 Press and hold the **PTT** switch, hold the transceiver about 3 inches (7 1/2 cm) from your mouth, then speak into the microphone using your normal voice.
 - The transmission indicator appears while you are transmitting.
- 3 When you finish speaking, release the **PTT** switch.
 - The transceiver returns to the FM radio band after 1 second.

Note: If you do not release the **PTT** switch after you finish talking, you will not be able to receive any calls. Additionally, pressing the **PTT** switch for extended periods will reduce the battery power.


OPERATING FEATURES


MONITORING AN FRS CHANNEL

When you are not receiving a call, the squelch on the transceiver automatically mutes the speaker so that you will not hear very weak signals or background noise. You can override this feature by following the steps given below.

- 1 Press and hold the **M** key for more than 2 seconds.
 - Squelch is deactivated while you are pressing this key. You will hear background noise at this time.
- 2 Release the **M** key to reactivate the squelch.

KEY LOCK

You can lock the **MODE** key and the  switch to prevent accidentally changing the operating mode, the channel/station settings, and switching the transceiver OFF.

- 1 Press and hold the **L** key for more than 0.5 seconds.
 - The key lock icon blinks. You can continue to perform functions in each of the operating modes which does not involve the **MODE** key or the  switch.
- 2 To unlock the keys, press and hold the **L** key again for more than 0.5 seconds.

DISPLAY ILLUMINATION

- 1 To turn the display backlight ON, press the **L** key momentarily.
 - The display backlight turns ON for 10 seconds.
 - Each time you press any key other than the **PTT** switch while the display backlight is ON, the 10 second timer will reset, allowing the display to remain illuminated for an additional 10 seconds after releasing the key.
- 2 To turn the display backlight OFF, press the **L** key momentarily while the display backlight is ON.

BATTERY POWER SAVER

This transceiver has been designed to give you the most out of your battery power. While using the transceiver in FRS Mode, the battery saver will automatically switch ON after 10 seconds have elapsed with no operations or received calls. Operating the transceiver or receiving a call will switch this feature OFF until 10 seconds of non-operation occurs again.

LOW BATTERY WARNING

When battery power becomes low, the "BATT" icon will flash. Replace the batteries at this time.

When replacing batteries, replace all batteries at the same time; do not mix old and new batteries together. Additionally, use batteries of only the same type; do not mix different types of batteries together.

NOTICES TO THE USER

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

One or more of the following statements may be applicable:

FCC WARNING

This equipment generates or uses radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

INFORMATION TO THE DIGITAL DEVICE USER REQUIRED BY THE FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can generate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer for technical assistance.

SAFETY INFORMATION:

Your wireless hand-held portable transceiver has been designed using a low power transmitter.

When the **PTT** switch is pressed, the transceiver generates radio frequency (RF) electromagnetic energy (EME).

This transceiver is designed to comply with the FCC Report and Order FCC 96-326 (August, 1996).

CAUTION:

To stay within the standards of the FCC's RF exposure guidelines, hold the transceiver and antenna at least 2 inches (5 cm) from your face and speak in your normal voice. Keep the antenna pointed up and away from your face.

If you wear the transceiver on your body, ensure that the antenna is at least 1 inch (2.5 cm) away from your body while you are transmitting.

Use only **KENWOOD** genuine accessories and the supplied antenna. Unauthorized antennas, modifications, or attachments may damage the transceiver and violate FCC regulations.

LIMITED WARRANTY STATEMENT (U.S.A.)

Kenwood Communications Corporation ("**KENWOOD**") warrants this product and accessory for ninety (90) days on parts and labor, measured from the date of purchase by the first end user. This Warranty is enforceable only by the first end user.

Except as specified below, this warranty covers all defects in material and workmanship in this product. The following are not covered by the Warranty:

1. Damage, deterioration or failure resulting from:
 - A. Accident, misuse, abuse, neglect, product modification or failure to follow instructions contained in your Instruction Manual.
 - B. Repair or attempted repair by anyone not authorized by **KENWOOD**.
 - C. Installation of parts that do not conform to the quality or specifications of the original parts.
2. Damage or loss occurring during shipment (claims must be presented to the carrier).
3. Any unit which is not new when sold to the first end user or upon which the serial number has been defaced, modified or removed.

Your **KENWOOD** transceiver must be returned to the original place of purchase for warranty service. Whenever the product is presented for warranty service, you must supply a sales receipt or other evidence of the date of purchase. **KENWOOD** reserves the right to repair or replace the product with a new or reconditioned product.

Unless considered unlawful or unenforceable under applicable law:

- A. ALL IMPLIED WARRANTIES WITH RESPECT TO **KENWOOD** TRANSCEIVERS, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, HEREBY ARE EXCLUDED.

B. **KENWOOD'S LIABILITY UNDER THIS WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT, AT KENWOOD'S OPTION, OF ANY DEFECTIVE PRODUCT, AND SHALL NOT INCLUDE DAMAGES OF ANY KIND, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.**

This Warranty is enforceable only in the United States of America.

If a problem develops during or after the Limited Warranty Period, or if you have any questions regarding the operation of the product, you should contact your **KENWOOD** Authorized Dealer or Distributer. If the problem or your question is not handled to your satisfaction, please contact our Customer Relations Department at (310) 639-5300.

KENWOOD SERVICE CORPORATION

P. O. Box 22745

2201 East Dominguez St.

Long Beach, CA 90801-5745

Phone: (310) 639-5300

LIMITED WARRANTY STATEMENT (CANADA)

ENGLISH

Kenwood Electronics Canada Inc. (hereinafter called "**KENWOOD**") gives the following written warranty to the original purchaser of each new Kenwood product distributed in Canada by **KENWOOD** which is purchased from a **KENWOOD** authorized dealer. **KENWOOD** warrants this product to be free of defects, attributable to faulty materials or workmanship at time of manufacture, for a period of ninety (90) days from the date of original purchase. This warranty is valid only in Canada.

The following are not covered by this warranty:

- Products purchased in a foreign country or purchased in Canada and taken to a foreign country.
- Products purchased from a dealer not authorized by **KENWOOD**.
- Products used in commercial or professional applications.
- Products with the serial number defaced, altered or removed.
- Periodic check-ups that do not disclose any defects covered by this warranty.
- Damage, deterioration or failure resulting from accident, misuse, abuse, neglect or lack of periodic maintenance, product modification or failure to follow instructions contained in your owner's manual.
- Repair or attempted repair by a person or party not authorized by **KENWOOD**.
- Defects resulting from the use of parts or devices that do not conform to **KENWOOD** specifications.
- Damage or deterioration occurring to any exterior finishes cosmetic parts, adapters, antennas, cables or damages resulting from defective batteries.
- Loss, defects or damages occurring during shipping (claims must be presented to the carrier).
- In-home or on-site service and installation or removal charges.

Should this unit fail within the warranty period, return it to the original place of purchase. When applying for warranty you must present the original copy of your bill of sale as proof of warranty. Upon confirmation by the dealer that the unit has failed as per the terms and conditions set forth in this warranty, the unit will be replaced. The replacement unit will be warranted for the balance of the warranty period of the original unit. **KENWOOD** reserves the right to repair or replace the unit with a new or reconditioned product. In the event it is necessary to ship your unit to your dealer, carefully pack the unit and return it to them freight prepaid. Please include your complete return address, a detailed description of the fault(s) and your bill of sale as proof of warranty. Products repaired or replaced within warranty will be returned to you freight prepaid. The customer is responsible for all freight and related costs for the return of product(s) to destinations outside Canada.

This warranty constitutes the entire written warranty given by **KENWOOD**. No person, party, dealer, service centre or their agents or employees are authorized to extend or enlarge any portion of this warranty on behalf of **KENWOOD** by any written or verbal statement or advertisement or promotion, including any extended warranty program or plan that may be offered by the dealer or service centre, unless approved in writing by **KENWOOD**.

KENWOOD disclaims any responsibility for loss of time or use of the product or any other indirect, incidental or consequential damage to other products or goods, inconvenience or commercial loss.

The provisions contained in this written warranty are not intended to limit, modify, take away, disclaim or exclude any warranties or rights you may have which are set forth in any applicable provincial or federal laws or legislation.

This warranty card by itself is not considered by **KENWOOD** as a valid proof of purchase. When applying for warranty you must present the original copy of your bill of sale as proof of warranty.

KENWOOD ELECTRONICS CANADA INC.

6070 Kestrel Road

Mississauga, Ontario, Canada L5T 1S8

Tel.: (905) 670-7211 Fax: (905) 670-7248

LIMITED WARRANTY STATEMENT (U.S.A.)

Kenwood Communications Corporation ("**KENWOOD**") warrants this product and accessory for ninety (90) days on parts and labor, measured from the date of purchase by the first end user. This Warranty is enforceable only by the first end user.

Except as specified below, this warranty covers all defects in material and workmanship in this product. The following are not covered by the Warranty:

1. Damage, deterioration or failure resulting from:
 - A. Accident, misuse, abuse, neglect, product modification or failure to follow instructions contained in your Instruction Manual.
 - B. Repair or attempted repair by anyone not authorized by **KENWOOD**.
 - C. Installation of parts that do not conform to the quality or specifications of the original parts.
2. Damage or loss occurring during shipment (claims must be presented to the carrier).
3. Any unit which is not new when sold to the first end user or upon which the serial number has been defaced, modified or removed.

Your **KENWOOD** transceiver must be returned to the original place of purchase for warranty service. Whenever the product is presented for warranty service, you must supply a sales receipt or other evidence of the date of purchase. **KENWOOD** reserves the right to repair or replace the product with a new or reconditioned product.

Unless considered unlawful or unenforceable under applicable law:

- A. ALL IMPLIED WARRANTIES WITH RESPECT TO **KENWOOD** TRANSCEIVERS, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, HEREBY ARE EXCLUDED.

ENGLISH

KENWOOD

Part No. 937692
Printed in Thailand