

1 BBX Connections

The cable cover on the BBX unit can be removed by hand or by using a flathead screwdriver to loosen the two screws. Removing the cable cover gives access to the BBX interface points.



Figure 1: BBX Interface points (Rear View)



Figure 2: BBX Interface points (Front View)