

STP9000**Variations****STP9100**

For the STP9100, please refer to the STP9000 image, but note that the 0-9, * and # keys are not present



STP9200

For the STP9200, the two keys labelled as context keys are programmable soft keys.




Keys I, II, III are programmable soft keys

Please use the Green and Red keys to select and cancel functions

Switching On	Press and release the Mode Key.
Switching Off	Press & Hold the Mode Key until instructed to release.
Volume Adjust	Rotate the Navi-knob™.
Emergency Call	Press and hold the Emergency Key.
Changing current Talkgroup	Press Mode Key once, rotate the Navi-knob™ to choose from list of talkgroups in current folder. Wait 3-4 seconds or press the PTT to select new talkgroup.
Changing current Folder	Talk-groups are held in a folder. To Change the current folder press the Mode Key once, then use the Navigation Keys to select the required talkgroup folder. Change the talkgroup as explained above.
Initiate a Talkgroup Call	Press the PTT (top mic and speaker active).
Initiate an Individual radio call	Key in radio number and select  (use Up/Down Navigation Keys), or select the radio number from Phonebook, and press PTT to start half duplex call (top mic and speaker active) or Green Key to start full duplex call (bottom mic and earpiece active).
Initiate a Telephone Call	Key in telephone number and select  (use Up/Down Navigation Keys), or select the number from Phonebook, and press appropriate Context Key or Green Key to start call (bottom mic and earpiece active). To end call, press the other Context Key or Red key.
Send Status	Press Mode Key twice, then rotate the Navi Knob™ to select a status value. Press PTT twice to send to currently active talkgroup. Status messages can also be accessed from the menu structure.
Menu Access	Press the Menu Context key or press the Down Navigation key
Menu navigation	Use the Navigation keys
Menu selection	Press the Select Context key or press Green key
Menu exit	Press and hold the Red key to return to the top level screen 'Home.' Pressing the Up navigation key or Back context key will take you back up one menu level
Activating a Soft key function	Press and hold a programmed soft key, this could be any of the 0-9, * and # keys. The side soft key and missed event soft key functions are activated by a simple press and release
SDS text entry modes	Press the * key to toggle text input modes from Auto-Capitalisation to lower case, upper case and number entry

Top Level Screen (Home)

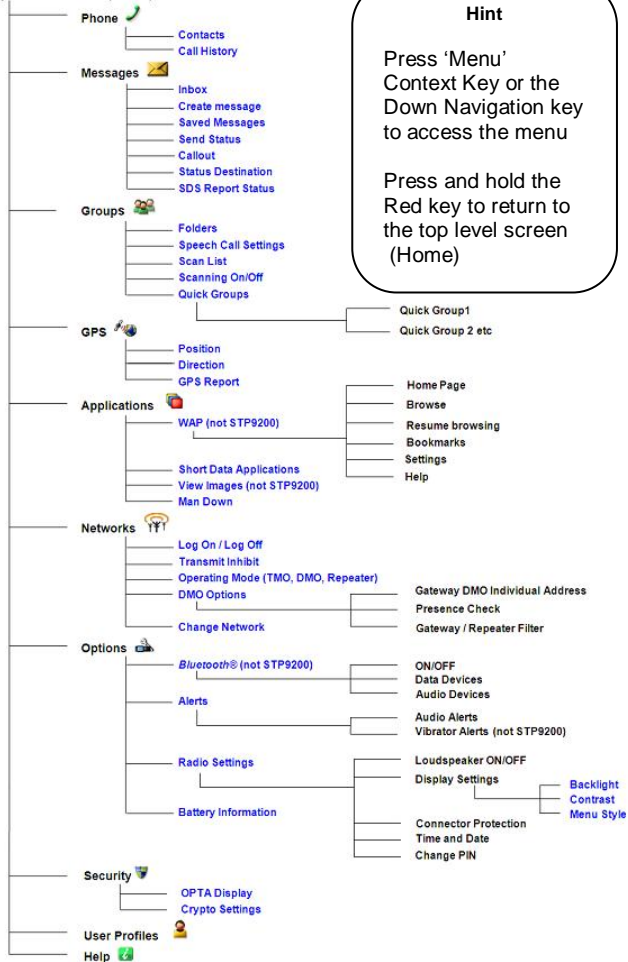

Description	9200	9000 9100
-------------	------	--------------

Status Line Icons

Charging		
Low Battery warning		
Emergency call in progress		
Calls are not encrypted		
Calls are E2E encrypted		
Missed an incoming call		
New message received		
Message Store is full		
DMO Repeater Enabled		
DMO Repeater found		
Bluetooth® on, no device connected	n/a	
Device connected using Bluetooth®	n/a	
Connector Protector Enabled		
Connector Protector Disabled		
Gateway Not used		

Description	9200	9000 9100
-------------	------	--------------

Man Down Motion only sensor active		
Man Down Tilt only sensor active		
Man Down Motion and Tilt sensors active		
Communication is mismatched		
Transmitter is inhibited		
Lone worker protection enabled		
Privacy Mode enabled		
Covert Operation Mode enabled		
Group Focus enabled		
Scanning enabled		
Shows which User Profile is active		
Packet Data active		
GPS disabled		
Keypad locked		
Repeater Not Used		

Call related icons

Dialing mode selected is to a radio		
Dialing mode selected is to a telephone		
Telephone style call		
Half duplex call in progress		
Incoming Call in progress		

DMO Incoming call		
Outgoing call		
DMO Outgoing call		
Broadcast call in progress		
Missed an incoming call		

Callout Icons

Callout		
Callout Message		
Callout Message Response Required		
Callout Message Response sent		

Callout Availability Message		
Callout Test Response Required		
Callout Test Response sent		
Callout Message is Individually Addressed		

General Icons

Battery level		
Radio Signal strength		
Volume level meter		
Turn Navi-knob™ clockwise		
Turn Navi-knob™ anti-clockwise		
Function activated		
Function deactivated		
Search Text		

Message sent		
Message with missing text		
User is in Folders		
Go up one level in Folders menu		
Talk Groups		
User is in Phonebook		
Paging Alert		
GPS (flashes while finding position)		