Bluetooth® Operation Overview **Button Control** Warning • Press and hold for 5 seconds to turn On/Off 1. Do not disassemble, repair, or modify the earbuds. 1. Please ensure that the Bluetooth function has been turned · Press once to Play/Pause 2. Do not place product in or near fire to avoid danger, as it on in the settings of your Bluetooth enabled device. • Volume +, Previous Track (press once to increase volume, uses a lithium battery. 2. Turn the earbuds on by pressing the Power On/Off, press and hold for previous track) 3. Avoid storage at extreme temperatures, this can shorten the Play/Pause, Hands-Free button until the LED indicator light • Volume -, Next Track (press once to decrease volume, press battery life and may affect the earbuds. begins to flash. The LED indicator light will flash to detect and hold for next track) 4. Keep the earbuds dry and do not store the earbuds in damp Bluetooth enabled devices near you and will enter pairing · Hands-free Phone Use: Press On/Off, Play/Pause, Hands-Free areas to avoid damage to the earbuds. Pace Bluetooth® Earbuds mode. The indicator light will go off if no Bluetooth devices button once to answer an incoming call. While on a call, press 5. Avoid dropping the speaker as it may damage the product. are detected within 3 minutes. On/Off, Play/Pause, Hands-Free button once to end the call. 3. "GEMLINE EB" will appear on the Bluetooth device list, • Redial last call: Press On/Off, Play/Pause, Hands-Free button select "GEMLINE EB" to establish pairing. If instructed to twice to redial last number dialed on the connected mobile device. Kind Reminder enter a PIN code, please enter '0000'. Reject a call: Press and hold On/Off, Play/Pause, Hands-Free 1. To prolong the earbuds life span and to avoid hearing 4. If a mobile device has been previously paired with the button for 2 seconds to reject an incoming phone call. damage, please do not listen to music under high volume for earbuds, the earbuds will automatically connect with the long periods of time. mobile device. 2. When an error occurs with the earbuds, please turn off the 5. When you want to play audio from another Bluetooth device, Charging the Earbuds 1. Volume +, Previous Track earbuds and restart it to troubleshoot. disconnect the earbuds from the original device and follow 1. When the battery is low, please charge via the included USB 2. Power On/Off, Play/Pause, Hands-Free 3. When the earbud power is low, the Bluetooth range may steps 1-3 to re-pair the earbuds with a new Bluetooth cable. The charging time is approximately 2 hours and 3 LED Indicator Light be affected. Please charge the earbuds to avoid disruptions enabled device. provides up to 6.5 hours of continuous operation. 4. Volume -, Next Track during use. IC:21530-100158 2. The LED indicator light will be red during charging and will turn Instruction Manual Microphone FCC ID: 2AGR4-100158 blue once it is fully charged. 6. Micro USB Charging Port Front Cover page 02 page 03 page 04 page 05 This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada' guarantee that interference will not occur in a particular Specification PROBLEM TROUBLESHOOTING METHOD s licence-exempt RSS(s). Operation is subject to the following two conditions: Bluetooth specifications: Bluetooth® version V4.2 installation. If this equipment does cause harmful interference Unable to pair the 1 Inspect whether the earhure are (1) This device may not cause interference. Support profile: HSP/HFP/A2DP/AVRCP

Transmission distance: up to 10m (This may vary based on environmental factors or the type of Bluetooth® device being

Built-in battery: 55 mAh Lithium battery x 2

USB Recharge voltage: 5V

Output power: 3mW×2

Frequency Response: 20-20KHZ

Packing

- Bluetooth® Earbuds
- Silicone Earbud Covers
- USB Charging Cable Travel Case
- User Manual

earbuds with a mobile device	1. Inspect whether the earbuds are searching for a Bluetooth enabled device to connect to. If not, restart the earbuds. 2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. 3. The power of the battery is insufficient, please recharge the earbuds.
The music stops from ime to time	Inspect the distance between the earbuds and the Bluetooth enabled device, it may exceed the Bluetooth transmission range. Inspect if there is an obstacle between the earbuds and the Bluetooth enabled device. The power of the battery is insufficient, please recharge the earbuds.

TROUBLESHOOTING METHOD 1. Inspect the volume of the connected
Inspect the volume of the connected
earbuds or Bluetooth enabled device and adjust the volume as needed. 2. The power of the battery is insufficient, please recharge the earbuds.
The power of the battery is insufficient, please recharge the earbuds. Restart the earbuds.

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by The Gem Group is under license. Other trademarks and trade names are those of their respective

- (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- L'é metteur/r é cepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, Sciences et D é veloppemen
- é conomique Canada applicables aux appareils radio exempts de licence. L' exploitation est autoris é e aux deux conditions suivantes :
- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radio é lectrique subi, m ê me si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received. including interference that may cause undesired operation.

Back Cover page 06 page 07 page 08 page 09