







Antenna Location

NB Mode

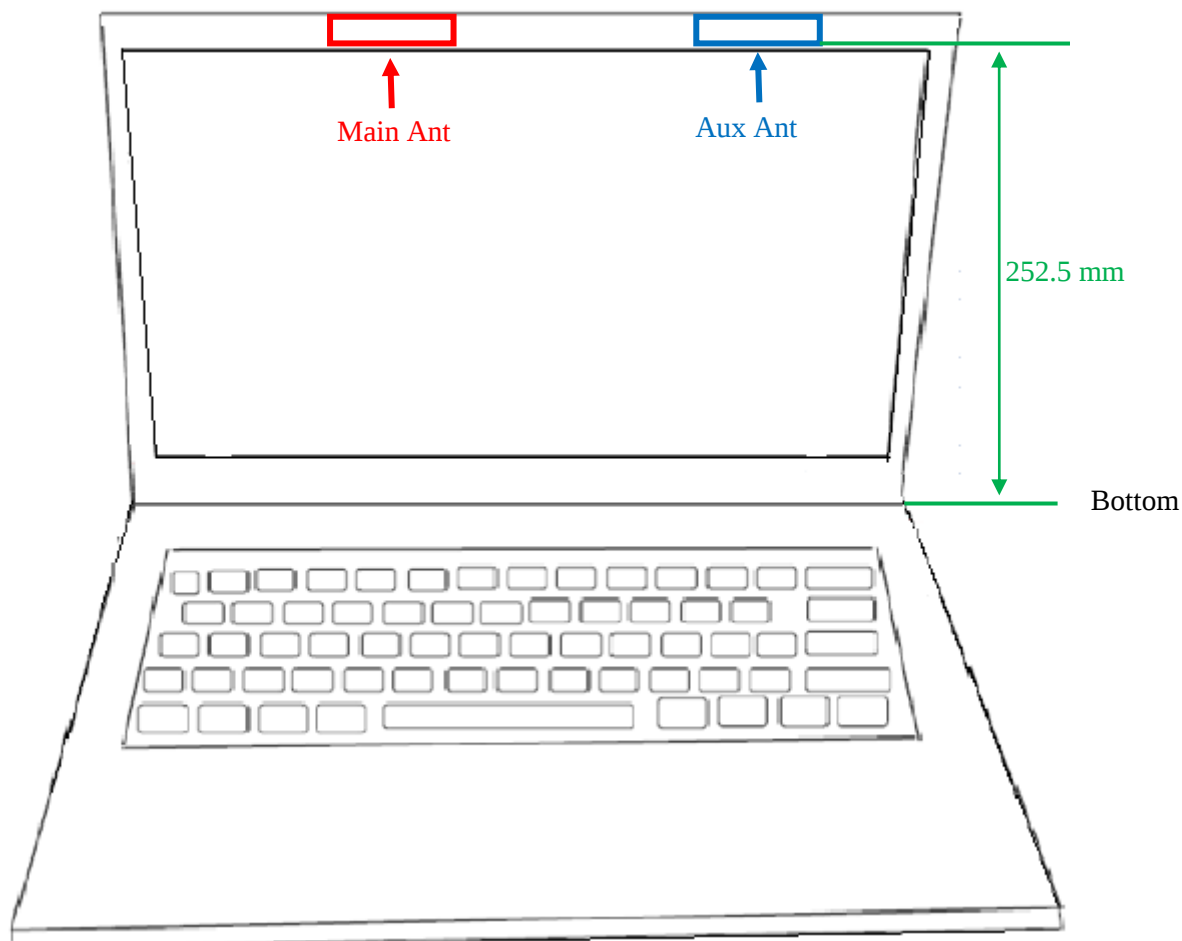


Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)		
Right-Edge (Edge2)		
Bottom-Edge (Edge3)		
Left-Edge (Edge4)		
Bottom	252.5	252.5

Tablet Mode

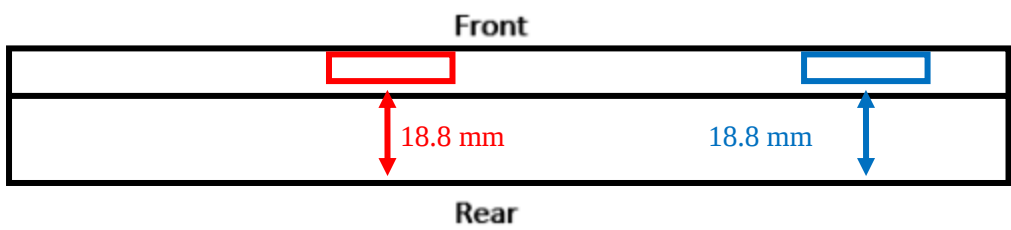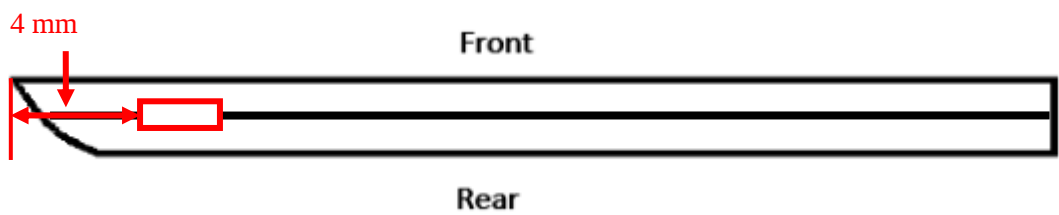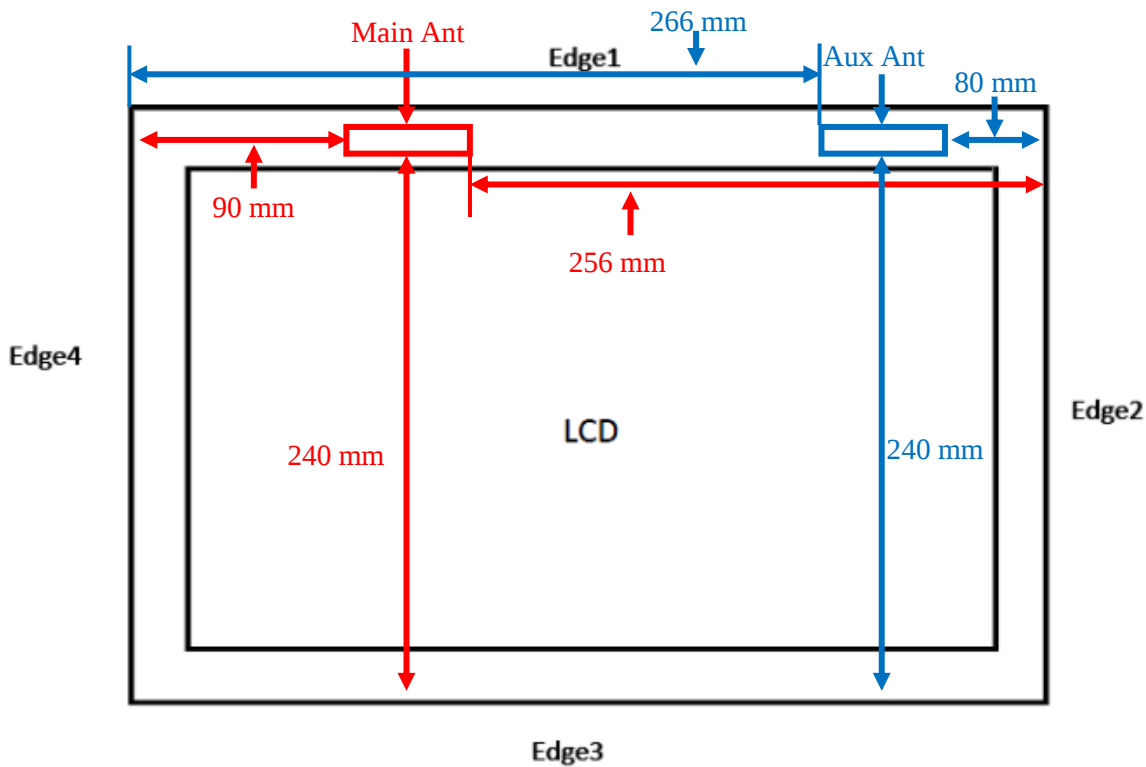


Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	4	4
Right-Edge (Edge2)	256	80
Bottom-Edge (Edge3)	240	240
Left-Edge (Edge4)	90	266
Rear Surface	18.8	18.8

Stand Mode

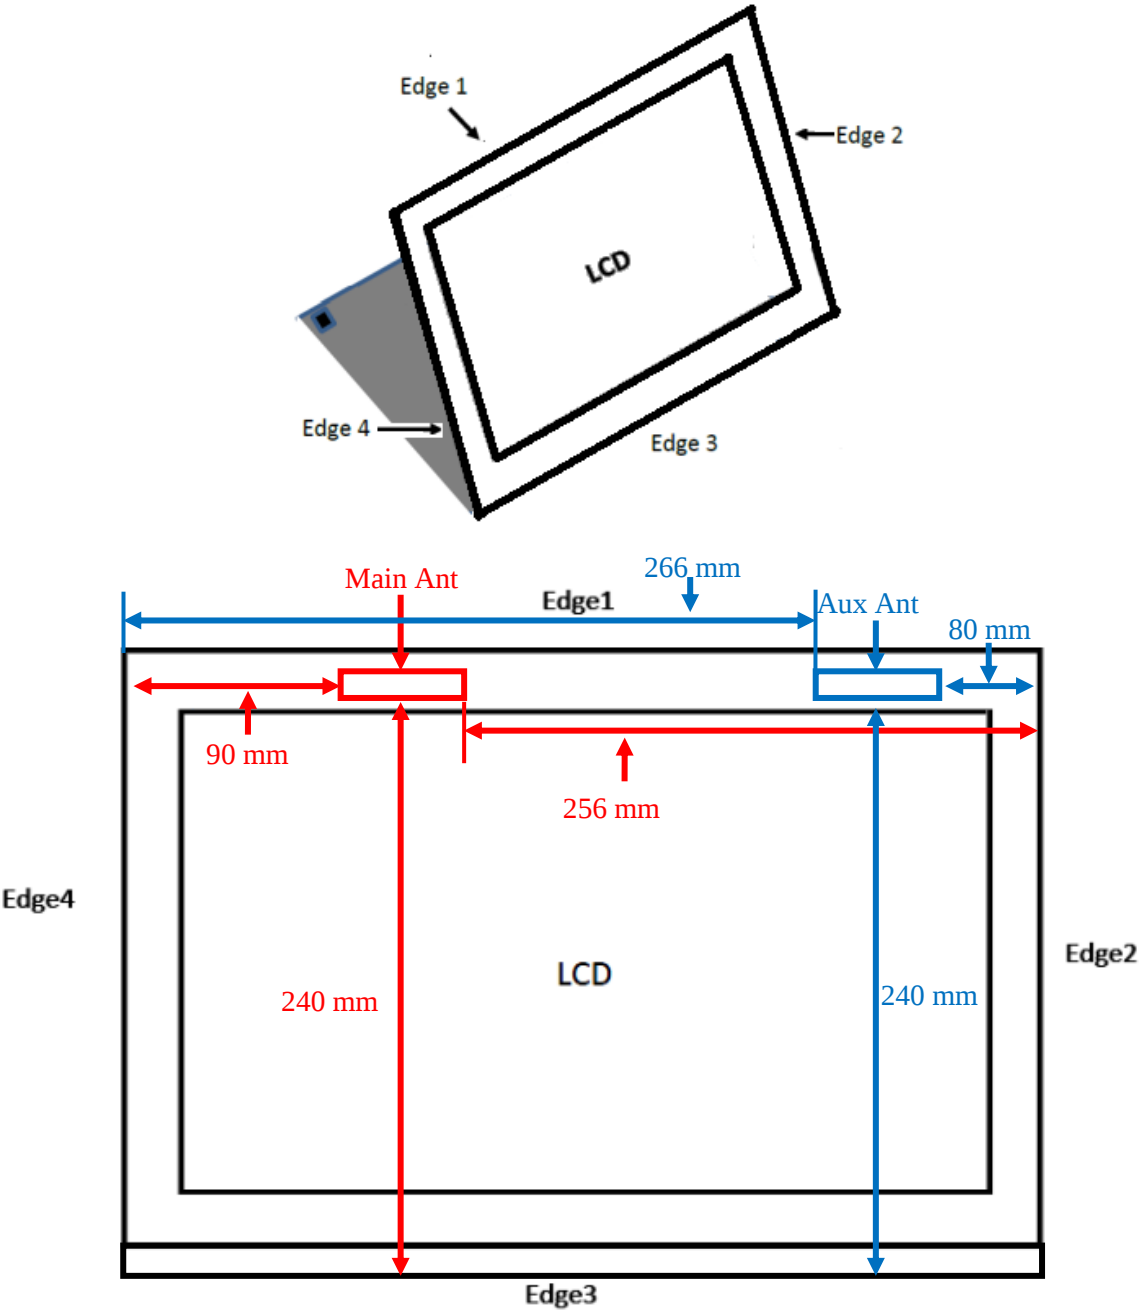

Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	4	4
Right-Edge (Edge2)	256	80
Bottom-Edge (Edge3)	240	240
Left-Edge (Edge4)	90	266
Rear Surface	18.8	18.8

Tent Mode

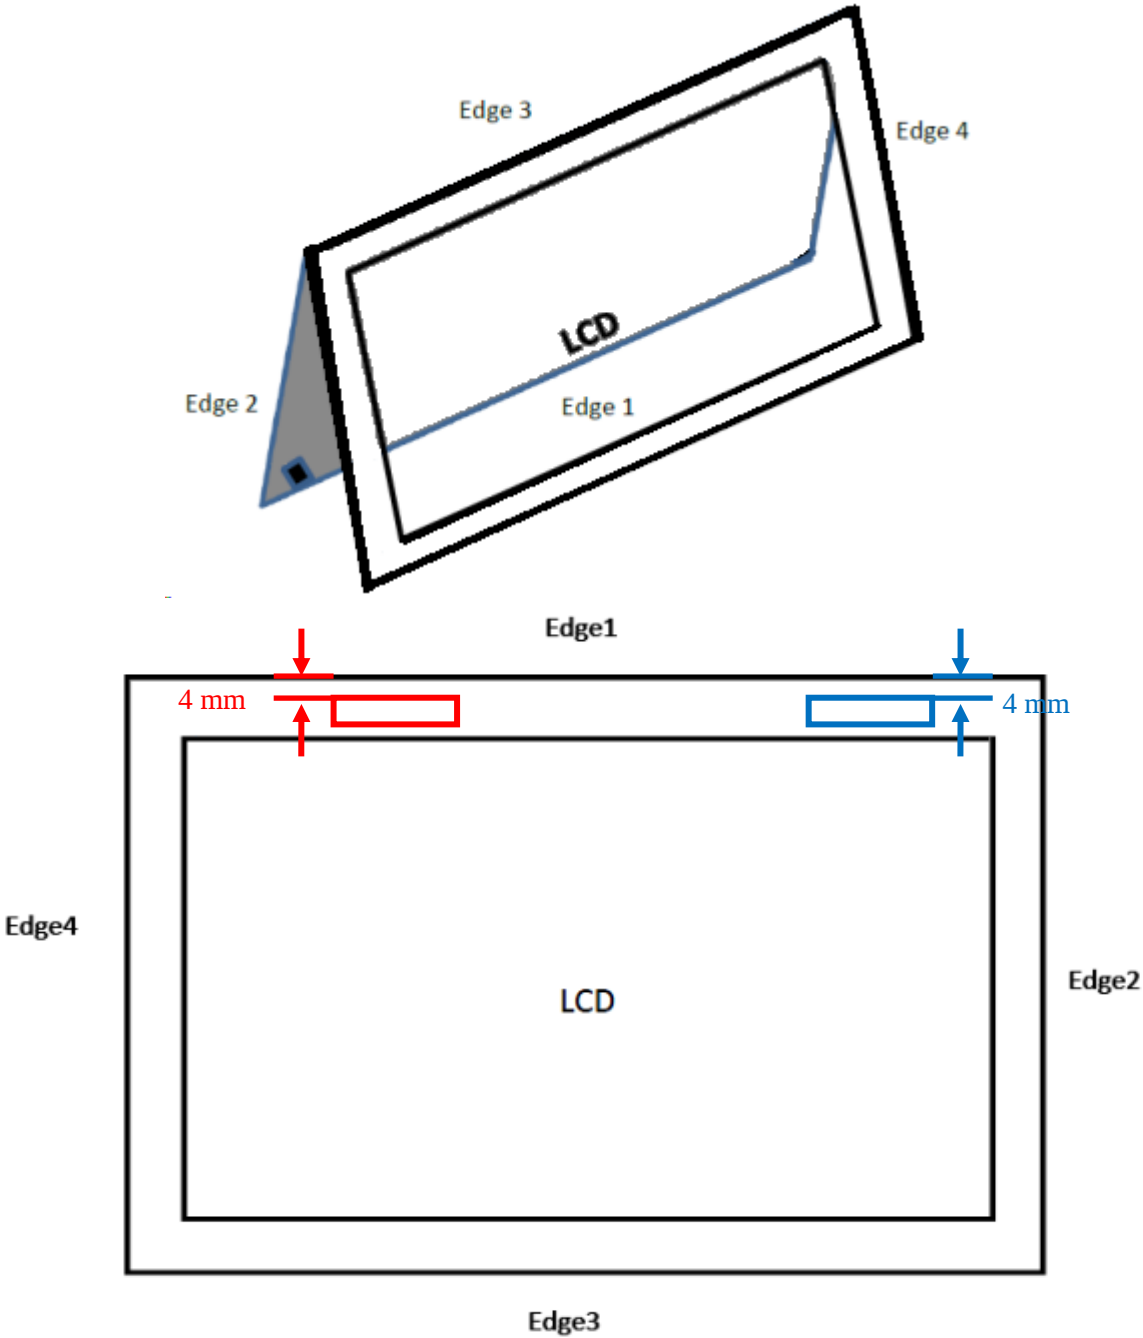


Separation Distance (mm)	Wi-Fi Antenna (Main)	Wi-Fi Antenna (Aux)
Top-Edge (Edge1)	4	4
Right-Edge (Edge2)		
Bottom-Edge (Edge3)		
Left-Edge (Edge4)		
Rear Surface		

SETUP PHOTOS



Tablet Mode Rear

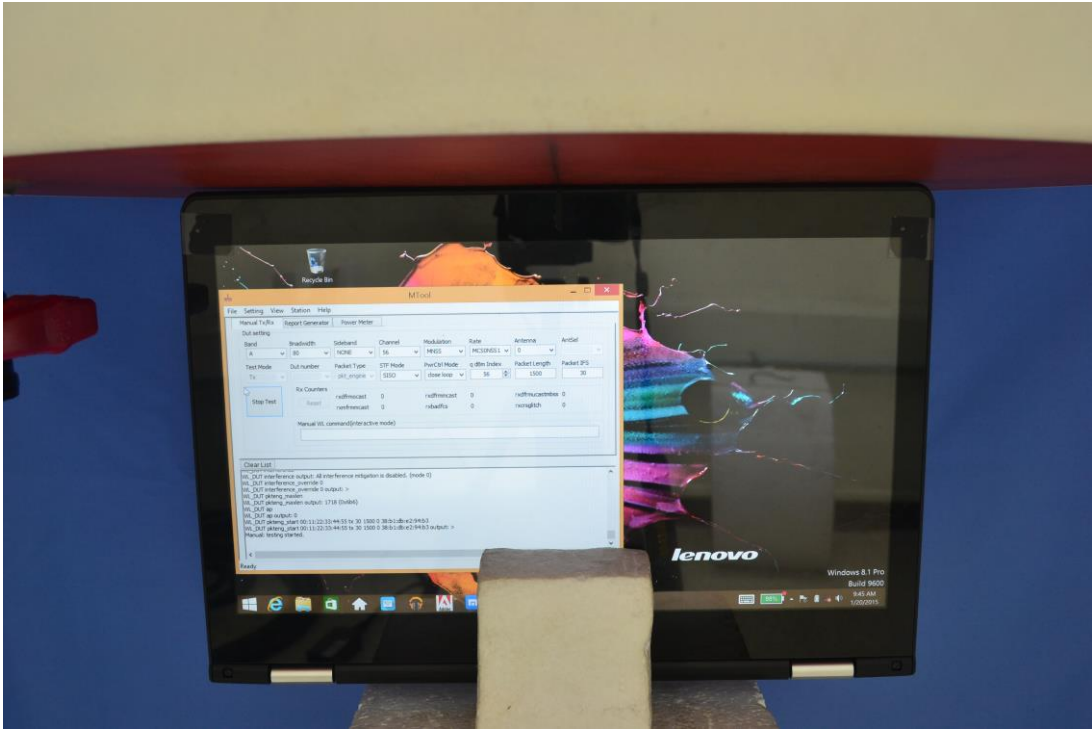

Tablet Mode Edge1

EUT Photos

