 


J18

wireless earphone

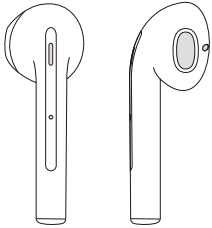

User Manual

Product specification

Product name: J18

Bluetooth version: 5.0

Battery input: DC 5V

Earphone battery: 30mAh

Charge case battery: 300mAh

 
Working time: About 3-4hours

Sensitive: 92±3dB

Frequency: 20-20000Hz

Impedance: 32Ω

Profile support: HSP/HFP/A2DP/AVRCP

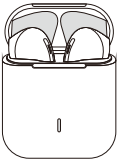

Operation instructions

Binaural Function:

Touch once: Play/Pause

Answer/End a call

Touch twice on L: Next song

 
Touch twice on R: Previous song

Touch three times on L: Volume -


Touch three times on R: Volume +

Touch and hold 2 sec: Reject the call

Touch and hold 2 sec then release: Wake up voice Assistant



Product schematic

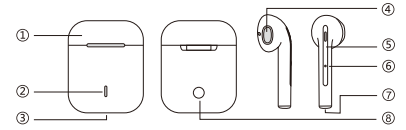 

① Charge Case

② Charge case indicator

③ Charging Port

④ Dustproof Mesh

⑤ Touch Area

⑥ MIC

⑦ Earphone Charging Port

⑧ Charge case button

Charging

Charging with charge case: The case's red LED flashes slowly.

Charging with earbuds: The case's green LED flashes slowly.

When charging with the earphones: LED remains blue

Charging time: about 40 -60 minutes

Warning:

1. To ensure the battery life of the earphone, the earphones and the charge case should be charged once in a month.

2. If the earphones are placed in the charge case with being turned off, then press the button on the charge case to start charging

3. When charging with charge case please use the 5V/1A charger. Please don't use the fast charger which over 5V , to avoid damage on the charge case.

Pairing for operating

Step1. Pick up the earphones from the charge case separately or long touch earphones to turn them on, they will be automatically paired.

Step2. At this point, open the device's Bluetooth to search for "J18" and then click to connect with device successful, voice prompted " Bluetooth connected ".

※ When the earphones connect to the same device again, open the lid of charge case it will turn on automatically then reconnect with the device, voice prompt " Bluetooth connected " .

Turn on the earphone

Method A. Touch and hold the area for 2 seconds.

Method B. Take out earphones from the charge case, they will automatically power on, and enter automatic pairing.

Turn off the earphone

Method A. Touch and hold the area for 5 seconds.

Method B. Put earphones into the charge case, they will automatically shut down and enter charging.

※ When the earphone disconnected for 3 minutes, it will automatically turn off.

Calling

When connected with mobile phone, the incoming call will be announced with an English voice reminder, touch once any earphone to answer current call. Long touch for 2 seconds to reject the call. If you want to end the current call, touch once any earphone to stop.

FAQ

A. When the earphones can't be turned on

Check if the earphone has power (after the charge case is connected to the USB, and the earphone is charged in the charge case for more than 1 hour).

B. When the earphones have only one side sound or earphones can't pair successfully

1. Make sure that both earphones are powered and can be turned on normally.

2. When the earphones are in the off state, press the earphones for 7seconds to restore the factory settings.

3. Touch 2 seconds to turn on the earphones or take the earphone out of the charge case (when the charge case is powered) the earphone will power on voluntarily, then you can connect with the device.

C. When the mobile phone cannot find the device

1. Confirm that the two earphones are turned on.

2. Check if the earphone is connected to other devices.

3. Change a clear area and reconnect it again.

D. When the earphone is stuck or disconnect while talking or playing music

1. The earphone is low on battery.

2. The distance between the mobile phone and the earphone is more than 10 meters.

3. There is large area of signal obstruction between the mobile phone and the earphone, such as a wall.

4. The left and right ears are not paired and synchronized, and need to be shut down and re-paired.

Attention

1. Please don't change the built-in battery by yourself.

2. Please don't put the headset under wet or rainy place.

3. Please don't expose the headset under the blazing sun , event not close fire to avoid battery accident.

4. Please don't disassemble the headset if unprofessional.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.


-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

 
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Made in China



J18

无线立体声耳机

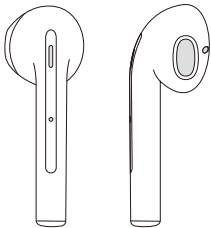

说明书

产品规格

产品名称:J18

蓝牙版本:5.0

电源输入:DC 5V

耳机电池容量 :30mAh

充电盒电池容量 :300mAh


音乐播放时间 :约3 -4小时

灵敏度:92 ± 3dB

频率范围 :20-20000Hz

阻抗 :32Ω

支持协议:HSP/HFP/A2DP/AVRCP



操作使用:

双耳操作:

单击:播放 / 暂停 来电接听 / 挂断

触碰2次左耳: 下一曲

 
触碰2次右耳: 上一曲

触碰3次左耳: 音量-


触碰3次右耳: 音量+

长按2秒: 拒接来电

长按2秒后释放: 唤醒语音助手



产品示意图

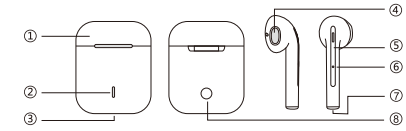 

① 充电盒

② 充电盒指示灯

③ 充电口

④ 防尘网

⑤ 触控区

⑥ MIC

⑦ 耳机充电触点

⑧ 充电盒按键

充电

对充电盒充电: 充电盒红灯慢闪

对耳机充电: 充电盒绿灯慢闪

充电时长: 约40-60分钟

注意:

1. 为保证电池寿命建议每个月给耳机进行充电。

2. 如果耳机已置于充电盒中且处于关机状态, 则按下充电盒上的按钮开始充电。

3. 充电时, 推荐使用5V/1A的充电插头。切勿使用输出电压大于5V的快充产品进行充电, 以免对充电盒造成损坏。

耳机配对

第1步: 耳机从充电盒取出或长按开机, 耳机自动配对。

第2步: 此时打开手机的蓝牙搜索"J18", 点击连接, 设备连接成功后语音提醒 "Bluetooth connected"。

※ 耳机再次连接同一个设备, 开盖可以自动开机, 自动与设备进行回连, 语音提醒 "Bluetooth connected"

开机

方法1: 长按2秒开机。

方法2: 耳机从充电盒取出自动开机配对。

关机

方法1: 长按5秒关机。

方法2: 将耳机放入充电盒自动关机并开始充电。

※ 耳机不连接状态下3分钟内自动关机。

打电话

连接手机后, 来电时会有英文报号提醒, 按一次进行接听, 长按2秒拒接, 如果想挂断, 按1次即可停止当前通话。

常见问题

一. 耳机无法开机

检查耳机是否有电, 主要通过充电盒连接USB线后, 对耳机进行一个小时以上充电来判断。

二. 耳机只有单边有声音或耳机无法配对成功

1. 确认两个耳机是否有电且可以正常开机。

2. 耳机处于关机状态下, 长按7秒任一耳机进入恢复出厂设置。

3. 长按2秒开机或从充电盒中直接取出耳机自动开机, 然后耳机可以进行连接设备。

三. 手机无法搜到蓝牙设备

1. 确认两个耳机是否已经开机。

2. 检查耳机是否有连接到其它蓝牙设备。

3. 换一个空旷的区域, 重新开机后配对操作。

四. 耳机通话或听歌时出现卡顿或断连

1. 耳机处于低电量状态。

2. 手机与耳机的直线距离超过了10米。

3. 手机与耳机之间有大面积的信号遮挡物, 如墙体。

4. 左右耳没配对同步, 需关机后重新配对连接。

注意事项

1. 请勿自行更换内置电池。

2. 请勿将耳机放在潮湿或多雨的地方。

3. 请勿对耳机曝晒或靠近火源, 以避免电池遇火发生事故。

4. 非专业人士请勿拆卸耳机。

PDF
X44C