


尺寸：210*142mm

材质：封面157克双铜彩印，内页80克书写纸

颜色：彩色印刷/内页单黑

页数：32P

装订方式：骑马订

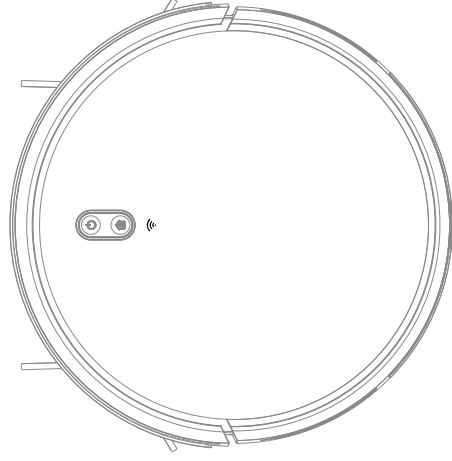

Sweeping Robot User Manual

Please read this manual carefully before use and keep it properly

Gyroscope sweeper

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)

WARNING – To reduce the risk of fire, electric shock, or injury:

- 1) Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- 2) Do not use outdoors or on wet surfaces.
- 3) Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- 4) Use only as described in this manual. Use only manufacturer's recommended attachments.
- 5) Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- 6) Do not handle plug or appliance with wet hands.
- 7) Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- 8) Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- 9) Turn off all controls before unplugging.
- 10) Use extra care when cleaning on stairs.
- 11) Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- 12) Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- 13) Do not use without dust bag and/or filters in place.

- 14) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- 15) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- 16) Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- 17) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- 18) Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- 19) Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- 20) Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- 21) Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- 22) Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- 23) This product is used for household, not for commercial use.
- 24) For use only with CMICR18650F9M-4S1P (or provided by manufacturer) battery pack. For use only with AD-0121900060US (or provided by manufacturer) charger.

- 25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 26. Children should be supervised to ensure that they do not play with the appliance.
- 27. the appliance is only to be used with the power supply unit provided with the appliance.
- 28. This appliance contains batteries that are only replaceable by skilled persons

SAVE THESE INSTRUCTIONS

Welcome to use!

Thank you for choosing Wonjia intelligent smart vacuum robot cleaners!
It is based on gyroscope and a variety of sensors, which can easily and quickly realize gyroscope indoor navigation and positioning, explore composition, plan clear Sweeping path, automatic cleaning, edge cleaning, automatic charging, high-end intelligent planning sweeping robot without manual intervention. It has a new modular chassis design, V-shaped floating brush, deep cleaning, strong obstacle crossing ability, long battery life, strong suction and three adjustable gears. Large-capacity rear-extraction dust box, washable HEPA filter, split mopping module, and two-in-one electronically controlled water tank support the efficient cleaning mode of sweeping first and mopping later.



You can also download the APP on your mobile phone to view the cleaning map and running status of the robot vacuum cleaner in real time, cleaning time, switching cleaning mode, spot cleaning, voice control, remote control, etc.

Technology makes life better. Happy using!

catalogue


product description	1
Install mopper	5
component	6
Instructions for using	7
Connecting the Smart vacuum Robot Cleaner	10
routine maintenance	11
Basic parameters	14
common problem	15
Troubleshooting	16
Security Information	19
warranty service	21

Product description

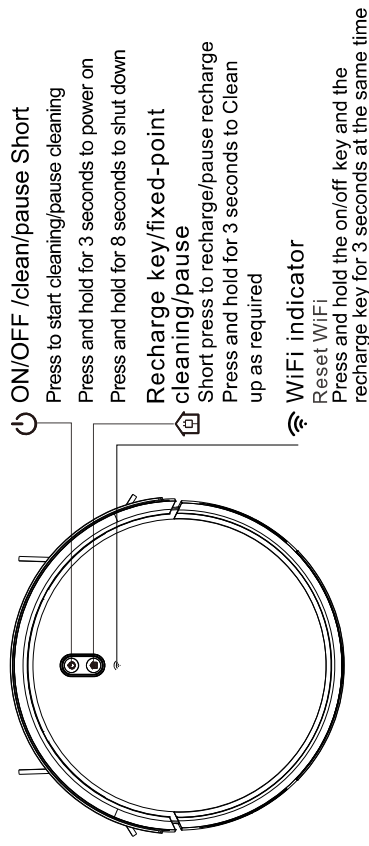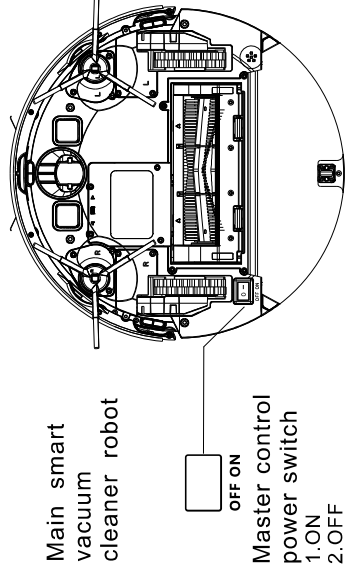


Indicator light
White: Normal work or standby, white slowly flashing while charging
Red: low battery looking for recharging or abnormal state
White: No network configuration: WiFi light is off
In the distribution network:
The WiFi light flashes white quickly
Network distribution success:
WiFi light is always on white lig

Charger

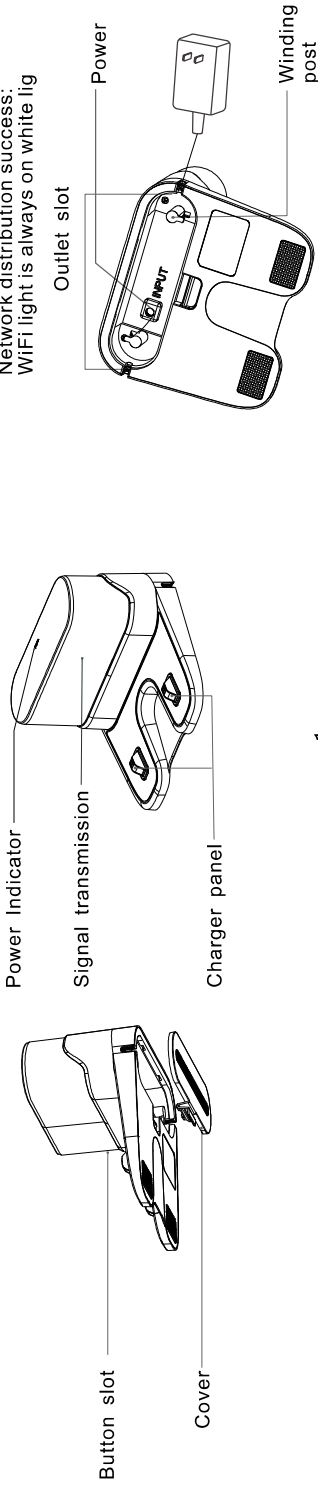


Product description


Product List

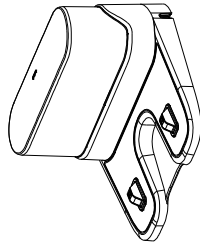


Charger X1

 


AdapterX1

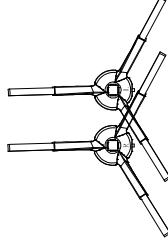


Brash in left X2
Brush in right X2

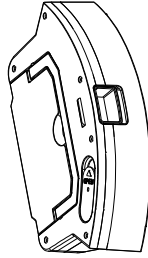

Two-in-one water pump tank X1

 


Two-in-one water pump tank X1(Optional)

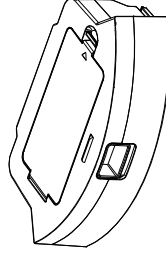

dust box X1(Optional)

Product description

Accessories list

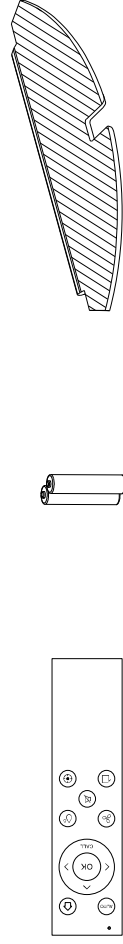

Remoter X1(optional)

AAA batteryX1(optional)

 
MobX1(optional)




Cleaningbrush with knife(optional)



cleaning brushX1(optional)




Magnetic stripX1(optional)

 

HEPA and filter spongeX1


Product description

Main smart vacuum cleaner robot

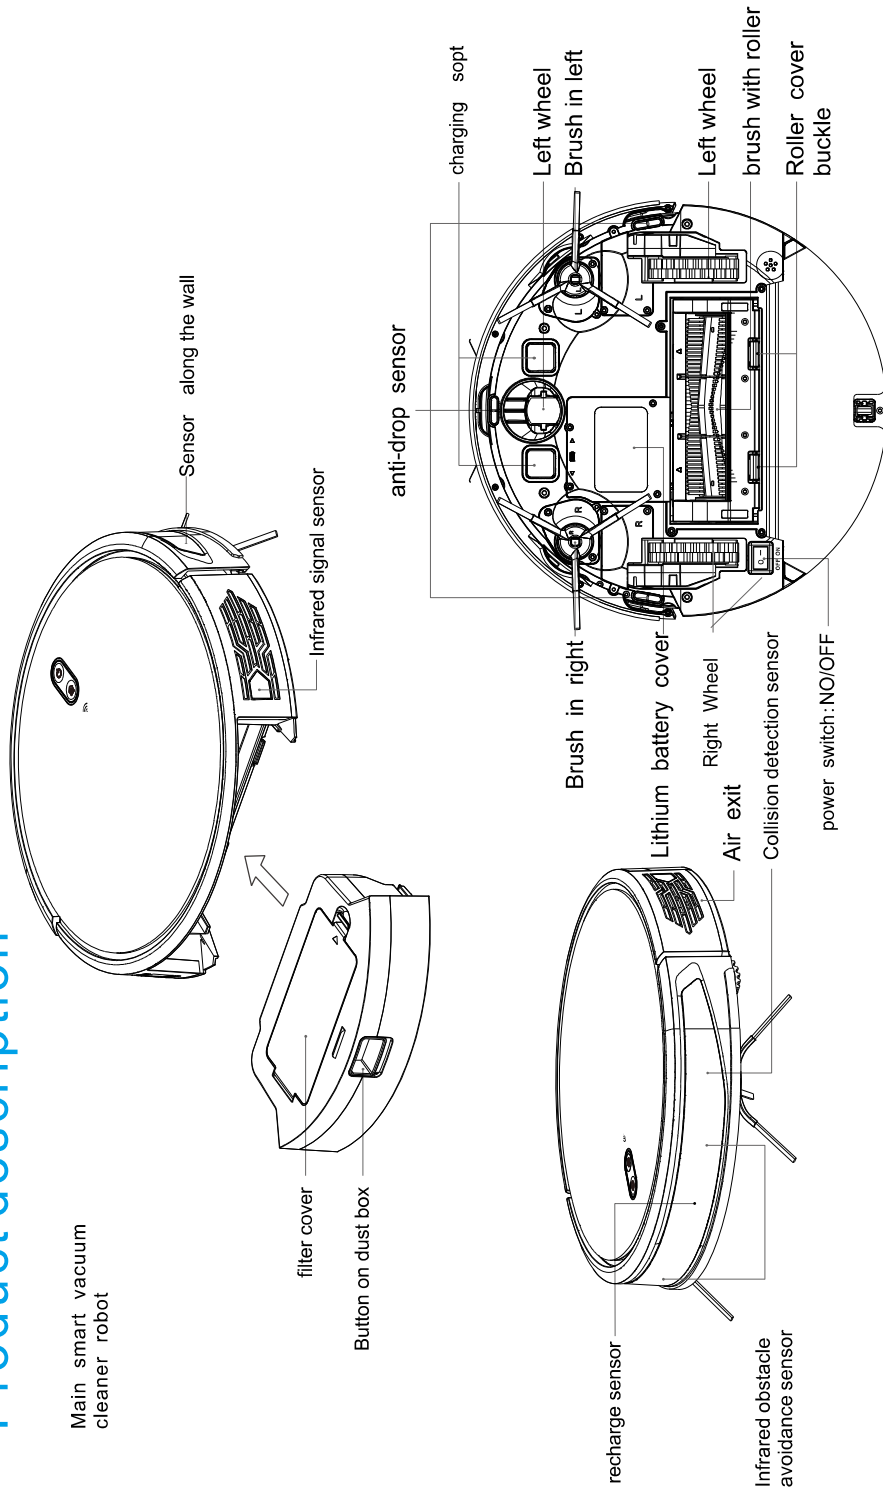


Installation steps

- 1.Connect the power cord, and then Put the excess wire into the wire box

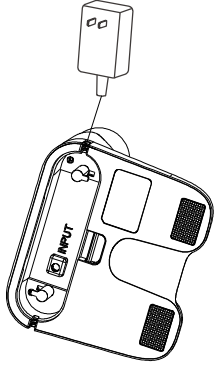


2. Place the charging stand against a wall on a flat floor, and then connect power

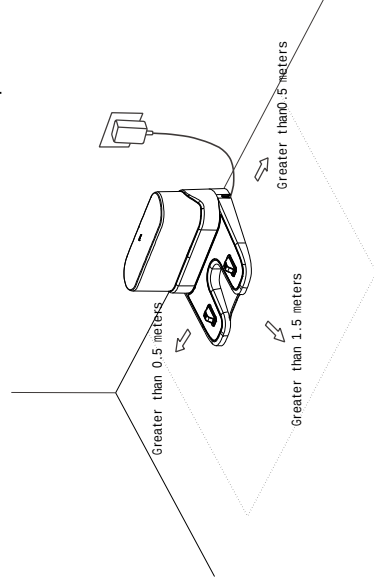


Note:

- Make sure there is a space of more than 0.5 meters on both sides and more than 1.5 meters in front
- When installing, try to keep the power cord in the air; if it is close to the ground, it may be dragged by the host, causing the charging stand to lose power.
- The charging indicator light is always on when the power is on

3. install brush Put(L brush), (R brush)and letterL in bottom case into bottom respectively

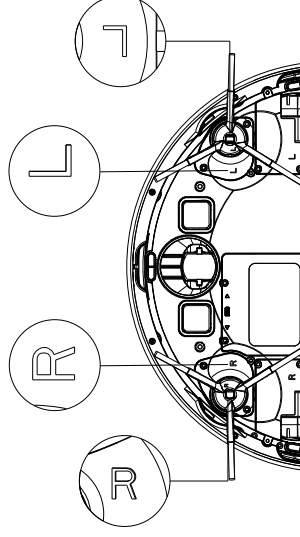

Turn on the main power switch,until the indicator light is always on,and then put the host on the charging stand to charge

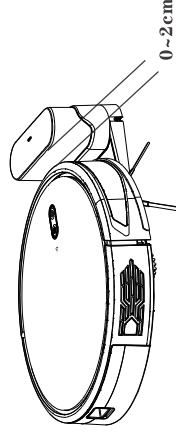

Note:


With insufficient power cannot be turned on please place the host on the charging stand,the device will automatically turn on,because the device can work normally only when the power is $\geq 20\%$

(as the picture shows) The front end of the machine is facing the charging stand,so that the charging contacts on the main unit are in contact with the charging shrapnel,and the distance between the front end of the machine and the charging stand is about 0~2CM

mopping components


1. install two-in-one water pump tank

- ① Install the rag: Glue the mop flat to the bottom of the mop holder

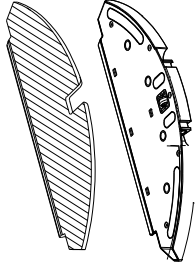

② method of collecting water:

Open the lid and fill it with water and close the lid

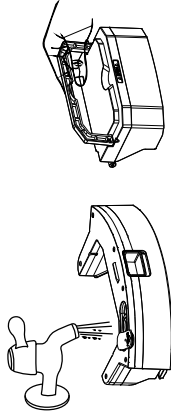


Note:


It is recommended to remove the dust box and then add water to avoid water entering the dust box.

Lift the handle first, take the dust box out of the water tank, then fill it with water and fasten the lid


③ install water box

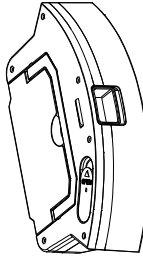

Put the dust box into the water tank and lay the handle flat

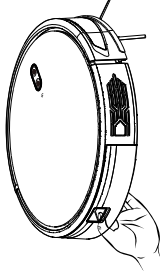

Press and hold the button in the middle of the water tank and push it
When you hear a "click", it is in place

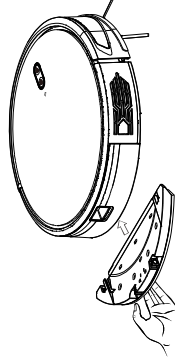


Press and hold the two buttons in the middle of the mop bracket along the back of the main unit


Push it in horizontally until you hear a "click" sound to indicate it is in place

2. Remove the electronically controlled water tank

When the main unit finishes work, press and hold the two buttons in the middle of the mop holder, remove the mop holder backwards, and place the cleaning cloth (Do not move or flip the main unit during work)

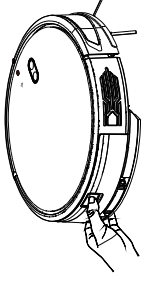

After removing the mop bracket, press and hold the button in the middle of the water tank and pull it out horizontally along the back of the main unit, pour out the remaining water in the water tank, and remove the garbage in the dust box. (Do not move or flip the host during work)

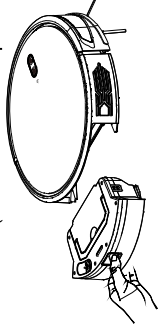

3. Instructions for use

- ① Do not use the water tank when no one person is at home
- ② For safety, be sure to remove the water tank when charging or not in use
- ③ Do not use the mopping function on the carpet. You can prevent the device from entering the carpet by setting a forbidden area.
- ④ In order to obtain a better mopping effect, it is recommended to install the mopping module after cleaning it three times for the first using.
- ⑤ If you need to add water or clean the rag during the operation, please pause in place first, follow the above steps, and then restart
- ⑥ The mopping function of the equipment only has the effect of wiping, which is helpful for deep cleaning, but cannot effectively remove stubborn stains and cannot completely replace manual labor

Instructions for use

Power(ON/OFF):

- (1)Turn"ON",After flashing white light, will hear:in Chinese"POWER ON in English", and then it works
- (2)Turn"OFF".Cut off the power supply, which mean it's shutdown completely.

Power key(note:turning"ON"means it works):

- (1)powering off: press  With 3 seconds,After flashing white light andhear "POWER ON" Shutdown to complete
- (2)In the power-on state, long press  the switch and the power-off complete button for 8S, the red light flashes quickly and then goes out, and the voice announces "POWER OFF"

Sweeping/Pause

After working,press  Or use the mobile APP to start the automatic cleaning or pause function

Note:

- Sweeping robot cannot be used to clean liquid
- If the power is lower than 20%, the cleaning task cannot be performed.
- Please charge first and then continue cleaning
- being lower than 20% during the cleaning process, the device will automatically recharge
- Please remove all kinds of wires on the ground before cleaning

Start the recharge or control the recharge by the mobile phone APP,

the white breathing light will be always on when the machine is charging.
Note: If the charging base is not found, the host will automatically return to the starting position.

Please manually put the host back on the charging stand for charging

The mobile phone APP controls the recharging. When the machine is charging, the white breathing light is always on. Note: If the charging stand is not found, the host will automatically return to the starting position. Please manually put the host back on the charging stand for charging.

suction adjustment

Use the remote control or mobile APP to choose three suction modes: quiet, normal, strong(Default is normal)

water regulation (in tank mode)

Using the mobile phone APP or remote control, you can choose three water volume modes: low, medium or high(Default is mid-range)

Silent mode

Turn on the silent mode.If the device will not play the voice, you can use the mobile APP or remote control to turn on or off the silent mode

Reset WiFi

When the router's configuration, password or other reasons cause the mobile phone to fail to connect to the machine, please also:

Press  and  with 3seconds,until hearing"WiFi

resetting"sounds and WiFi light will be turned

It turns white and flashes quickly, indicating that the reset is successful.

Schedule a cleaning

Use the mobile APP to set the scheduled cleaning time, the host will automatically start cleaning at the specified time,


Note:

During work, do not move the device at will and frequentl.

Instructions for use


automatic cleaning

The main  unit button, mobile APP, and remote control press "AUTO" to perform automatic cleaning mode

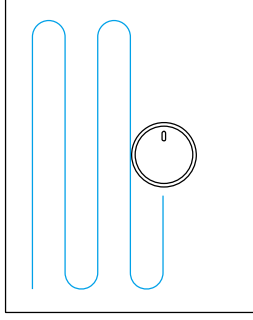


spot cleaning

With  seconds or Using the remote control, the machine will take itself as the center, at 1.2mX1.2m.

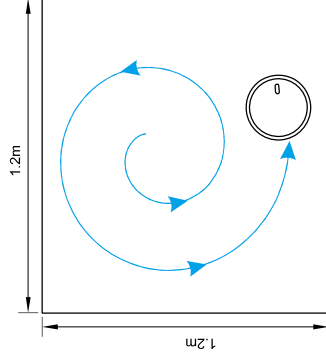


Edge cleaning

You can use the mobile phone APP or remote control to clean along the edge. The machine will immediately move to the right and enter the wall to clean after encountering an obstacle.

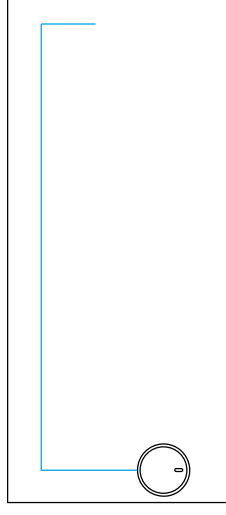


Random cleaning

Use the mobile APP to press the random cleaning mode, the machine will enter the random cleaning mode

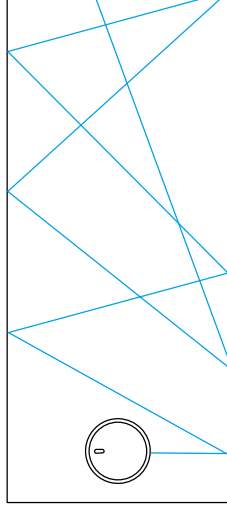

Instructions of the Remote Controller

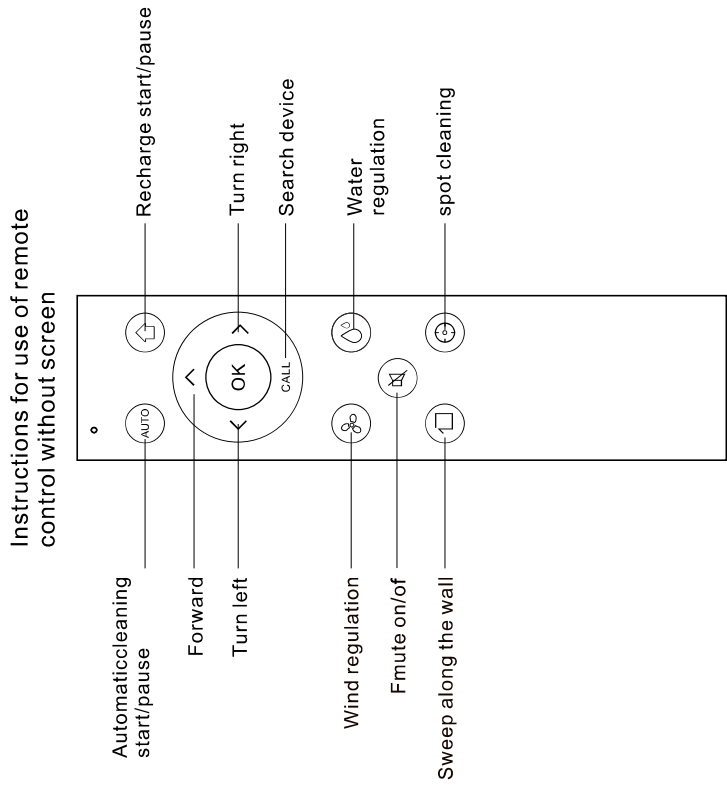

Connect to the sweeping robot APP

APP download

Method 1: Go to the app store, search for "Tuya Smart" to download
Method2: Scan the QR code below to download



Adding equipment


Open the APP and click the "+" button on the home page to enter the device selection page. Select the cleaning robot and complete the device addition according to the instructions

Firmware upgrade

After entering the firmware upgrade function through the mobile phone APP and detecting the new firmware, follow the prompts to guide the upgrade. Firmware upgrade requires power $\geq 50\%$. It is recommended to place the device on the charging stand to upgrade

Reset the Wifi


When the router's configuration, password or other reasons cause the phone to fail to connect to the machine, please do the same:
Press  And  With 3 seconds, until hearing "WiFi resetting" and WiFi indicator  It turns white and flashes quickly, indicating that the reset is successful.

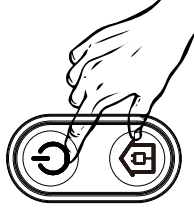

Routing maintenance

Roller brush


1. Turn the machine over and press the buckle on the brush cover to take out the brush
2. Use the matching cleaning tool to remove the dust in the roller brush and the roller brush cavity, and then clean the entanglement on the roller brush
3. Reinstall the roller brush and press the roller brush cover fixing buckle

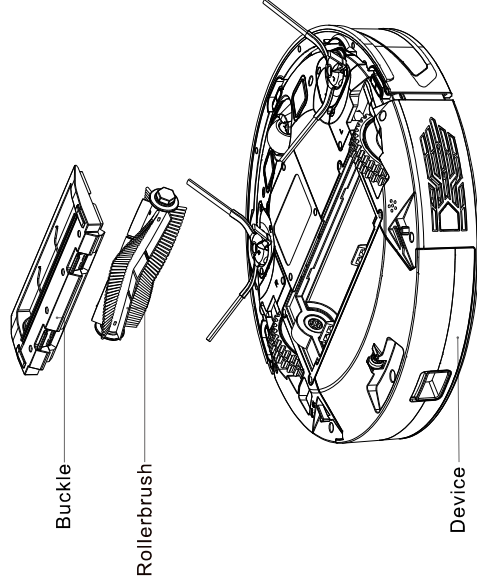

Brush inside

1. Turn the machine over and pull out the side brush vertically
2. Reinstall after cleaning the tangled hair and dirt
3. Correspond the left brush (L) and right brush (R) to the letters L and R on the bottom case, press down to install


Note: It is recommended to replace the side brush every 3-6 months to ensure the cleaning effect

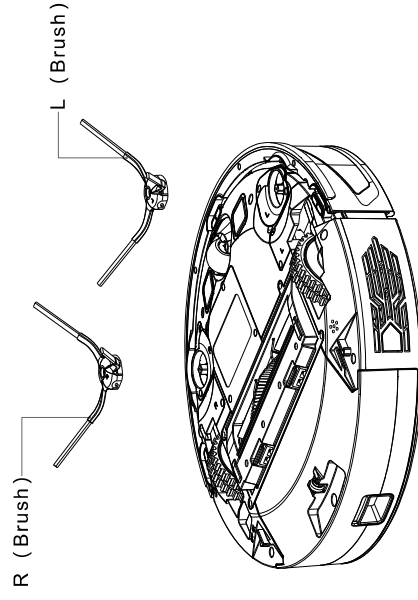


Routing maintenance

Dust Box

1. Press and hold the dust box button to pull out the dust box backwards

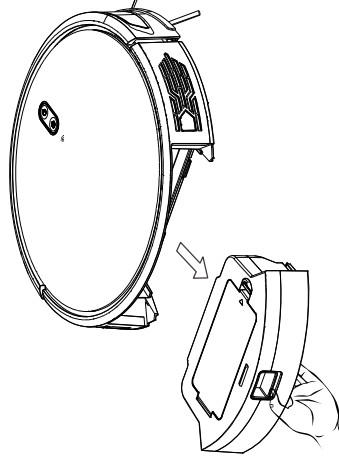


2. Open the dust box and take out the garbage

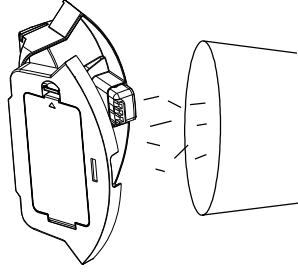

Filter

1. After a long time of use, remove the filter gauze, filter sponge and HEPA filter
2. Put the removed filter gauze, filter sponge, HEPA filter, and dust box under the faucet to rinse. 3. After cleaning, shake off the water droplets, dry the filter screen and dust box, and wait until they are completely dry before use.
4. After drying thoroughly, install the filter gauze-filter sponge -HEPA filter in order

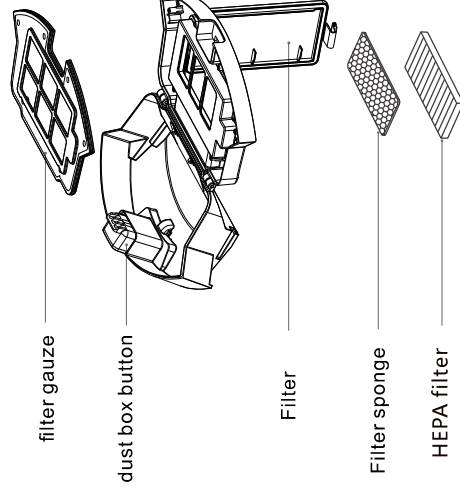


Note:

- Please rinse with clean water, do not add any detergent
- Do not use a brush or fingers to clean the filter
- Air-dry the filter for at least 24 hours and dry thoroughly
- It is recommended to replace a set of filters every 3-6 months


Routing maintenance

Two-in-one water pump tank (recommended to clean every 1 me)


1.Remove the rag and drain the water from the tank

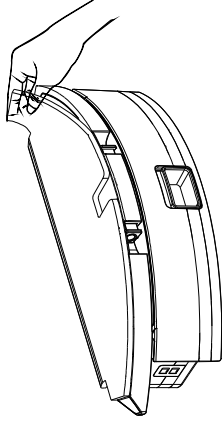

2. Clean the dishcloth, dry the water tank and dishcloth, and wait for next use

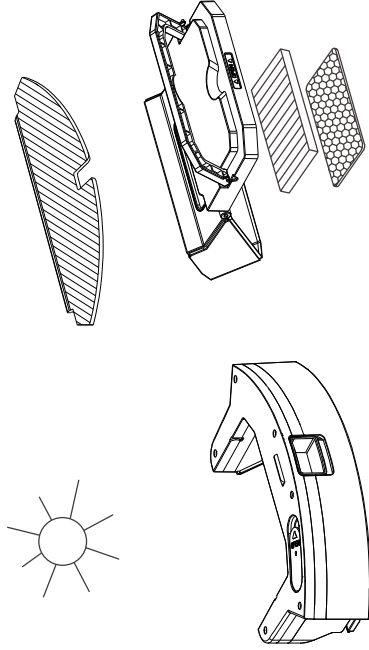

3. First lift the handle, remove the dust box from the tank, pour out the excess water and then dry the tank

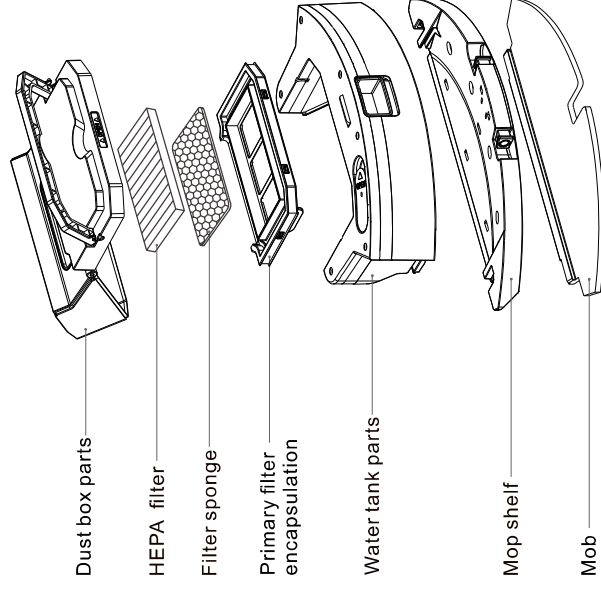

Battery


.The host has a built-in high-performance rechargeable lithium-ion battery pack. In order to maintain battery performance, daily use Please keep the host charged
.If you do not use it for a long time, please turn it off and store it, and charge it at least once every three months to avoid damage to the battery due to excessive discharge.

Routing maintenance

Sensors(regular cleaning is recommended)

Wipe the various sensors on the machine with a soft dry cloth, including:

- 1. Along the wall sensor on the right side of the main unit
- 2. Three anti-drop sensors at the bottom of the main unit
- 3. The infrared anti-collision sensor in front of the host
- 4. Charging contacts at the bottom of the host, charging shrapnel of the charging base (please power off first when cleaning)
- 5. Charging stand signal transmitting area

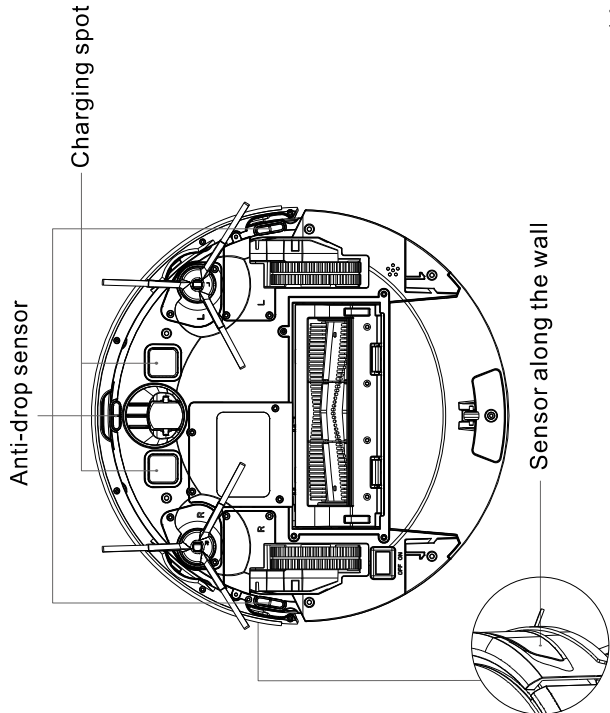

Basic information

Device

Name	Robot Vacuum
Type	T100
Size	327X325X76mm
Weight	2.8kg
Battery	3000mAh-Lin
Rated voltage	14.4V
Rated power	22W

Charging base

Type	T100
Size	160X145X90mm
Rated voltage	19W
Rated power	19W

common questions

Questions	Solution
Can not boot	- The battery is low, please place the device on the charging stand and align the charging pads, and the device will automatically turn on (when it is completely dead, it will take a while to automatically turn on) - When the ambient temperature is lower than 0f or higher than 40°C, please use it in the environment of 0-40°C
Can't charge	Please remove the device, and check whether the indicator light of the charging stand is on, make sure that both ends of the power adapter of the charging stand are plugged in, the front of the machine is facing the charging stand, and the distance between the front of the machine and the charging stand is about 2 cm
Can't recharge	The main unit is too far from the charging cradle, please try to place the main unit near the charging cradle
Abnormal behavior	Restart
Abnormal noise when	The main brush, side brush or wheels may be entangled with foreign objects. Please clean it after stopping the machine.
Abnormal noise when cleaning	- The dust box is full, please clean the dust box - The filter is clogged, please clean or replace the filter - The roller brush is entangled with foreign objects, please clean the roller brush
Not connect WiFi	- The Wi-Fi signal is not good, please make sure that the host is in a good Wi-Fi signal coverage area - The Wi-Fi connection is abnormal, please reset the Wi-Fi and download the latest mobile client to try to connect again - Incorrect password - The router is in the 5G band, and this sweeping robot only supports the 2.4G band
Reservation for cleaning does not take effect	When the battery is low, the scheduled cleaning will be started only when the remaining Battery is ≥20%
Sthe machine running out of power when it is on the charging	Power consumption is extremely low when the console is always in the charging cradle, which helps to keep the battery at peak performance
Do you need to charge for 16 hours for the first three uses?	Lithium battery can be used and charged with no memory effect, and it can be used Immediately after being fully charged without waiting.

Troubleshoot

Fault tone	Solution
Mistake 1: Dust bin removed	The cleaning is triggered when the dust box is taken out, please put the dust box back in
Mistake 2: Water tanks removed	The cleaning is triggered when the water tank is removed, please put the water tank back in
Mistake 3: Please restart in new position	Pick up the device; or the device is suspended in the air, please move the device to a level ground and start it again
Mistake 4: Clean the bottom sensor and restart in new position	If the cliff sensor is blocked or placed at a high place, please wipe the cliff sensor window with a soft dry cloth, move the device to a flat ground and then start it again
Mistake 5: Clean the front sensor and restart in new position	The infrared anti-collision sensor is dirty or blocked, please wipe the front infrared anti-collision sensor window with a soft dry cloth
Mistake 6: Clean the right side sensor and restart in new position	The sensor along the wall is dirty or blocked, please wipe the sensor window along the wall with a soft dry cloth
Mistake 7: Robot inclined, restart in level surface	The machine is tilted, please straighten the machine, and then start the machine
Mistake 8: Bumper may be stuck please check	The edge or collision sensor is stuck, please push the collision plate left and right to confirm that there is no stuck
Mistake 9: Please clean the dust bin and filters	Clean the dust box and filter, or replace the filter
Mistake 10: Dust bin out, please clean the filter gently	Clean the dust box and filter, or replace the filter
Mistake 11: Robot blocked, restart in new position	Please move the device to a level ground and restart

Troubleshoot

Fault tone	Solution
Mistake 12: Main wheel may be stuck, please check	The main wheel is stuck or entangled, please check the main wheel and clean up foreign objects
Mistake 13: Brush bar may be stuck, please check	The roller brush is entangled or stuck, please check the roller brush and clean up foreign objects
Mistake 14: Side brush may be stuck, please check	The side brush is entangled or stuck, check the side brush and clean up foreign objects
Mistake 15: Charge station not found	If the charging station is not found during recharging, or the charging station is not plugged in, please check whether the indicator light of the charging station is always on, or move the machine back to the charging station
Mistake 16: Something went wrong, please restart	Exception caused by unknown fault, it is recommended to restart the machine
Mistake 17: Error, shutting down	Restart after shutdown, if still invalid, send it to after-sales maintenance
Mistake 18: Battery is low, please charge	Put the host on the charging stand to charge
Mistake 19: Remove from charged station for power off	When the charging stand is charging, it cannot be turned off, please move it away from the charging stand and press and hold the power button to turn it off

Product Hazardous Substance Content and Name

Name	Harmful substances					
	(Pb)	(Hg)	(Cd)	(Cr(VI))d	(PBB)	(PBDE)
Circuit board assembly	X	O	O	O	O	O
Battery	X	O	O	O	O	O
Charger	X	O	O	O	O	O
Power cable	X	O	O	O	O	O
Metallic parts	X	O	O	O	O	O
Motor	O	O	O	O	O	O
Shell	O	O	O	O	O	O
Other Accessories	O	O	O	O	O	O

This form is prepared according to the provisions of SJ/T 11364

- ☐:Indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirement specified in GBT/T 26572
- ☒:Indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirement specified in GBT/T 26572

Warranty Policy and Customer Service Information

Thank you for purchasing the product! If there is a product quality problem within 12 months from the date of purchase

Warranty period

The after-sales service of cleaning robot products is strictly in accordance with the "Consumer Rights Protection Law of the People's Republic of China" and "Product Quality Law of the People's Republic of China" to implement after-sales three-guarantee services. The service contents are as follows:

Free return service

2. Within 8-15 days from the day after the receipt, if the product has performance failures listed in the "Sweeping Robot Product Performance Failure Table", it will be tested and confirmed by the intelligent after-sales service center, and you can enjoy free replacement or maintenance services. Within 12 months from this date, if the product has performance failures listed in the "Sweeping Robot Product Performance Failure Table", it will be tested and confirmed by the intelligent after-sales service center, and maintenance services can be enjoyed free of charge. Friendly reminder: Because the packing box needs to be used to ensure the safety of the product during transportation, it is recommended to keep the packing box for at least 30 days from the date of receipt

The content of the warranty

Name	Harmful substances	Warranty period
Main smart vacuum robot cleaner	Contains built-in lithium battery	One year
Attachment	Charger , electric wire, water tank	One year
Ingredient	Roller brush, side brush, brush cover, filter screen, cleaning tool, rag, dust box	/

Note: There is no warranty period for accessories of random consumables

Warranty Policy and Customer Service Information

Non-Warranty Policy

1. Exceed the warranty period
2. Damage caused by not using it in accordance with the requirements in the instruction manual or user guide
3. Damage caused by man-made reasons
4. Failures caused by unauthorized disassembly, repair, and modification of the product
5. Damage caused by force majeure factors (such as floods, earthquakes, lightning, etc.)
6. No warranty card, invoice or warranty card does not match the invoice information
7. Natural wear and tear of the product
8. Other failures and damages not caused by the quality of the product itself

Precautions:

1. A valid purchase certificate must be issued by the sales unit at the time of purchase
2. The warranty card and proof of purchase should be properly kept by the user and will not be replaced if lost.
3. If the product fails due to non-human reasons, the user can go to the service center for free maintenance within the warranty period with the warranty card and purchase certificate

Sweeping robot product performance failure table

Name	Performance failure
Main smart vacuum robot cleaner	The functions listed in the manual are invalid
	Doesn't turn on
	The roller brush, the side brush, the fan and the main wheel does not work
adapter	The charging cradle cannot be powered properly
Charger	Unable to power

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance between 20cm the radiator your body.

FCC Statement (Cont.)

Consult the dealer or an experienced radio/TV technician for help.

IC warning

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

-French:

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes: Cet appareil ne doit pas causer d'interférences.

Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Déclaration d'exposition RF:

L'équipement est conforme à la limite d'exposition aux radiations de la IC établie pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.



Declaration of Conformity (DoC)
Hereby, Guangdong Wangjia Intelligent Robot Co.,Ltd.
declares that this equipment is in compliance with the essential requirements and other
relevant provisions of Directive 2014/53/EU.

Type of Wireless	Operating Frequency (MHz)	Maximum RF Power
WLAN	2412-2472	18.5 dBm

Hree items incloud vouchers

The information of user

Name: _____

Tel number: _____

Address: _____

Email : _____

The information of product

The type of product : _____

The colour of product : _____

Product Serial Number: _____

Order date : _____

Maintenance record

Num	Date	Trouble phenomenon and treatment method	maintenance engineer
1			
2			
3			
4			

Experience smart technology and enjoy higher quality life