

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

FRONT




INS-1104-20
Robo Rimmer Instructions

INK: CMYK
COATING: Matte




ROBO RIMMER

THANX for purchasing the ROBO RIMMER. Here’s how to operate:

USING ROBO RIMMER

- 1 Hold the  3 seconds or until red light turns on.
- 2 Continue to press  to cycle through the toy’s 5 rotation patterns.
- 3 To turn off, hold the  button on the Rimmer until light turns off.

USING THE REMOTE

- 1 Complete step 1 above
- 2 Press  on the remote; red light will turn on.
- 3 Press  to begin and cycle through 5 Rotation functions. Hold same button 3 seconds to turn off.
- 4 Press  to begin and cycle through 8 Vibrating functions. Hold same button 3 seconds to turn off.

NOTE: Rotation and Vibrating functions can be used independently or concurrently.
NOTE: If the device or remote is not used for 10 minutes, they will turn themselves off.

CHARGING PORT

- 1 Place the magnetic end of the charging cord on the charging port on the toy. Connect the charge cord to a USB port or adapter.
- 2 Power button will glow solid red when fully charged. Remove from charger promptly once charging is complete.

CARE INSTRUCTIONS

- 1 Spray your Robo Rimmer with Doc Johnson Toy Cleaner or wash with mild soap and warm water. Allow to air-dry completely before storing separately from other toys in a cool, dry place. Use with water-based lubricant/glide, Doc Johnson Toy Cleaner sold separately.

WARNING FOR VIBRATING PRODUCTS: To avoid injury or aggravation of pre-existing conditions, this product should not be used on swollen or inflamed areas or skin lacerations. No medical claims are warranted or implied by the use of this product.

PRODUCT INFORMATION

- Charging time: 90 minutes
- Usage time: 45 minutes
- Functions: 5 Rotating & 8 Vibrating Functions
- Remote battery type: 2 AAA (not included)
- Waterproof



PRODUCT USES AND WARNINGS: TO ENSURE THE SAFE USE OF OUR PRODUCTS AND TO EXTEND PRODUCT LIFE, BEFORE USING OUR PRODUCTS PLEASE SCAN THE QR CODE AND REVIEW OUR PRODUCT USE GUIDELINES. ALTHOUGH ALL FORT TROFF PRODUCTS ARE DESIGNED AND MANUFACTURED WITH GREAT CARE, WE URGE OUR CUSTOMERS TO PRACTICE SEX TOY SAFETY. THESE GUIDELINES ARE ALSO AVAILABLE ON OUR WEBSITE AT [HTTPS://WWW.DOCJOHNSON.COM/FORTTROFF](https://www.docjohnson.com/forttroff).



FORT TROFF X
DOCJOHNSON®

BACK