

XPERIA
SONY®

Startup guide



Ръководство „Бърз старт“
Úvodní příručka
Kurzanleitung
Installationsvejledning
Alustusjuhend
Guía de inicio
Aloitusopas
Guide de démarrage
Οδηγός εκκίνησης
Priručnik
Használatbavételi útmutató
Ræsihandbók
Guida introduttiva
Palesties vadovas
Sākšanas ceļvedis
Opstartgids
Oppstartsveiviser
Instrukcja obsługi
Manual de Iniciação
Ghid de pornire
Starthandbok
Vodič za začetek uporabe
Úvodná príručka
Руководство по запуску
Посібник з запуску
Бастапқы нұсқаулық
คู่มือเริ่มต้นการใช้งาน
用戶指南

XQ-AD51/XQ-AD52




Printed in XXX (Printers logotype)








1 SIM

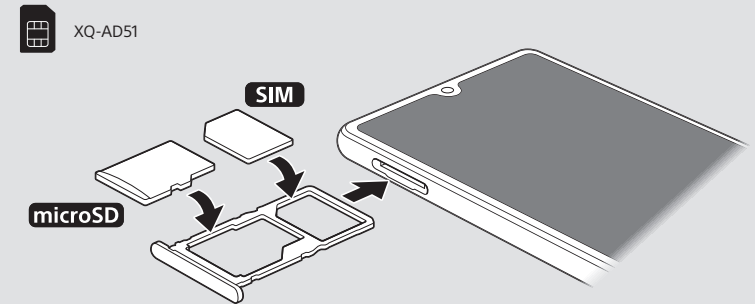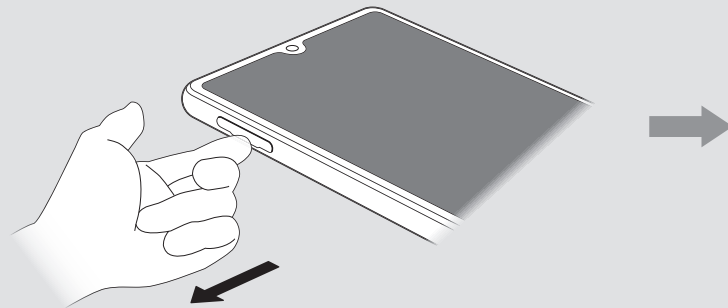

OR

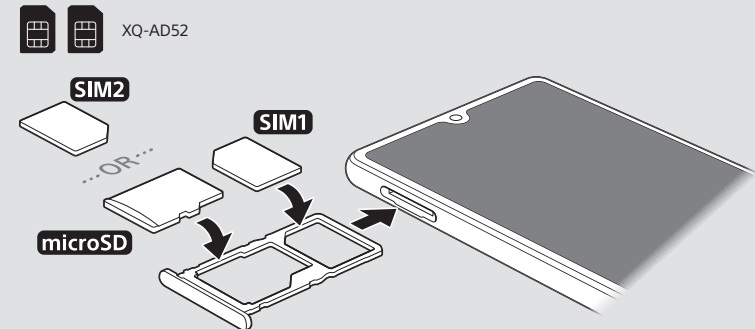

2 PWR ON

 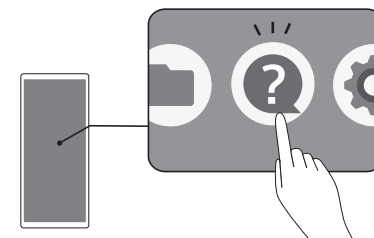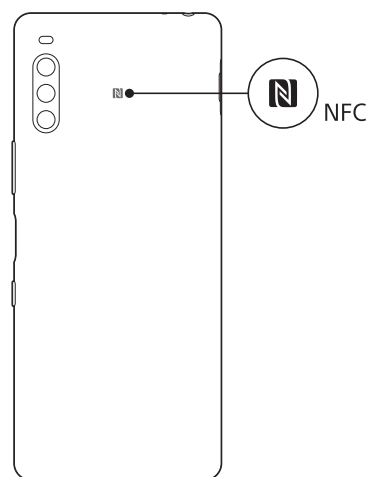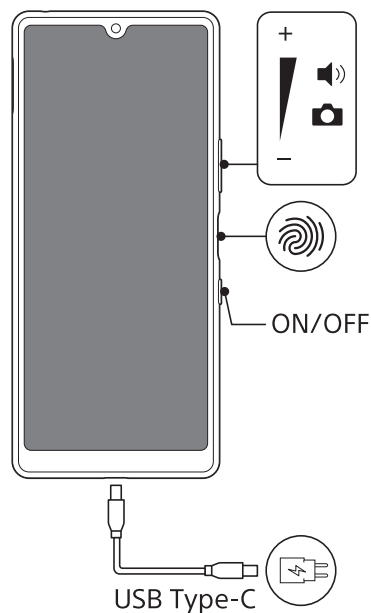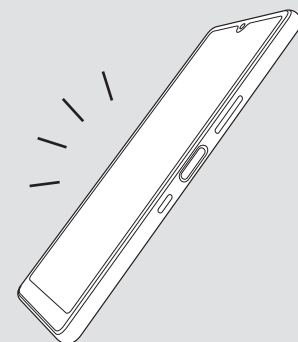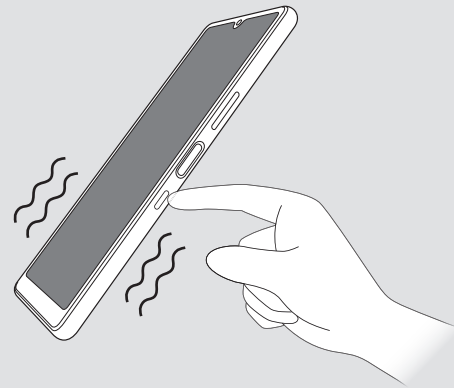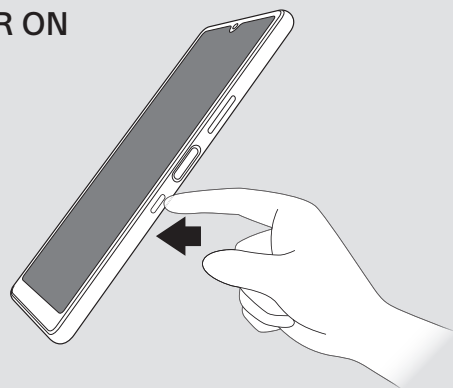

OR



support.sonymobile.com

