


1

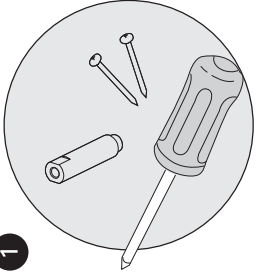


Following the installation instruction to install the smart lock.

2




Scan QR code to download Kaadas Home App

3

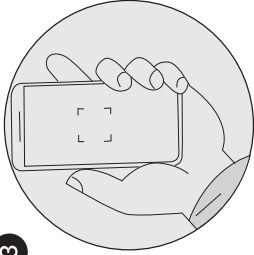


Register and Log in Kaadas Home App, add device by scanning QR code on the device.

4

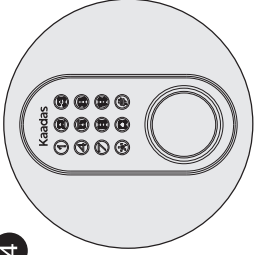

Calibrate the smart lock and complete bluetooth & Wi-Fi setting in the App.

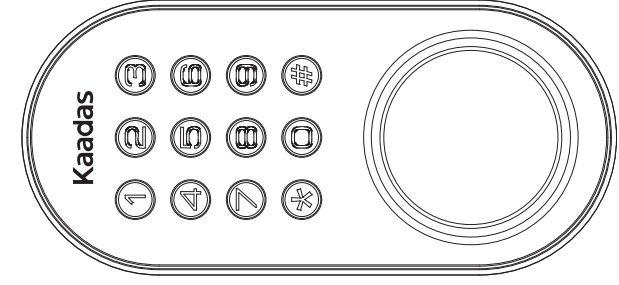

Kaadas

KA341

Wi-Fi Keypad Smart Lock

Installation Guide / Quick Start Guide

Thank you for purchasing our products. Please review this manual thoroughly before operating your device. All pictures in this manual are for illustration purpose only. Actual product may vary due to product upgrade.

Installation Guide

△Read this manual carefully before installing and operating!

P 3	STEP 1: Prepare the door and check dimensions
P 4	STEP 2: Install the latch and strike
P 6	STEP 3: Install exterior assembly
P 7	STEP 4: Install interior assembly

Quick Start Guide

P 8	At a Glance
P 9	How to Lock/Unlock
P 10	Definitions
P 11	Code Format
P 12	Quick Set Up
P 14	Factory Default Settings
P 15	Download Kaadas Home App
P 16	Troubleshooting
P 17	FCC Statement & Warnings

TOOL REQUIRED:



Do not use an electric screwdriver during installation.



IMPORTANT:

Do not load batteries until lock is completely installed.

1 Prepare the door and check dimensions

A Measure to confirm that the hole in the door is 1-1/2" or 2-1/8" (38mm or 54mm)

Measure to confirm that the hole in the door edge is 1" (25mm).

B Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70mm)

C Measure to confirm that the door is 1-3/8" to 2" (35mm to 50mm) thick.

D Make sure the hole in the door frame is drilled a minimum of 1" (25mm) deep, to leave enough space for the deadbolt to extend into the door frame when the door is locked.

Notes: Make sure the door frame is aligned with the door. There are no obstructions stuck in the door frame.

2 Install the latch and strike

A Determine backset and adjust the latch

YES No adjustment is required. Proceed to next step.

NO Slotted hole is NOT centered. Rotate and pull the latch as shown to extend latch.

B Install the latch

chiselled

not chiselled

1 **2** **3** **4**

1 **2** **3** **4**

INSTALLATION OVERVIEW

Exterior Assembly (B)

Exterior Assembly Screw (F)

Mounting plate (E)

Strike (D)

Strike Screws (H)

Latch (C)

Latch Screws (I)

Backup key (A)

Reinforcement plate (D-1)

Interior Assembly Screws (K)

Interior Assembly (G)

Battery Cover (L)


Parts List

A Backup Key x2	B Exterior Assembly x1	C Latch x1	D Strike x1
E Mounting Plate x1	F Exterior Assembly Screw (Optional)	G Interior Assembly x1	H Strike Screws x2
J Mounting plate Screws x2 (35mm<door thickness<50mm)	K Interior Assembly Screws x3	L Battery Cover x1	M Reset Tool x1
			I Latch Screws x2
			D-1 Reinforcement Plate x1 (optional)


If any parts are missing or damaged, please contact Customer Support.

4 Install interior assembly

A Push the battery cover out in the direction as illustrated.

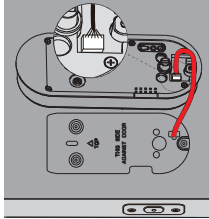


C Keep the thumb turn in vertical position and install the interior assembly.

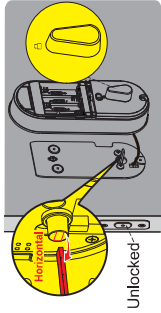


B


 
Insert the cable into the connector. Push the connector in firmly until it is completely attached.




D Attach Interior Assembly to Mounting Plate and tighten 3 Screws.

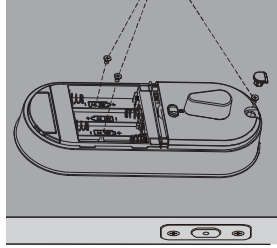

E Load 4 AA (1.5V) batteries (Not included) into the battery compartment.

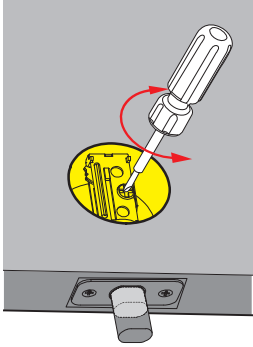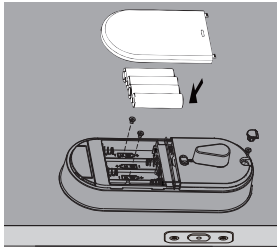


 C Use a screwdriver to test if deadbolt works smoothly.



IMPORTANT: Make sure the hole in door frame is drilled a minimum of 1" (25mm) deep.


D Install strike on the door frame.

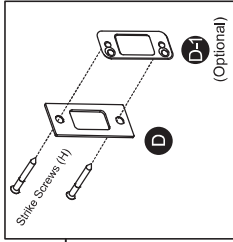


QUICK START GUIDE

At a Glance

Exterior Assembly

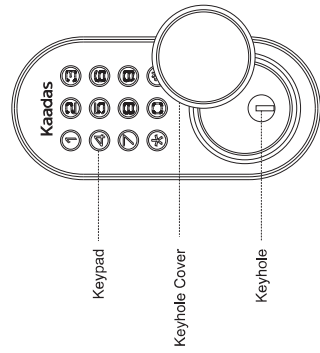

Interior Assembly


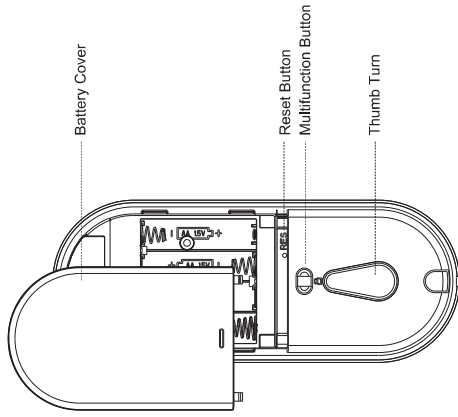


STEP


3 Install exterior assembly




IMPORTANT: Before installation, make sure the latch is fully retracted (in the unlocked position)

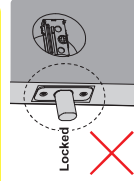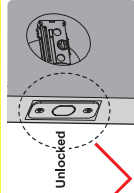

A Measure the diameter of the hole in the door.

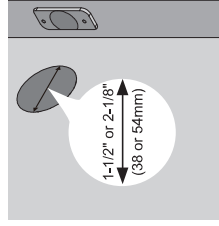

1-1/2" (38mm)

 


Remove the spacer

2-1/8" (54mm)

Proceed to next step

Keep parallel to door edge.

C Secure the mounting plate with the supplied screws. Do not over tighten screws.

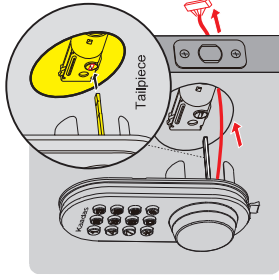

B With the latch fully retracted (in the unlocked position), route the cable below the latch, and insert the tailpiece through the slot in the latch.

Download Kaadas Home App

Download Kaadas Home App from the App store or Google Play.



Scan QR code to download
Kaadas Home App



Quick Set Up Tips

- Register an account in Kaadas Home App
- Scan QR code on the inside panel to add KA341 to the device list
- Follow the setup steps to get started.

! IMPORTANT:


- The Auto Lock is disabled by default, please complete the set up process and enable Auto Lock in App.
- The administrator of the lock will be the first account to bind it by default. The administrator account have access to manage users of the lock.
- To reset the smart lock, please press and hold the Reset button on the interior panel for 5 seconds.
Log in the App with Administrator account, go to setting and unbind the lock. (This step is required, if the administrator account didn't unbind the device, the lock won't be able to be repaired by other accounts.)

15

Troubleshooting

Problem	Solution
The latch does not operate correctly after installation.	☐ Make sure the backset on the latch is set to the proper length. Refer to Installation Guide ☐ Make sure prior to installation latch bolt is retracted and key is not in lockset when installing the deadbolt. Refer to Installation Guide ☐ Please restore to factory setting and enter the default Master Code to set up the lock. Refer to User Guide
Feel a bump while turning the thumb turn or the key?	Check if the length of mounting screws is correct.
Fail to set up the lock.	☐ Please make sure that the lock is installed correctly. ☐ Please insert fresh batteries and make sure that the cable is properly connected. ☐ After installation, reset the lock to factory settings to complete the lock setting process.
Keypad not responding.	☐ Please make sure that the batteries are inserted correctly ☐ If the battery indicator flashes continuously, the batteries are almost empty. Please replace them with four new batteries for best performance (alkaline batteries only). ☐ Please make sure that the cable is well connected to the connector and has not been damaged during installation ☐ Please make sure the lock has been set up and complete the lock handing determination.
Master Code can not be changed.	Please refer to User Guide to restore factory settings and reprogram all codes.
I forgot my Master Codes.	Perform a reset to clear all PIN codes. Once the reset is complete, all PIN codes will be deleted and the master code will be reset to the default master PIN code 12345678.
Auto lock does not function	If the battery indicator blinks continuously, the batteries are weak. Please replace them with four new batteries to get the best performance (alkaline batteries only). Please refer to the USER GUIDE to activate the AUTO LOCK function.

16

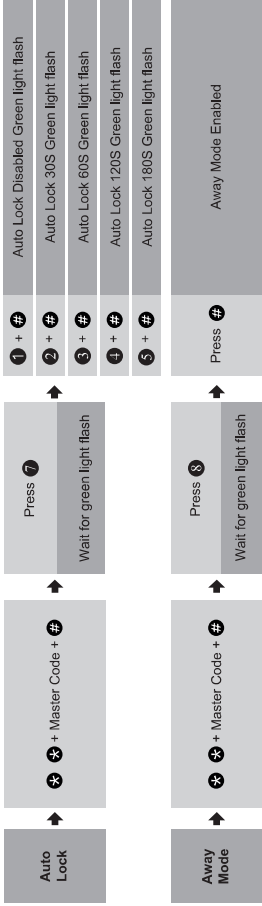

Notes:

1. Beeps only sound when the Silent Mode is disabled.
2. If the indicators flash red light, it means your setting failed and it will require to re-enter master mode if you would like to continue your programming.


13

Factory Default Settings

How to Reset?

Resetting the device will delete all User PIN Codes and Master PIN Code stored in the lock.

- Step 1. Keep the door open and the lock unlocked (thumb turn will be vertical).
- Step 2. Using the Reset Tool, press and hold the Reset Button for 5 seconds until you hear the "BEEP" and the latch rotates, turning the thumb turn to the vertical position automatically.

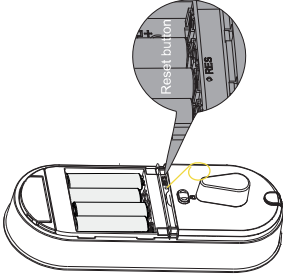

Factory Default Settings	
Settings	Factory Default
Master Code	12345678
Auto Lock	Disabled
Silent Mode	Disabled
Wrong Code Entry Limit	10 times
Shutdown Time	3 mins
Away Mode	Disabled

14

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes :

- (1) Cet appareil ne doit pas provoquer d'interférences.
 - (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.
- L'appareil numérique du client conforme canadien peut - 3 (b) / nmb - 3 (b). This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Warnings

Failure to follow the below instructions could result in damage to the product and void the factory warranty.

This manufacturer advises that no lock can provide complete security by itself.

This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property.

No lock can substitute for caution, awareness of your environment, and common sense.

Product Care:

- This lockset is designed to provide the highest standard of product quality and performance. Care should be taken to ensure a long-lasting finish. When cleaning is required, use a soft, damp cloth. Using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing.

- Avoid exposure to direct sunlight. Long-term exposure to direct sunlight may damage the lock.

Do not install batteries until the lock is completely installed on door.

- User Pin Codes: Can be 4-10 digits and can be set up in Kaadas Home App.
- Door sensor calibration: To calibrate your door, please follow the instruction in App step by step. Once it's calibrated successfully, you could try detect the status of your door in Kaadas Home.
- Share your device: Share your device means that you share the access to track the device with your other users, please be aware of the potential risks it may cause.

物料名称:	KA341说明书	成品尺寸:	190 x130mm
时 间:		材 质:	105g双铜纸
设 计:		工 艺:	四色双面印刷，骑马钉
料 号:		备 注:	