

# User Manual

## Overview



## SIM Card Installation

Back key (  ): Touch to go back to the previous menu.

**Warning:**

- Do not remove the battery while the device is charging.
- Use only the AC adapter & USB cable provided with your device.

**Note:** For safety, the battery will stop charging if in danger of overheating

## Audio Profile/Sleep Mode

1. On the home screen, touch the "APP Menu" & select "Settings".
2. Select "Security and location" then select "Screen lock".
3. Select the desired type of lock & follow the prompts to set up.

## Phone Features

1. **Clock**  
Allow you to set the Alarm from Clock.
2. **Browser**  
Browse the internet. Search engine- default set as Google.
3. **Calculator**  
Allow you to make tedious calculations quickly.
4. **Calendar**  
View the calendar & add events.
5. **Camera**  
Allow you to click pictures anytime you want. Your Nitro 55 High Definition camera with LED Flash supporting many such like Face Detection which ensures you to take good quality and stores them in the Gallery. In Camera, easily choose to record Video.
6. **Contact**  
To see your list of Contacts. Access your digital phonebook function.
7. **Email**  
Allows you set up your POP/IMAP email accounts.


## Phone Features

**16. Videos**  
View from list of videos

## Phone calls/Texting

© 2020 Maxwest and the Maxwest Logo are registered trademarks Google, Android, Google Play, Gmail and other marks are trademarks of Google LLC.  
The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution Licence.

## WLAN

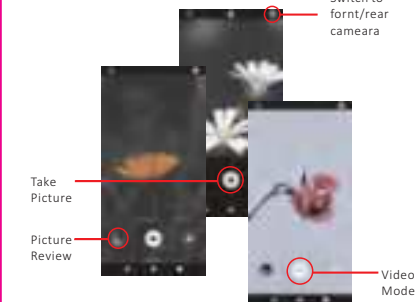

## Connecting to E-mails

### Delete message:

1. Go to Inbox to display messages.
2. Touch & hold the message you want to delete.
3. Select "Delete".

## File Transfer

[illegible]

## Warning

---

---