

11.6" Bluetooth DVD Player with Stereo Headphones

User's Guide for Model PDB1214BDL v3316-01



Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC WARNINGS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ADDITIONAL WARNINGS AND PRECAUTIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Caution marking is located at the rear or bottom of the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** Shock hazard - Do Not Open.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- **WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.** If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- If the coin/button cell battery supplied with this product is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Completely replace all old batteries with new ones.
- Batteries should be recycled or disposed of as per state and local guidelines.



WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



 
This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.




WARNING : This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov. This product meets and complies with required Federal regulations.

Overview


Front View

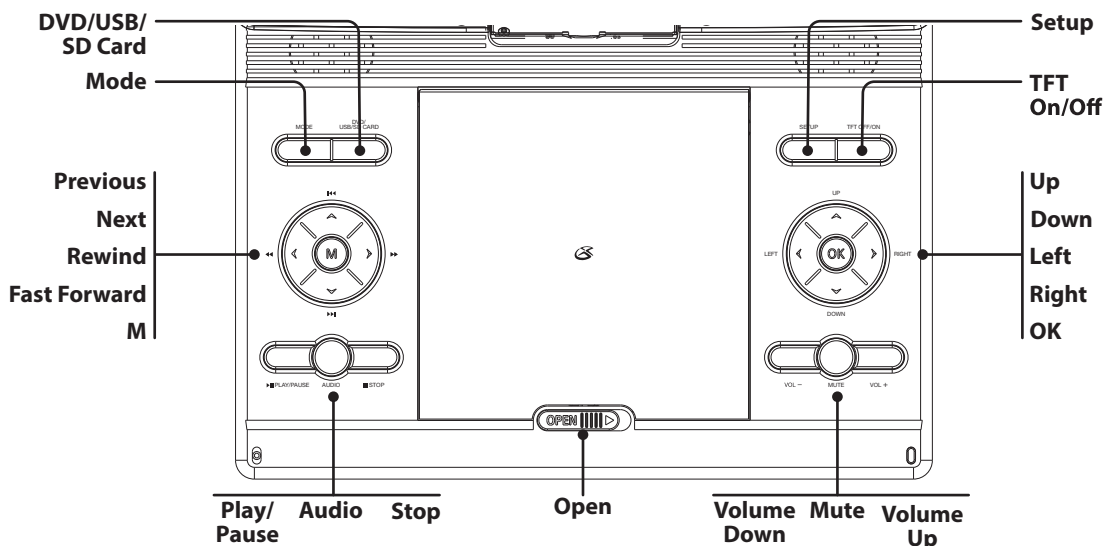

Side View

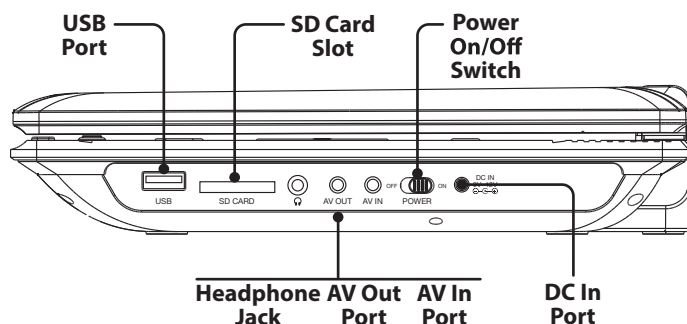 

Front View

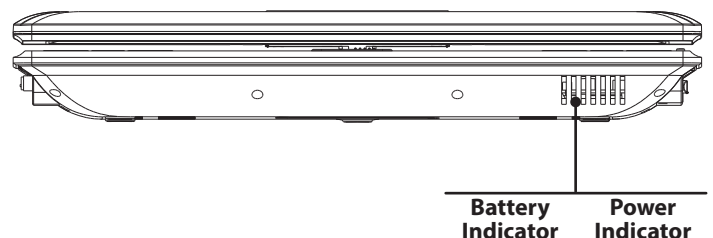 

Remote

DVD/USB/SD Card

Press to select media source (DVD, USB, SD Card)

Power

Press to power on or off.

Number Keypad

Press to enter specific chapter or track numbers. Use Play button to begin playing.

VOLUME +/-

Press to adjust audio level

Mute

Press to mute volume.

Setup

Press to enter the Setup menu.

Direction Buttons

Press to navigate onscreen menus.

Stop

Press to stop playback or exit setting menus.

OK

Press to confirm selections

◀◀ Skip Backward/Previous

Press to play previous chapter or track.

◀◀ Fast Rewind

Press to fast speed to reversing (X2, X4, X8, X16) playback and individual chapter or track.

▶▶ Play/Pause

Press to play or pause an individual chapter or track.

▶▶ Skip Forward/Next

Press to skip between chapters or tracks.

▶▶ Fast Forward

Press to fast speed to forwarding (X2, X4, X8, X16) playback and individual chapter or track.

Program

Press to activate the Program feature. Press again to exit Program.

Repeat

Press to select a desired playback loop.

Display

Press to read information on playback status.

Goto

Press to skip to a specified play time.

Zoom

Press to zoom display image in or out.

TFT OFF/ON

Press to turn display on or off.

Mode

Press to switch between AV Mode or DVD Mode.

Angle

Press to select the viewing angle during playback.

Title

Press to return to the title page when playing DVDs.

Menu

 
Press to return to disc menu when playing DVDs.

Subtitle


Press to select the desired subtitle setting and subtitle language during playback

Audio

Press to select the desired audio language while playing DVDs.

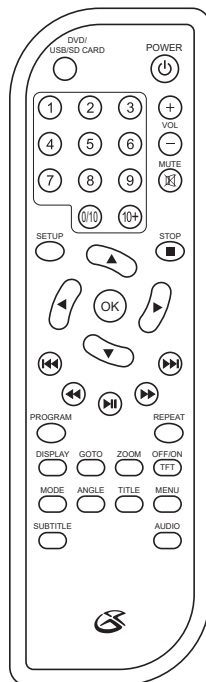

Remote Battery

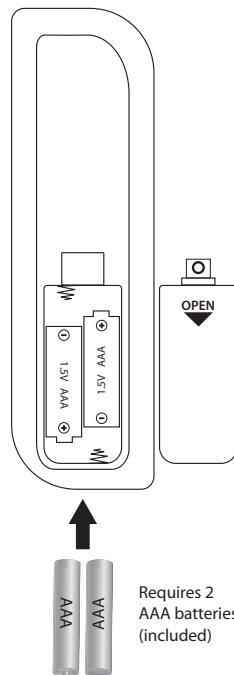 

Charging and Power

Power from a Car Adapter

Connect the small plug from the supplied **car adapter** to the **DC In port** on the right side of the main unit. Then, plug the car adapter into the cigarette lighter in the car.

Note: This adapter is only compatible with a vehicle with a 12V battery.

Power from an Outlet

Plug the **AC/DC power adapter** (included) into a standard wall outlet. Connect the adaptor to the **DC In port**.

Note: The **battery indicator** on the front of the unit will turn **red** when the unit is charging and will turn **green** when the unit is fully charged. The **power indicator** will turn red when the unit is on.

Bluetooth Transmitter

- Press the **Setup** button to enter the Setup menu. Use the **Arrow** buttons to select Bluetooth Transmission and change the setting to On. The **power indicator** will flash green. Then, press the **Setup** button to exit the menu.
- Enable Bluetooth on your device. To eliminate confusion, disable Bluetooth on all devices to which you do not wish to connect.
- The player will auto scan and pair with your Bluetooth device. The **Power Indicator** will display a solid green light when connected. Audio from the player will now be heard through your Bluetooth device.
- To pair with another Bluetooth enabled device, disable Bluetooth on the connected Bluetooth device or turn the device off. Enter the System menu and change the BT OUT setting to off, then on again. Then, repeat steps 2 and 3.
- Change the Bluetooth Transmission setting back to off to exit Bluetooth Transmitter mode. The **Power Indicator** will display a red light and audio will be heard through the player's speakers again.

Note: This player has a Bluetooth Transmitter, meaning it can only connect to Bluetooth Receivers, such as speakers and headphones. If you experience issues pairing, check the manual for your Bluetooth device.

Loading and Playing a Disc

Playing a Disc

- Slide the **OPEN** button on the main unit to open the disc door.
- Place a disc on the center spindle with the label side facing up.
- Close the lid by pressing on the disc door. You will hear a click after you have shut the lid securely.
- Slide the **Power On/Off switch** on the right side of the unit to the on position to power on the unit. Playback will start automatically.

Note: When you press the **Stop** button then press the **Play** button, the player will resume playback from the last stopped position. There is a loading delay during this process while the player recalls memory of the last stopped position. You can turn the Last Memory Recall setting off or on in the Setup menu.

Programming a Disc

- While the loaded disc is playing, press the **Program** button on the remote.
- Use the **Number Keypad** and **Direction** buttons to enter DVD titles and chapters or CD tracks in the order you want them to play.
 - Repeat this step until the desired DVD titles and chapters or CD tracks are programmed.
 - For DVDs, titles and chapters must be entered at the same time.
- Press the **OK** button to confirm your choices and begin playing the programmed disc.
- Press the **Stop** button twice to exit the Program feature and resume normal playback.

Note: If last memory recall setting to on, the unit will resume playback from the last stopped position.

Storage Media

Supports SD cards, and USB flash drives. Supported file types include Mpeg4, mp3, Jpeg, and Avi file formats. Supports video files up to 720x576 pixels.

- Insert a USB drive into the **USB port** or insert a SD card into the **SD card slot**.
- To select USB or SD as the source, press the **DVD/USB/SD Card** button on the remote, or press the **DVD/USB/SD Card** button on the front of the main unit.
- Press the Arrow buttons on the remote to select **Movie, Music, Photo or Ebook** mode.
- Press the **Direction** **▲/▼** buttons on the remote to select the desired folder or file. Then, press the **OK** button to begin playing content from the connected storage device.
- Press the **Stop** button to return to the previous folder screen.

Connecting the AV Output

Requires a 3.5mm to 3x RCA audio/video cable (included).

- Connect the 3.5mm to 3x RCA audio/video cable to the AV Output on the unit and the RCA stereo audio inputs and composite video input on a TV.
- Audio and video played on the DVD player will display on the connected TV

Connecting the AV Input

Requires a 3.5mm to 3x RCA audio/video cable (included).

- Connect the 3.5mm to 3 x RCA audio/video cable to the AV Input on the unit and the composite video/ audio outputs on a media player..
- Press the **Mode** button to enter the AV In mode.
- Use the controls on the connected media player to select and play media displayed on the DVD player.

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | **Email Support:** prodinfo@dpiinc.com | **Email Parts:** partsinfo@dpiinc.com

Copyright © 2024 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

