
# Conference Speakerphone


User Manual

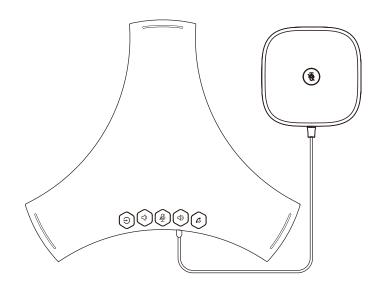


## **Notes:**


When using your device for a meeting, be sure to turn it off to ensure all quality Noise cancellation of conferencing software.

# **Packing List**

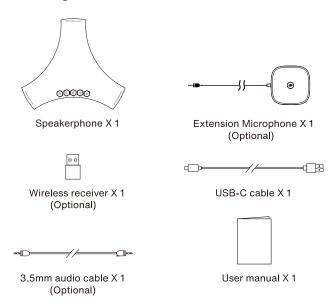

### **Product overview**

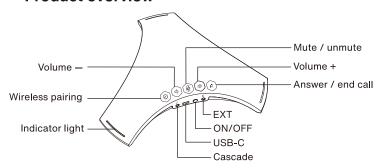

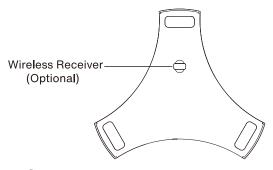

## Easy Set-up

## About main sperkerphone

#### 1. On/Off

- 1.1:Long press on/off 🖒 key for 3s, device will be turn on with a beep.
- 1.2:Long press on/off 🖒 key for 3s, device will be turn off with a beep.

#### 2. Connect and disconnect

- 2.1: Wireless connection
- A. It automatically enters wireless pairing when it is turned on, and the indicator light gradually changes from red to blue. If it is not connected for 2 minutes, it will enter wireless timeout, and the indicator light flashes blue
  - (At this time, press  $\bigcirc$  and hold for 3 seconds to enter pairing again).
- B. Open the wireless settings on your phone or computer, select the omnidirectional microphone for pairing connection, and the indicator light will be solid blue after the connection is successful.
- C. To cancel the wireless connection, press and hold  $\bigoplus$  for 3 seconds to cancel the connection. The indicator light will change from solid blue to red and blue gradient.

 


#### 2.2: USB connection

Connect with computer by USB-C cable

A. If the device is not connected wirelessly, it will automatically enter USB mode.

B. If the device is wirelessly connected, short press/tap  $\bigcirc$  button to enter USB mode.



#### 2.3: Connect by Wireless Receiver

Insert the USB receiver to your computer, and start wireless pairing mode on speakerphone, wait for about 15 seconds until the pairing is completed.



#### 3. Audio source switching function

When the device is connected by wireless and USB-C cable at the same time, short press/tap to switch to wireless or USB sound card.

#### 4. Answer / end phone call

When a call comes in, press  $\mathcal{L}$  button to answer calls,

During a call, press & button to end calls.

When a call comes in, long press & button to hang up call directely.

When the call is outgoing, press 🚱 button to hang up the call.

#### 5. Volume control function

(1) volume up, (1) volume down. (The minimum volume is mute, (1) light turns red)

#### 6. Mute

- 6.1: Under USB mode, Speakerphone working status indicator is green, and the mute status is red.
- 6.2: Under wireless pairing mode, Speakerphone working status indicator is blue, and the mute status is red.

#### 7. Auto power off

When device is not connected more than 15 minutes, it will shut down automatically.

## 8. Battery indicator

8.1: Charging at power-on:

While charging, the three-claw light breathes flashing.

(Wireless mode blue light breathing, USB mode green light breathing).

Fully charged, the three-prong light is always on.

(Blue light is always on in wireless mode, green light is always on in USB mode).

8.2: Power off charging:

While charging, the three-paw light green light breathes flashing. Fully charged, the three-prong light is solid green.

- 8.3: When the battery level is less than 15%, there will be a "low power" tone. A total of three prompts, the last prompt after "low power", a red light of the three-claw light flashes for 3 seconds and shuts down.
- 8.4: Short press the power button 🐧 to view the three-claw light display:

Power 100%~80%, four green lights;

 
Power 80%~60%, three green lights;

Power 60%~40%, two green lights on;

Power 40%~20%, light up a green light;


The battery is 20%~0%, and a red light is on.

# About extension microphone(Optional)



Please strictly follow the instructions to connect the cascade interface and the extension microphone interface. Incorrect connection may cause irreversible damage to the device.

# About cascading (Optional)

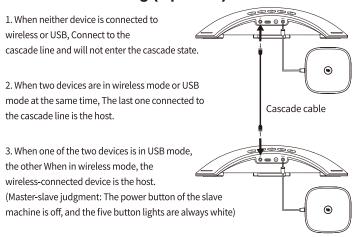

# Video meeting application system settings

In order to use the microphone and speaker of this product during video meetings, please double check the sound input and output devices in the application settings and select this device. If it is not automatically switched, manual selection is required sometimes

## FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.