



2. Check if each headphone headband is adjustable and if the headphone stands are adjustable. 3. Check if there are any missing parts of the product.

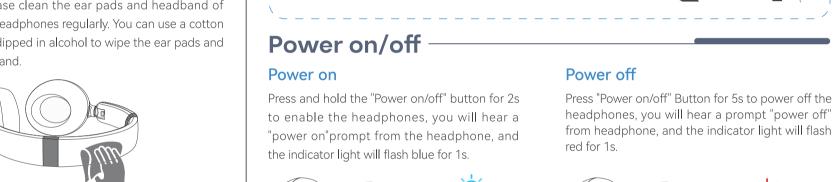

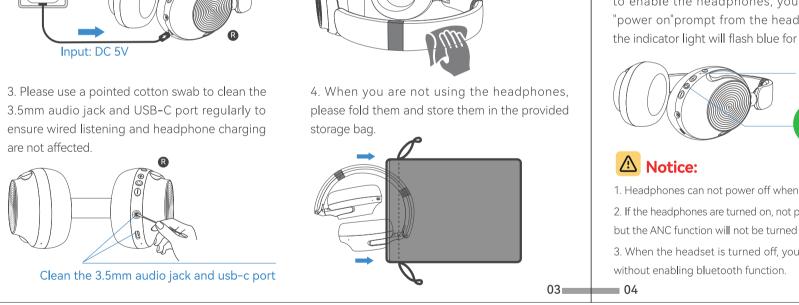

1. Please charge your headphones regularly to 2. Please clean the ear pads and headband of ensure you have enough battery for listening to your headphones regularly. You can use a cotton

turn on the headphones, they will

2. Next time pairing


For device second time pairing, just

enable bluetooth of your device and





. If the headphones are turned on, not paired with any device, they will automatically power off after more than 3 minutes, but the ANC function will not be turned off if you initially enabled the ANc function.

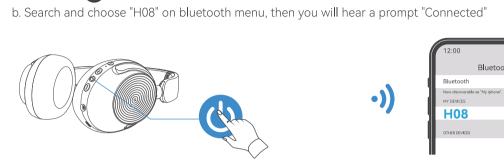















a. Just press "🚺" to turn on headphones, then wear headphones and enable the bluetooth of your device.





🖒 Power on

Press and hold for 2s


Phone Call Control –

Answer Call

Once click





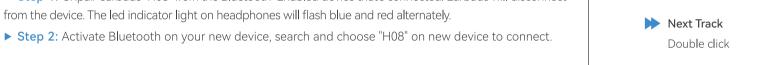






Press and hold for 2s



when headphones are in power off status. can press "ANC" button for 2s to activate ANC audio jack. Method: Just press "ANC" button for 2s, no need function. to power on headphones.

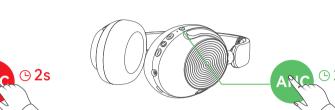

When Headphones Should be Reset

has been adjust to maxmium.

② Headphones disconnect with your device frequently.

① You can not find the device where the headphones connected to.

3 Headphones have no sound even connected with device and the

Press and hold the "V+" and "V-" keys simultaneously for 5 seconds when headphones is power on Then, headphones will be reset, and enter pairing mode, the led indicator light will flash red and

07 08





When headphones is power on or headphones is connected with your device via bluetooth Once insert result in an explosion.

Please plug the provided USB-C charging cable (included) into the headphones and connect it to a charger (not $\parallel \parallel$

the 3.5mm AUX audio cable we provided, the headphones will turn off automatically.

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful included) to charge the headphones. Please use a 10W and above charger to charge the headphones

interference to radio communications. However, there is no guarantee that interference will not occur in a which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

2. Battery Low: When the battery life is less than 30 minutes, you will hear "Low battery please charge This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. prompted every 5min, prompted 4 times, the fifth prompted "power off" and the headphones power of

1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can

2. Do not leaving a battery in an extremely high temperature surrounding environment that can resuilt in

Note: This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

harmful interference in a residential installation. This equipment generates, uses and can radiate radio

the user's authority to operate the equipment

flammable liquid or gas.

an explosion or the leakage of flammable liquid or gas.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the Using the wrong battery can cause fire and other hazards (for example, in the case of some lithium batfollowing two conditions: (1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired opera-

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

tion of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est

de licence. L'exploitation est autorisée aux deux conditions suivantes:

Reorient or relocate the receiving antenna.

— Increase the separation between the equipment and receiver.

susceptible d'en compromettre le fonctionnement.

Meadphones cut in/out when it connects with my phone via bluetooth. The device is compliance with RF exposure quidelines, users can obtain Canadian information on RF Any Changes or modifications not expressly approved by the party responsible for compliance could void exposure and compliance.

Le présent appareil est conforme Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: compliance d'acquérir les informations correspondantes.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

③ Reset your Bluetooth connection: Turn off Bluetooth on your device (phone/tablet/etc.) for at

 
⑤ Test the headphones: Listen to downloaded music or videos to test the headphones.

© Try another device: Please try using the headphones with another device (phone/tablet/etc.) to V1.1 20240829 see if the issue persists.

This means that this product must be handled pursuant to European pressed "ANC" button for 2s? directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment. headphones are plugged into the audio cable to listen to a song through a device, the ANC noise

The device is low power device, it can meet the requirement of the RF exposure. ② If you are sure that the headset is not plugged into any AUX audio cable, please reset your headset and press the ANC button again for 2s to enable the ANC function.



This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE).

3. Do not listen at high volume levels for long periods.

We kindly ask you to try the following troubleshooting steps as they have often proven helpful:

① Reduce the distance between your headphones and your audio device.

② Reset the headphones: Follow these steps to reset your headphones:

Step 1: Delete the pairing history from your Bluetooth device.

Step 2: Press the button on the "V+" "V- "5s simultaneously until the LED indicator flashes red and

blue three times. Your headphoens are now successfully reset.

least 10 seconds and then turn it back on. Please note, quickly turning Bluetooth off and on will not

reset the connection. ④ Close unused apps: Try closing any other apps you are not using on your device.

cancellation function will be automatically disabled.

① Disable and re-enable the Bluetooth function.

③ Clear the pairing list on your device. Connect again.

③ If above methods do not work, please contact us for help.

Meadphones can not connected with my phone.

A First, please make sure your headphones is power on, then follow steps below.

② Remove the headphones pairing name from the Bluetooth list on your device.

If above method do not work, please reset your headphones and reconnect with your device.

What should I do if the ANC function doesn't work even though I have