

**Manual for TECH Digital FM Transmitter-BK**  
**FILE NAME: TC-TM-FM-041-BK Manual**  
**ITEM NUMBER: TC-TM-FM-041-BK**

## VARNISHING TECHNIQUE

### MATTE VARNISHING

## FOLDING LINES

**AUTHORIZATION**  
**SIGNATURES:**

**DO NOT PRINT "PRINTER SLUG" LAYER!**

Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave,

The Car Transmitter turns any FM car radio into a wireless receiver. You can stream music wirelessly from your smartphone or tablet to the car speakers. Simply “tune in” to an unused FM channel and enjoy your audio

For first time use you will need to pair your smartphone with the FM Digital transmitter. The following are the pairing steps: please insert the FM transmitter into the car's charging port, when the FM transmitter turns

on, open the Bluetooth setting on your phone and search for the FM transmitter name **TC-FM-041**. When the pairing is successful, the Bluetooth will automatically connect with the matching phone automatically. When the vehicle's sound system and the transmitter are connected the audio files will be played automatically.

The FM Transmitter has a frequency Range of 87.5 — 108.0 MHz.

Use the number keys on the remote control (0-9) to select the unused FM frequency. Then press CH SET key to confirm and save the FM frequency.

Every time EQ is pressed the sound characteristics are changed in this order:  
**NORMAL (DEFAULT SETTING) - ROCK - POP - CLASSIC - JAZZ - BLUES - HALL BASS - SOFT - COUNTRY - OPERA.**

Long press the EQ key and the system returns back to the NORMAL status.

Last settings for Volume, FM transmission frequency and music track are stored in the memory when the device is powered off.

USB and SD Card can both be connected to the device. The first item is connected, either USB or SD Card is played. To select the other item the first one must be disconnected.

When an external audio device is connected to the audio AUX port, the playback from USB or SD Card stops automatically and cannot be started or paused by pressing the PLAY/PAUSE button.

## INSIDE PAGES

9.2 Products with replaceable button/coin cell batteries should additionally include:

- a) "Ensure the batteries are installed correctly according to polarity (+ and -)."
- b) "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
- c) "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- d) "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

## OUTSIDE PAGES

FC 

## ⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

## FM TRANSMITTER

TC-TM-FM-041-BK