


# karaoke mic

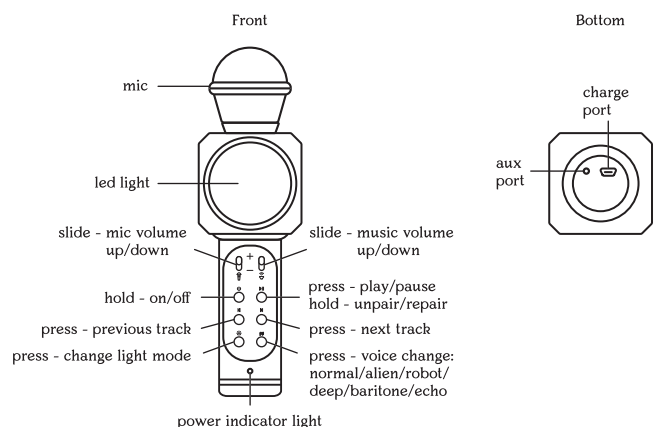

## using the mic

- Power on the microphone
- Connect the mic to your device using bluetooth or an aux cable and play your favorite song from YouTube, itunes® or your own music library
- While your song plays join in and sing along using the microphone
- Modify your voice using the voice change control to put a fun new spin on a favorite song
- Use the microphone alone by simply powering the microphone on
- If you hear no music or no voice, make sure the volume is turned up

## included

- Bluetooth Karaoke Microphone
- Micro USB Charging Cable

## pairing

- Power ON microphone using ON/OFF button
- Rapid flashing white light, followed by a chime
- Use bluetooth settings on your phone to pair with MORE THAN MAGIC O2
- Pairing successful - White light turns solid, followed by an echoing chime

front

4 in

## indicators

- Solid Red - Charging
- No Red Light - Fully Charged
- Flashing White - Pairing Mode
- Solid White - Bluetooth Connected
- Chirp Tone - Powering On
- Single Chime - Ready to Pair
- Echoing Chime - Paired
- Rapid Chirping Tone - Low Battery
- Quick Low Tone - Max Volume/Min. Volume
- Double Chime - AUX Cable Connected
- Fairy Dust - Power Off

## LED light

- Press the light mode button to switch between music match and color change

## charging

- Plug the charge cable into the bottom of the microphone and plug the USB end into a power supply of at least DC 5V 1A like a laptop or wall charger

## AUX/line in

- Plug in an 3.5mm audio cable to override bluetooth and sing along after picking your song
- Unplug the audio cable to switch back to bluetooth

## troubleshooting

- If the microphone does not show up in bluetooth settings, turn it on/off and try again
- If the microphone won't turn on, recharge the battery and try again
- If the microphone won't charge make sure the cable is fully connected and plugged in
- If the microphone does not show as an available device make sure it is not paired to another device. If it is paired to another device, disconnect and re-pair to the desired device
- This device does not have a pairing code. If you are prompted for one make sure you are connecting to the correct device. If you are, "forget" the device and repair. If you are still prompted enter 0000

## need some help?

Can't get it to pair? Have a question or comment?



call us at: 877-698-4883 or: 877-MyTgtTech



online at: TargetTechSupport.com

## safety

- Do not use near any water source
- Do not modify or repair this device
- Do not use in temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth

TargetTechSupport.com

FCC ID: 2A022-MC1 Model MC1 Input: 5V Max 1A Made in China  
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Target Corp. Mpls, MN, 55403 Phone: 1-612-304-6073

back

5.6 in