

 


INSTRUCTION MANUAL

Thank you for purchasing the Verve True Wireless Earbuds. This manual provides more information about the wireless earbuds, please read the instructions before using.



Product Overview





DC5V 1. On/Off Button/ Play/Pause Music Answer/End Call

Portable Charging Case

- 2. LED Indicator (Earbuds)
 - 4. Waterproof Plug 5. Micro USB Charging Port 6. LED Indicator (Charging Case)

Micro USB Charging Cable

USB Plug Micro USB Plug

Package Contents

Carabiner

Verve True Wireless Earbuds x 1 Pair Portable Charging Case x 1 Carabiner x 1

Instruction

Manual

Micro USB Charging Cable x 1 Instruction Manual x 1

Playtime: 1.5 Hours Per Charge

Charging Method: Magnetic Charging Case

Charging Case capacity: 500mAh (6 times)

Micro USB Charging Cable Included

Total Playtime: 10 Hours

Charging Time: <2 Hours Bluetooth Range: 32.8 Feet

Specifications

Driver Diameter: 10 mm Impedance: 32 Ohms Frequency Response: 20 Hz – 20K Hz Sensitivity: 98 dB +/- 3 dB Farbud Battery Canacity Li-ion 3.7V 35 mAh Per Earbud Charging Case Battery Capacity: Linion 3 7V 500 mAh Control: Button Control

Power On/Off

Power On
Press and hold down the On/Off Button of earbuds for 3 seconds and the LED

Power Off

Press and hold down the On/Off Button of earbuds for 4 seconds and the LED will turn off.

Pair the wireless earbuds with your mobile device

- 1. Keep the distance between the earbuds and mobile device within 32.8 feet.
- De-activate the Bluetooth function on your mobile device.
 Put the earbuds back to charging case before use. Take both earbuds out from charing case and wait for 3 to 5 seconds for auto pairing. The earbud has indicator blinking alternatively in Red and Blue. Another earbud will be blinking in Blue slowly when auto pairing is done successfully.
- 4. Activate the Bluetooth function on your mobile device and select "VERVE TWS" from the list shown.
- 5. After pairing is successful, both earbuds LED will be off.

*Attention: If the auto pairing is not successful, manual pairing between earhuds is essential by following below procedures:

- Make sure the earbuds are charged.
- De-activate the Bluetooth function on your mobile device. (if you had been paired the earbuds to some other mobile device(s) nearby, please sure to de-activate those device(s) too)
- Power on both earbuds simultaneously by pressing the On/Off buttons for 3 seconds and wait for 3 to 5 seconds for auto pairing. (Keep the Bluetooth function off on your mobile device before this operation.)

 4. Activate the Bluetooth function on your mobile device and select "VERVE TWS"
- from the list shown
- After pairing successfully, both earbuds LED will be off.

Reconnect the wireless earbuds to your mobile device

When powered on, the wireless earbuds will automatically connect with the last

Disconnect the wireless earbuds from your mobile device

Power off the wireless earbuds; or Switch off the Bluetooth on your mobile phone; or Leave the earbuds 60 ft away from your mobile phone or further.

Answer / Reject a call

When receive a call, press the On/Off Button once (on either earbud) to accept the call, or answer the call normally via your mobile phone. Press and hold 2 seconds to reject it.

To end the call, just press On/Off button at any side of earbud with Beep sound

Functions

Pause / Play Music: Short Press on On/OFF Button Go back to previous song: Press Left On/Off Button for 1 second.

Advance to next song: Press Right On/Off Button for 1 second. Volume up: Double click Right On/Off button to increase Volume down: Double click Left On/Off to reduce

Charging your Earbuds

- . Open the charging case cover.
- 2. Insert the Earbuds into the charging case
- The earbuds will start the charge automatically.
 LED indicator light of the Earbuds will be turned to
- Red when charging.

 5. Once fully charged, the LED will be off

Recharge Charging Case

⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the Micro USB charging cable provided with the packaging.

- 2. Connect the Micro USB plug to Micro USB charging port on the charging case, then connect the USB plug to a USB port on a computer or wall adapter to begin charging
- The Red colour LED on the charging case will be on during charge.
 Once fully charged, the Red colour LED will be off.

You must select a qualified charger from a regular manufacturer.

You must charge the charging case and earbuds if it has been not used for more than



Water-Protection

For proper water protection, make sure the Waterproof Plug of the unit is completely flush with the unit by pressing along the entire edge of the cover until it is completely and securely in place. And the top cover is tightened by the Lock Clip.

The Charging Case is IPX4 splash proof rated. However, DO NOT immerse the unit in water. It may cause product failure.

- Make sure the cover and surrounding surfaces are completely dry before opening the cover to prevent moisture from damaging the internal electronics.
- Keep the cover free of dirt, sand, or other objects that can interfere with proper sealing. If for any reason the cover is not making a tight waterproof seal water may
- DO NOT clean unit with oily soaps or use chemicals or solvents. Clean with damp

If the wireless earbuds cannot be paired with your device

please try the following:
Ensure that your earbuds are in pairing mode or reconnection mode

Ensure that Bluetooth search function of your mobile device is activated.

If the wireless earbuds will not turn on: Make sure the earbuds are fully charged

Make sure the protective stickers are removed from the Earbuds

Can I change the battery for the earbuds and the charging case? The wireless earbuds and the charging case use a built-in non-detachable battery

If the charging case cannot be recharged:

which cannot be removed

If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the

⚠ Safety instructions for the lithium battery and charging the product

-The input voltage to the product is 5V 1A.

-In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. -Only charge the product at ambient temperatures between 10 deg °C/ 50 deg °F and 40 deg °C/104 deg °F

- Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fire.

-Switch off the product after use.

-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this

-In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



FCC ID: 2ADM5-EP-0667

ITEM# EP-0667

Keep A Relevant Information For

