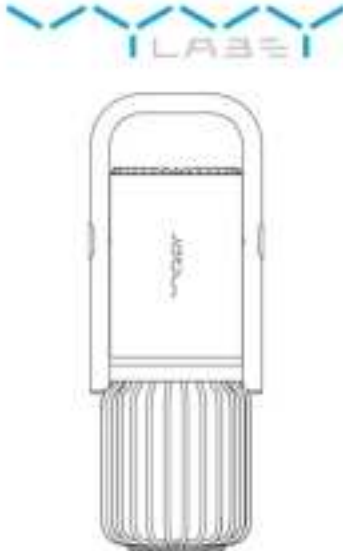 
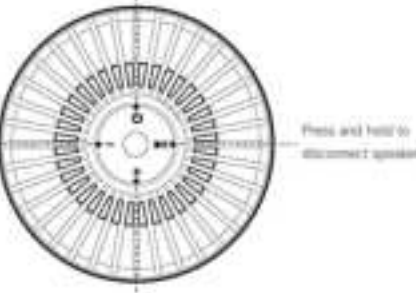 
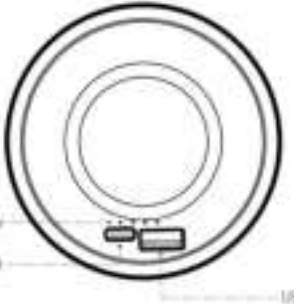 
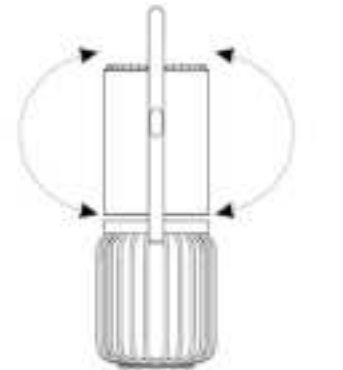 
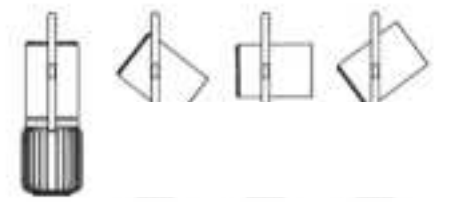 


维乐谱-X1 火焰多功能户外灯蓝牙音响（带移动电源）说明书

尺寸：85x100mm

正面

 USER MANUAL VYYLABS X1 FLAMING MULTIFUNCTIONAL OUTDOOR LIGHT WIRELESS SPEAKER (WITH POWERBANK) Please read this user manual carefully before use and keep it properly.	1. Functional Keys 1. Tap once to turn on/off the flashlight. 2. Double click to turn on/off the lantern. 3. Hold the two brightness modes for the flashlight. 4. Hold to turn on/off the Bluetooth.  1. Tap once to go to the previous song. 2. Press and hold for 2 seconds to reduce the volume. 3. Tap once to skip to next song. 4. Press and hold for 2 seconds to increase the volume. 5. Speaker will show as 91 on your device to automatically connect. Press and hold to disconnect speaker. • Turn on any function, all buttons will light up. • Turn on the Bluetooth function, all buttons will display bright light, while all buttons display fading blue light. • All keys flash while under low power mode.	2. Charging Interface  Locate the indicator next to the USB ports on the lantern. 0%~20% 20%~50% 50%~80% 80%~100%	3. Adjustable Flashlight  	4. Troubleshooting WHY IS MY LANTERN NOT WORKING? 1. Does the device you are trying to charge operate normally? Try charging a different device to confirm if the Lantern is working properly or if the device you are charging is the issue. 2. Does the cable you are using work with other devices? Cable quality matters. Check the USB cable with another device or power source to confirm it has not been damaged. Is the cable you are using the one that was supplied with the PowerBank? 3. Is there visible socket damage to the USB port? The USB socket on your Lantern should be stable—if it wiggles, or you have difficulty pushing cables into it, it's likely been damaged. If you have determined that it has been damaged, please file a claim for this product. 4. Was the Lantern dropped? Avoid dropping, knocking or hitting the Lantern! Physical shocks can cause the chip components and batteries to be damaged. You may be able to hear a rattle if you lightly shake the Lantern. 5. How long has the Lantern not been in use? If the Lantern is used infrequently or hasn't been used for a long time, we recommend fully charging it every three months. This will prevent battery damage resulting from over-discharge of the product. 6. Did the Lantern overheat before you noticed it stopped working? The lantern is IP64 rated, means it is dust proof and water resistant. Operate the device only within the specific temperature range of 32°F(0°C) to 104°F(40°C). Should the temperature exceed this range, please unplug and switch off the device in order to let the temperature stabilize to an optimal level.	LED LIGHTING 1. How do you turn on the torch light? Quickly press the power button twice until the light turns on. Pressing twice again will turn the torch off. 2. How do you adjust brightness on the flashlight? Press the power button once to turn on the flashlight and press once more to increase the brightness. Press a third time to turn the flashlight off. 5. Troubleshooting Product Name: Vyylabs X1 Flaming Multifunctional Outdoor Light Wireless Speaker (With Powerbank) Model No.: V001 Material: ABS + Aluminum Type-C Input: 500mA USB-A Output: 5V/2A Battery Capacity: 6000mAh Flashlight Current: 500mA Hi Light: Flame effect on the bottom Standby Current: 490ua Lantern Power: 2.2W Product Weight: 870g Product Size: 108*74*220mm	6. Troubleshooting • In order to achieve maximum safety while using your Lantern, we suggest that you adapt the following guidelines: • Should you have trouble using the device properly and troubleshooting does not work, unplug the device and contact sales@vyylabs.com for support. Do not attempt to service or fix the device yourself at any time. • Do not take apart the device and do not attempt to operate it under abnormal current loads. Doing so will void your warranty. • When using a power adapter with the device, make sure that its cable is fully inserted into the power adapter before plugging it into a power outlet. • Place the device on a stable surface that allows adequate air ventilation. Do not place the device on any unstable surface as the device may fall which may cause injury, damage to property, and even the product itself. • Do not use or place the device near any heat, naked flame, or other hot surfaces such as radiators, stoves, fireplaces, and candles.
--	--	---	--	---	--	---

背面

</
