#### FRONT PANEL LIGHTS

The light on the front of the unit displays status information.



Light Color	Description
Solid white	Router: device is connected to the internet  Extender: device is connected to the router
Solid amber	Extender has a poor connection to the router
Blinking white	Device is powering up
Blinking blue	Router: device is attempting to connect to the internet  Extender: device is attempting to connect to the router
Rapidly blinking blue	Device is updating firmware.  Do not remove from power.

#### I IMITED WARRANTY

MTRLC LLC warrants this product against defects in material and workmanship for a warranty period of 2 years. To read the full warranty, please visit: www.motorolanetwork.com/warranty.

#### SAFETY NOTICES

- Devices are intended to be placed indoors in an environment that's between 32° and 104° F (0-40°C)
- Marking Information is located on the bottom of the product.
- The power adapter plug is used as the disconnect device. The socket-outlet must be located near the equipment and be easily accessible.
- Avoid water and spills
- Leave room for airflow around the device;
   do not block the vents on the rear or bottom.

#### LABEL SYMBOLS

Symbol	Indicates
	DC voltage
Z	AC voltage
	For indoor use only
	Class II equipment
(v)	Energy efficient marking

#### **FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Additional FCC and Regulatory Compliance information can be found at: www.motorolanetwork.com/MH760X.



MH7601

## HELLO THERE

Set up your device with the motosync app:

motorolanetwork.com/sync





## **NEED HELP?**

Web motorolanetwork.com/support
Email support@motorolanetwork.com



#### IN THIS PACKAGE

#### MH7601 router / extender

1st device set up will be the router



#### **Power adapter**

1 per device



#### **Ethernet cable**

1 per package



# MH7601 BUTTONS AND PORTS





#### WAN/LAN Port

- For the router, connect the Ethernet cable from this port to your internet device (e.g. modem)
- For an extender, this port can be used as a second LAN port to connect wired devices



#### **USB-C Power**

 Connect the supplied USB-C 5V 15W AC adapter



#### LAN Port

LAN port to connect wired devices

#### PLACEMENT TIPS

We recommend placing your extender midway between the router and the desired WiFi coverage area. If you have multiple extenders, evenly space them throughout your home. See the example below.

Avoid placement near large electronics like TVs and microwaves



# Choose an elevated, uncovered location

