

165.0

12.4

Play your tunes from your portable MP3 or CD player through any FM radio!

Listen to your MP3 player through your car stereo in the car, enjoy your favorite audiobook CD while commuting, blast your laptop MP3 collection through your home stereo, or link your satellite radio to your car stereo.

- Typical range: 10-30 feet
- Amber power-on indicator
- Cord manager
- Includes 12VDC adapter, or plays on 2 "AAA" batteries (not included)

Easy to use—just plug, tune and play!

1. Plug the FM Transmitter into your portable player.
2. Tune the FM Transmitter and your stereo to the same FM frequency. Choose from 8 frequencies.
3. Turn on the FM Transmitter and music transmits from player to stereo.

FCC INFORMATION

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.



Requires 2
"AAA" batteries

120-2054



RadioShack®

Custom Manufactured in China for RadioShack Corporation, Fort Worth, TX 76102

Product may vary from depiction

www.RadioShack.com

1-800-THE-SHACK®



Addendum

12-2054

Wireless FM Transmitter

Connect to your audio source's
LINE/MICROPHONE jack.

Replace batteries when the amber
indicator dims or goes out.

For best reception,
position your FM
transmitter near
to your receiver's
antenna.

Low frequencies: 88.1, 88.3, 88.5, 88.7.

High frequencies: 107.1, 107.3, 107.5, 107.7

For best performance, select a frequency
that is not occupied by a strong local FM
station.

High-Low Band
frequency switch

5V DC jack

Plug the power port adapter into
your vehicle's power port.

