

AC POWER CEILING FAN REMOTE CONTROL MANUAL

MODEL:GW-TR004A1 / GW-TR004A2 / GW-TR004A3 / GW-TR004A4 / GW-TR004A5



LEARNING PROCESS

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

NOTE: The Hand Held Remote Control System is equipped with a learning frequency function which has code combinations to prevent potential interference from other remote units.

NOTE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Step: 1 Open the remote battery cover and install DC1.5V*2pcs battery.

Step: 2 turning the Receivers AC power ON.

After completing the steps above, you should be able to operate the ceiling fan and light. If the fan is not responding to the transmitter, please turn the power off to the receiver. And repeat step 1 and 2.





Remove the battery if not used for long periods of time to prevent damage to the hand held remote.

FUNCTIONS OF TRANSMITTER

NOTE:The internal PCBA of the transmitter for the 5 types of button panels is the same (the transmitter emits the same signal), and the symbol function changes of the panel buttons are achieved by the function changes of the receiver receiving the signal, independent of the transmitter. The PCB design of the transmitter covers every button function, and the data sent is fixed. The actual functional changes are affected by the receiver on the entire machine, which will adjust data processing according to different functional requirements.





1) MODEL:GW-TR004A1







1.  : Press this button to turn the fan off .
2.  : Pressing this key will increase the speed
3.  :Pressing this key will slow down the speed
4.  : Pressing this key will change the forward and reverse steering
5. Operation duration time(1H,2H,3H,4H,8H hours setting)

2) MODEL:GW-TR004A2











1.  : Press this button to turn the fan off .
2.  : Pressing this key will increase the speed
3.  : Pressing this key will slow down the speed
4.  : Fan timer

5.  :Fan spin direction winter/summer.
6.  : Press this button to turn on/off the light
7.  : Long press this button to turn the light from bright to dark
8.  : Long press this button to turn the light from dark to bright









3) MODEL:GW-TR004A3



1.  : **Press this button to turn the fan off .**
2.  : Pressing this key will increase the speed
3.  : **Pressing this key will slow down the speed**
4.  : Color temperature selection
5.  : Fan spin direction winter/summer.
6.  : Press this button to turn on/off the light
7.  : Long press this button to turn the light from bright to dark
8.  : Long press this button to turn the light from dark to bright






4) MODEL:GW-TR004A4



1.  : Press this button to turn the fan off .
2.  : Low speed
3.  : Medium speed
4.  : Medium high speed
5.  : High speed
6.  : Press this button to turn on/off the light
7.  : Long press this button to turn the light from bright to dark
8.  : Long press this button to turn the light from dark to bright

5) MODEL:GW-TR004A5



1.  : Press this button to turn the fan off .
2.  : Low speed
3.  : Medium speed
4.  : Medium high speed
5.  : High speed

When pressing remote button, the LED indicator would be on. If you press remote button and LED indicator would not be on, you should change new DC1.5V*2pcs battery.

