



Quick User Guide

General Information

The WTS700 is a wireless Touchscreen that allows you to perform system arming and disarming functions, as well as to monitor the status of your security system.

Navigating Menus

System Status is displayed at the top of each screen and the time and date are displayed at the bottom of the Security Screen. The Security Screen displays the system status and selection "icons". The displayed pages and options may vary slightly depending upon the devices and services that are installed in or connected to the system.



Home Screen

Function Icons

Selection	Icon	Function
Arm Away		Used to Arm the system in Away mode (displayed on both Home Screen pages).
Arm Stay		Used to Arm the system in Stay mode (displayed on both Home Screen pages).
Arm Custom		Used to Arm the system in Custom mode (displayed on both Home Screen pages).
System		Provides information about system status.
Video		Provides access to Video cameras.
Automation		Provides access to Home Automation features.
Zones		Provides access to Zone information and options.
Tools		Provides access to User Programming Menus (Master User Code required for access).
Voice Command		Provides access to Voice Command feature. (Refer to the full User Guide for information regarding this feature.)
WiFi Config		Provides access to Wi-Fi Configuration feature. (Refer to the full User Guide for additional information regarding this feature.)
Next/Back		Used to advance to next screen OR return to previous screen
Panic		Provides access to Panic functions.
Home		Provides access to Home screen.

Panic Icons

Selection	Icon	Function
Fire		Alerts the monitoring company that a fire condition exists. Temporal (pulsing) sound. (Displays zone 995)
Police		Alerts the monitoring company that a police emergency exists. (Displays zone 999, default is silent)
Personal		If programmed, alerts the monitoring company to other types of emergency. Steady alarm sound at keypad(s). (Displays zone 996)

Arm the System

1		Select arming mode. Arm Away (when you're out) OR Arm Stay (when you'll be home) OR Arm Custom (bypass selected zones)
2		Enter user code. <ul style="list-style-type: none"> System arms in selected mode Exit Delay countdown begins Keypad beeps begin, if enabled (Silent Exit mutes countdown beeps)

Disarm the System

1		Press Disarm icon.
2		Enter user code. <ul style="list-style-type: none"> System disarms Entry Delay beeps stop (if beeps enabled)

Configure Wi-Fi

Connect the control to your local network router.

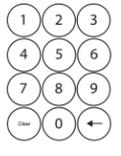
1		Select the WiFi Config icon.
2		Select from the following options: Scan for Network (to automatically display available networks) Manually Connect to the Network (Manually connect to a WiFi network) WPS (connect to a network via Wi-Fi Protected Setup) Note : This option requires a WPS capable router.
3a	Scan for Network	a. Select the desired network. b. Enter the required information. c. Select OK
3b	Manually Connect to the Network	a. Enter the required information. b. Select OK
3c	WPS	Follow the prompts.

Panic Alarms

 
See your installer for types of Panic alarms programmed for your system.

Panic		Select the Panic icon. Then select the desired panic icon to activate that panic alarm.
-------	--	--

Assign User Codes

 
1	 Tools	Select the Tools icon.
2		Enter Master User code.
3	 Users	Select Users icon.
4	Master Guest Duress Add New	To assign a Master, Guest, or Duress code, press the desired option then press Edit . To assign a regular user code, press Add New .
5	Name Z-Wave Lock User Code	Select Name to assign a personal name to this user. Follow the prompts. If desired, select Z-Wave Lock Control to set whether entering this code at the Z-Wave door lock will disarm the system. Follow the prompts. Select User Code to assign a 4-digit code to this user.
6		Assign 4-digit code and select Save .

Bypass Zones

1		Press Zones icon.
2		Select zones to bypass from list.
3	BYPASS	Select BYPASS .
4		Enter user code.
5		Bypassed zones appear in list with  icon.
6		Arm the system as usual.

Activate Automation Devices (Z-Wave)

 
Z-Wave device (for Lights, Locks, Thermostats and Garage Doors), inclusion and exclusion is via the ADC and/or ADT Pulse app. Refer to the systems User Guide for additional information.

1	 Scenes	Select the Scenes icon.
2		Select type of device.
3		Select a specific device from the list.
4	Select Desired Action	Select the desired action for that device. Actions vary based on the device selected.

Voice Command

Voice Command offers control of Z-Wave devices and Video functions by speaking in plain language. User-selected **trigger phrases** spoken near the Controller alert the system to listen for further instructions. **Refer to the system's User Guide for additional information regarding this feature.**

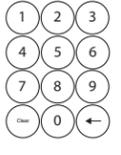
View Cameras (if installed)

1	 Video	Select the Video icon.
2		Scan for cameras.
3		Select up top 4 cameras.
4	Display	Select Display to view video from selected cameras.
5		Use zoom in, zoom out, and pan & tilt controls.
6	Scan	Select Scan to list newly-installed cameras

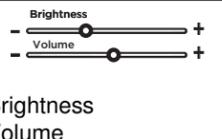
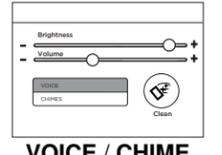
Test the System

Disarm the system and close all protected windows and doors.

NOTE: Alarm messages are NOT sent to your alarm monitoring company during these tests.

1	 Tools	Select the Tools icon.
2		Enter the Master user code
3	 Advanced	Select Advanced icon, then select Walk Test
4	Trigger Zones	Trigger (open and close) all zones. Listen for three beeps from the controller when each zone is triggered
5	Exit Test mode	When testing is completed, press the Home button on the controller and enter the Master User Code if prompted.

Settings

1	 Settings	Select the Settings icon.
2	 Brightness Volume	Adjust screen brightness and Voice/Chime volume.
3	 VOICE / CHIME	Select VOICE or CHIME to mute voice announcements and/or chime sounds if desired (highlighted [blue] button indicates active).
4	 Clean	Select Clean icon before cleaning the screen; use a damp, soft cloth while screen is disabled for 15 seconds.

FOR MORE DETAILED INFORMATION

These instructions provide a brief overview of common system functions. For full details of all user functions, please see the system's User Guide located online at: <https://www.adt.com/help/faq/system-user-guides> (see ADT7AIO User Guide P/N 800-24122 or higher).

Refer to Installation Instructions PN 800-24298 for more detailed information.

Warning – 5G Band 5150-5250MHz is only for indoor use.



ADT Security Services
1501 Yamato Road
Boca Raton, FL 33431
© 2018 ADT Security Services

