

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001
Writer	R & D Engineer		R & D Director		
Vera					

COVER:

**Office Wireless Keyboard Combo
with Wireless Optical Mouse**

(Smart Link)

User's Quick Guide

© 2006 All Rights Reserved. The copyright is the property of its respective owners.

Federal Communications Commission (FCC) requirements, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes of modifications not expressly approved by the grantee of this

Vera Tsai
5/2/2006 11:36 AM

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

device could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CE Declaration Of Conformity

Hereby, the manufacturer, declares that this Office Wireless Keyboard Combo is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Essential requirements - Article 3

Protection requirements for health and safety - Article 3.1a

--Testing for electric safety according to EN 60950 has been conducted. These are considered relevant and sufficient.

Protection requirements for electromagnetic compatibility -Article 3.1b

--Testing for electromagnetic compatibility according to EN 301 489-1 and EN 301 489-03 has been conducted. These are considered relevant and sufficient.

Effective use of the radio spectrum -Article 3.2

--Testing for radio test suites according to EN 300 220-3 has been conducted. These are considered relevant and sufficient.

Congratulations on your purchase of the Office Wireless

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

Keyboard Combo featured with the unique Smart Link function. Please carefully read the User's Quick Guide to learn about the installation and the powerful functions of your new Office Wireless Keyboard and Wireless Optical Mouse.

Package Contents

- ✓ Office Wireless Keyboard
- ✓ Wireless Optical Mouse
- ✓ Receiver
- ✓ USB to PS/2 Adapter (Option)
- ✓ Driver CD-ROM
- ✓ User's Quick Guide
- ✓ Keyboard Battery: Alkaline AA * 2
- ✓ Mouse Battery: Alkaline AA * 2

CAUTION:

- *The batteries may explode or leak if they are improperly recharged, inserted, disposed in fire or mixed with used or different battery types.*
- *Risk of explosion will be caused if battery is replaced by an incorrect type.*
- *Dispose of used batteries according to the instructions.*
- *It's important that batteries should be recycled in a proper way for green environment.*

Install Hardware

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

Note:

- ***If you are running Windows 98 and plug the connector into the computer, you may find a pop-up window that requires to insert the Windows 98 CD-ROM. Please follow the window instruction to install the required driver or set the driver path as "Windows\system" or the other path that the driver located.***

- Install the Receiver with PS/2 Connectors
 - 1) Please turn off your PC.
 - 2) Plug the mouse PS/2 connector on the receiver into the PS/2 mouse port of the PC.
 - 3) Plug the keyboard PS/2 connector on the receiver into the PS/2 keyboard port of the PC.
- Install the Receiver with USB Connector
 - 1) You may turn on the computer.
 - 2) Plug the USB connector on the receiver into the USB port of the computer.
- Install the Receiver with UP Connectors
 - 1) Please turn off the computer.
 - 2) Plug the mouse PS/2 connector on the receiver into the PS/2 mouse port of the PC.
 - 3) Connect the USB-to-PS/2 adapter with the USB connector of the receiver. Plug the adapter into the PS/2 keyboard port of the computer.

- Select the Keyboard Channel

Note:

- ***Please skip this section if the keyboard is the one-channel version.***

- 1) The two-channel switch is located on the back of the keyboard.

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

Select Channel "1" or "2".

2) Put the batteries into the battery case.

- Select the Mouse Channel

Note:

- ***Please skip this section if the mouse is the one-channel version.***

1) The two-channel switch is located at the back of the mouse.

Select Channel "1" or "2".

2) Put the batteries into the battery case.

- Link the Wireless Keyboard and the Wireless Mouse with the Receiver

Note:

- ***Please link the keyboard and the mouse within the effective distance.***
- ***The linkage period is 15 seconds. Once press the receiver's Link Button, please complete the keyboard or the mouse linkage process within the linkage period.***

1) Please turn on your PC.

2) Press the ID Link Button on the receiver. There are 15 seconds for the keyboard linkage.

3) Press the ID Link Button of the keyboard.

4) Press again the ID Link Button on the receiver. There are 15 seconds for the mouse linkage.

5) Press the ID Link Button of the mouse.

6) The keyboard and the mouse are linked with the receiver.

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

- 7) The keyboard mouse set designs with the unique Smart Link function. Once the linkage process is complete, you don't have to re-link the keyboard and the mouse even if you change batteries or restart the computer.
- 8) If the keyboard or the mouse does not link with the receiver, please repeat Step 2~3 or Step 4~5.
- 9) If the selected channel is interfered by other wireless-mouse or keyboard users nearby, please change the Link ID by re-linkage immediately.
- 10) There are 256 changeable IDs for single channel.

Install Mouse Driver

Note:

- **The driver supports Windows 98/ 2000/ ME/XP.**
- **The CD-ROM contents the drivers of the keyboard and the mouse. Please select to install the mouse driver at the pop-up window.**
- **When you change the interface port, please reinstall the driver.**

- 1) Remove any existing mouse drivers completely.
- 2) Insert the driver CD-ROM to your computer.
- 3) Please open the folder "Mouse" and double click the file "Setup.exe" to complete the driver installation.
- 4) Restart the computer.
- 5) A Mouse Setting icon will appear on the task bar of Windows after you successfully finish the installation.
- 6) Double click the Mouse Setting icon and then follow the instructions of the selection items to set the mouse properties.

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001


Introduce 4-way Navigating Function

The scroll wheel is designed with the 4-way navigating function. You may easily view whole documents through the scroll wheel controlling up, down, left and right.

Install Office Keyboard Driver

Notice:

 - ***The driver supports Windows 98/ 2000/ ME/ XP.***
 - ***When you change the interface port, please reinstall the driver.***
-
- 1) Remove any existing keyboard drivers completely.
 - 2) Insert the driver CD-ROM to your computer.
 - 3) Please open the folder "Keyboard" and double click the file "Setup.exe" to complete the driver installation.
 - 4) Restart the computer. A Keyboard Setting icon will appear on the task bar of Windows.
 - 5) Double click the icon to set the programmable hot keys.
 - 6) There are 3 icons shown on the taskbar while "Scroll Lock", "Caps Lock" and "Num Lock" are enabled.











The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

Introduction of Hot Keys & Scroll Wheel

16 Hot Keys and One Scroll Wheel: There are two hot key areas located at both sides of the keyboard to control Office, PC and media functions. The scroll wheel also is a convenient design for navigating.


 





- 8 Multimedia Hot Keys: Locate at the right corner to freely enjoy the total control of multimedia functions.

	Media Player	Play CD and media content.
	Pre Track	Switch to the previous media track. Press once for each preceding track
	Next Track	Switch to the next media track. Press once for each subsequent track.
	Play/Pause	Play or Pause media. Once paused, press this key again to resume playing.
	Stop	Stop playing media
	Mute	Turn off the sound. Press again to turn the sound back on.
	Volume up	Increase the volume. Hold down to increase the volume more quickly.
	Volume down	Decrease the volume. Hold down to decrease the volume more quickly.

- 8 PC, Web and Internet Hot Keys: Locate at the left side of the keyboard for controlling PC, surfing Web and checking E-mail in a second.
 - Press **Log Off** to close all the programs, to disconnect the computer from network and to prepare the computer for the next user.
 - Press **Function Lock** to use the standard F functional keys.

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001


	PC Sleep	Put the system into sleep mode if the PC supports power management and has it enabled. The user can put the computer to sleep at the press of any button, protecting data and saving energy. If power management is not enabled, this key will not work.
	Log Off	Open the Log Off Windows dialog box. Logging off closes all of programs, disconnects the computer from the network and prepares the computer to be used by someone else.
F	Function Lock	Office Lock Key Switch the function from the normal function keys (LED off) to the enhanced function keys (LED on). * The LED indicator is located on the receiver for the wireless Office keyboard version.
	IE Home	Start the default Web browser or go to the Home Web page. If the Web browser is already activated it opens the Home Web page. You can reassign the Home key to start another Web browser, another Home Web page or another application.
	E-mail	Start the default e-mail program. If you are not sure what the default e-mail program is, press this key to find out. You can reassign the Email key to start another e-mail program or another application.
	My Computer	Open My Computer. My computer shows the contents of your floppy disk, hard disk, CD-ROM drive and network drives. You can also search for and open files and folders, and gain access to options in Control Panel to modify the computer's settings.
	Web Search	Open the Internet Explorer Search pane
	Open Control Panel	Open Control Panel. You can manage the computer system under Control Panel such as Mouse, Keyboard, Internet, Add/ Delete Software and Hardware, Monitor, etc.

- Scroll Wheel: Navigating documents without any hesitation.








The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

Note: The scroll wheel requires a driver support under any Windows operation system.




 
 


	Scroll Wheel	Move around in a scrollable document as if you were using the scroll arrows or a mouse wheel, but without taking your hand off the keyboard.
---	--------------	--

- 14 Function Keys: Directly provided the assigned or usual applications.


Function Key Descriptions				
	Help	F1	Open the Help file (if available) for the active window	
	New	F2	Create a new document in programs that support the command. <i>* Notice for the keyboard versions of Brazil, Portugal and Spain: The function key "New" is defined as "Bold".</i>	
	Open	F3	Open a document in programs that support this command.	
	Save	F4	Save the file in the active window.	
	Replace	F5	Search for and replace the specified text and formatting.	
	Spell	F6	Star the spell-checking program in the active document if the document's program provides this feature.	
	Undo	F7	Cancel the previous action.	

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

	Redo	F8	Cancel the previous undo. * The function key "Redo" applied under Excel: "Redo" can be enabled after you highlight and copy the content of a cell.
	Mark	F9	Mark the selected item, and use "←" or "→" to mark the text. If "Mark" is located at "Shift" keycap, press "Mark" and arrow key together to mark.
	Copy	F10	Copy the selected item.
	Cut	F11	Cut out the selected item.
	Paste	F12	Paste the previously cut out or copied item at the cursor position.
	Print	Print Screen	Print the document in the active window.
	Euro Sign	Num Key	Directly access to the Euro sign.

- Low-battery Indicator: Specially designed for low-battery notice.

	Low-battery Indicator	The LED Low-battery indicator shows the battery status. The LED will light while the batteries are low.
---	-----------------------	---

Notification

- This equipment is intended for use in the following countries.
28 European Countries:
Austria, Belgium, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Hungary, Germany, Greece, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal,

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

Slovak Republic, Slovenia, Spain, Sweden, Switzerland and United Kingdom.

- The optical technology can precisely detect the mouse motion on most surfaces. Please avoid using the optical mouse on any reflective, transparent, metallic or complex-pattern surface.
- The scroll wheel or the LED indicator on the mouse will light while the mouse is low battery. Please change the batteries immediately.
- Press any button to wake up the keyboard or the mouse while they are in the sleeping mode.
- The low-battery LED indicator will light while the keyboard is in the status of low battery and a low-battery icon will appear on the taskbar of Windows. Please change the batteries immediately.
- If the product is malfunction, please change the batteries or move the receiver away from the computer and the monitor.
- If the keyboard or the mouse does not work properly, please make sure the PS/2 or the USB port of the computer is valid. Besides, check the connector or the cable of the receiver if there is broken or tangled.
- Please avoid using the keyboard and the mouse under direct sunlight, extreme hot, cold or dusty environment.

Office Keyboard Patents

- Internal Hot Keys: China ZL97243196.9, Germany 29706281.6, USA and Taiwan Patent Pending
- Auxiliary device for editing document: China ZL01219701.7, USA 09/838223 Pending, Thailand 0203000218 Pending, Germany 20106926.1, Taiwan, UK and Japan Patent Pending
- Edit & Clipboard Document Auxiliary Device for Software: China 02116144.5 Pending, 02231501.2 Pending, Taiwan Patent Pending
- Office Purpose Keyboard: Germany 20113043.2, USA 09/917690 Pending, UK 0127691.4 Pending, China ZL01227259.0, Taiwan 9020598 Pending, Japan Pending
- Multimedia Pointing Device: Germany 20119955.5 Pending, USA 90/860862 Pending,

Vera Tsai
5/2/2006 11:36 AM

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
April 25, 2006	K66-rf optical c424	User's Guide (Kai)	Omar	13	001

Thailand 0203000217 Pending, China ZL01207586.8, Taiwan and Japan Pending

- Euro Sign: Germany 20202657.4 Pending, China 01279547.X Pending, USA, Taiwan and Japan Pending

Wireless Mouse Patents

- Wireless Mouse and Stand Body: Taiwan 078386, China 01360042.7, Germany 401 06 575.8, and USA Pending
- Improved Structure of Wireless Mouse System: Taiwan 89222812, China 01100419.3, Germany 201 12 178.6 and USA Pending
- Wireless Mouse Recharge System: Taiwan 90104125, China 01109443.5, Germany 20112177.8, USA Pending
- Multiple Recharge System: Taiwan 90115187, China 01120050.2, Germany 20201110.0, USA Pending