

#### LOW BATTERY INDICATION

LED will flash to indicate that Low Battery Supervision has been sent and the battery should be replaced.

#### WARRANTY

Secure Wireless offers a Lifetime Warranty on this product. Secure Wireless agrees to repair or replace this product at no cost to the user. For return authorization please contact: Secure Wireless  
1185 Park Center Drive, Suite A/B  
Vista, CA 92083  
(760) 727-0601

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by Secure Wireless could void user's authority to operate the equipment.

### Secure Wireless

4 Button Wireless Transmitter  
For use with Part #: EV-F319/EV-F345/EV-F433  
USER MANUAL



### **I. Programming the Remote into the Alarm System**

Refer to the programming guide that came with your alarm system for programming a wireless device (KEYFOB) into the security system.

### **II. Changing Panic Operation to Delay Mode or Instant Mode**

**Note:** To use this feature you must have programmed button 4 into the alarm panel as "PANIC". The 3 second delay is the factory default.

#### **SETTING PANIC BUTTON FOR DELAY TRANSMISSION MODE**

*(By selecting this feature, the user must hold down panic button for 3 seconds before transmission is sent.)*

1. Press all 4 button at the same time until the LED begins to flash. *(This will take approximately 3 seconds before LED flashes.)*
2. Release all 4 buttons
3. Press Button 2 (TOP RIGHT BUTTON)
4. LED should stop flashing

#### **SETTING PANIC BUTTON INTO INSTANT TRANSMISSION MODE**

1. Press all 4 button at the same time until the LED begins to flash. *(This will take approximately 3 seconds before LED flashes.)*
2. Release all 4 buttons
3. Press Button 1 (TOP LEFT BUTTON)
4. LED should stop flashing