

4001763

Portable Speaker

USER GUIDE

To ensure correct operation and avoid damage, please read this user manual carefully before using this product.


Features:

- 2.0CH portable Bluetooth fabric speaker
- Water resistant IPX6, perfect for beach, poolside, boat and more outdoor activities
- TWS function, achieve true wireless playing with double enhanced stereo sound
- Optimized voice assistant control
- Hands-free Mic for easy picking up the call
- RGB Lighting
- With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device
- USB support
- FM radio
- Line-in function, suitable for PC, MID, TV and other audio devices
- Built-in lithium rechargeable battery 3600mAh
- Shoulder strap, easy to take out

Package Contents:

- 1xPortable Bluetooth speaker
- 1xType-C Charging cable
- 1xAudio cable
- 1xUser manual
- 1xShoulder strap

Product Details:

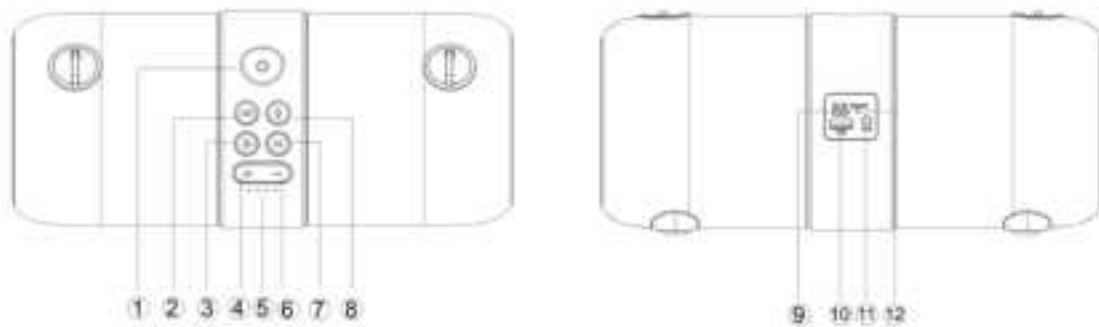

- | | | | |
|---|------------------------|--------------|---------------------|
| 1. Power On/Off | 2.TWS Button | 3.Play/Pause | 4.Forward/Volume Up |
| 5.Battery Indicator | 6.Backward/Volume Down | | |
| 7.Mode Button (turn the modes among Bluetooth, USB disk, FM radio and AUX-IN) | | | |
| 8.Voice Assistant Button | 9.Type-C Charging Jack | 10.USB Port | |
| 11.AUX Port | 12.RESET Jack | | |

Power On/Off

Long-press the Power button to turn the speaker on, short-press the Power button to turn the speaker off.

Bluetooth:

- Turn the power button to “ON”, the speaker enter Bluetooth mode automatically.
- Activate *Bluetooth* of mobile phone and search for device name “4001763” then connect it.
- Play the music from your mobile phone and enjoy.
- Long-press Forward or Backward button on the device or operate on Mobile phone to select songs you like.
- Short-press Forward or Backward button to adjust volume up and down. Or adjust the mobile phones’ volume.
- Short-press Play/Pause button on the device or operate on Mobile phones to play/pause the music.
- Long-press TWS button to disconnect Bluetooth connection, then make Bluetooth connection with other mobile phone.

TWS Function:

- Turn on two identical speakers you want to pair, both under BT mode. Only need to set one of the two units.
- Short-press the TWS button to pair, a tone will be audible and TWS button will keep lighting after paired successfully.
- Make Bluetooth connection with your mobile phone to play music by the two paired Speakers.
- Short-press the “TWS” button again to exit the TWS connection.

Notes:

- Under TWS mode and Bluetooth connected, when user long-press the TWS button, both the TWS connection and Bluetooth connection will be disconnected.

- When Bluetooth connected, if user short-press TWS button to make TWS connection, the Bluetooth connection will be disconnected for a short time, after TWS paired, the Bluetooth will be connected again.

Playing music from USB disk:

- Turn the Power button to “ON”.
- Insert USB flash disk into slot, the speaker will play the stored music automatically.
- Long-press Forward or Backward button to select songs you like, short-press to adjust the volume up and down.
- Short-press Play/Pause to play or pause.

Notes: Under any playing mode, when you insert a USB disk to the speaker, it will switch to play the USB disk.

FM Radio:

- Turn the power button to “ON”, short-press the “MODE” button to enter radio state.
- Long-press “Play/Pause” button to auto search the FM Channel and store it automatically. Short-press “Play/Pause” button to mute the speaker.
- Long-press Forward or Backward button to change the stored FM channel, short-press to adjust the volume up and down.

AUX-IN:

- For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device’s “Line Out” to the “Aux In” of this device, then enjoy...
- Under any playing mode, when you use the audio cable to connect the device, it will auto-switch to the AUX mode.
- When using an external device, all functions can be controlled by the external device.

RGB Lighting

When the speaker is turned on, the RGB light is on automatically, user can long-press the Mode button to switch the RGB light on and off.

Activating Voice Assistant:

- Make Bluetooth connection with your mobile phone.
- Short-press Voice Assistant button to activate voice assistant.

Hands-free call:

- Under Bluetooth connection status, if there is an incoming call, user can short-press Play/Pause button to accept the call or long-press Play/Pause button to reject the call.
- During the call, user can long-press Play/Pause button to switch to talking on the phone.

- Short-press Play/Pause button or operate on mobile phone to end the call.

Reset Functionality:

If the speaker does not turn off or respond, user can short-press the RESET jack with a small round pin to reset the speaker.

More Remarks:

- Default volume is at 50% status of max volume.
- Play time may vary depending on volume level and music style.

How to charge:

- The charger is not included in the package, please charge the speaker via a standard 5V/1-2A charger or via a PC.
- Charge time should be 4-6 hours. After full charging, the 4 LEDs keep lighting.
- When battery voltage is low, the speaker will prompt for recharging.
- The unit does not have power bank function, it is forbidden to charge other device via this unit or to connect other device via the USB port.
- To protect the battery, please do not use the speaker while it is charging.

Warning:

- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to rain or moisture environment.
- Please do not disassemble, repair or modify this product by yourself without authorization.
- When cleaning this product, please use a soft cloth or with little water if needed, please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.
- The product is with built-in lithium battery, to avoid dangers, please do not discard or put it in the fire.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.