



Model: YG-2200

Fog Machine

User Manual

Thank you for choosing Theefun! Please read this user manual carefully and keep it on hand for future reference.



Description

This 450W Theefun Fog Machine produces dense, unscented, and long-lasting fog. It's perfect for parties, weddings, concerts, theater productions, bars, and everything in between. Take the festivities to the next level!

Caution

- This product is for indoor use only.
- This product is NOT waterproof. If you notice moisture on its surface, Unplug the power cord, and then wipe it off immediately.
- Do not tilt the fog machine or place it upside down. Place the fog machine on flat surfaces only.
- Do not place the fog machine on carpets, rugs, wood floors, or other flammable materials.
- To prevent damage, check the fog fluid level frequently when the machine is in use.
- The machine may emit a burning odor during the first use. This smell will dissipate after approximately 10 minutes.
- Keep objects at least 3 feet away from the fog nozzle.
- Use extreme caution while this machine is in use. The fog nozzle can reach temperatures between 104 and 176°F.
- Aim the fog nozzle away from people and flammable objects. Do not spray fog to people directly and far away from fire or other heat resources.
- Only pour professional fog fluid into the tank. Other liquids like oil and gas are extremely flammable and will create a safety hazard.

Specifications

- **Input** : AC 110-120V 60Hz
- **Power**: 450W
- **Tank Capacity**: 300ml (0.079 gal)
- **Output**: 2500 cfm
- **Fluid Consumption**: 7.5 ml/min
- **Warm up Time**: **About 45s**
- **Output Distance**: 2-3m/6.56-9.84ft
- **Remote Distance**: 10m/32.8ft
- **Dimension**: 26.6 X 14.6 X 13.5cm/10.47 X 5.75 X 5.31in(L*W*H)
- **Weight**: 1.8kg

Package Contents

1 x Fog Machine
1 x Remote Controller
1 x Handle
2 x Screw
2 x Gasket
1 x User Manual

Operational Instruction

Spraying Fog

Step1: Pour in fog juice and turn on the power.

Step2: The first time you turn on the machine, the warm-up time is about 3 mins and afterwards will shorten to about 45s.

Step3: Press the "Fog" button on the remote. The machine will produce fog for 30s, then it will take another 45s to heat up before spraying again.

Step4: After preheating again, the machine will continue to blow out fog. Pressing the "Fog" button again will make it stop.

LED Lights

Use the included remote to operate the LED lights.

- **Red, Green, or Blue**

- Press the R button for red light, the G button for green light, and the B button for blue light. Press the same button again to turn off the light (ex. Press R for red light, press R again to turn off the light).

- **Yellow**

- Press the R button and then the G button for yellow light. Press the G button again to switch to red light.

- **Purple**

- Press the R button and then the B button for purple light. Press the B button again to switch to red light.

- **Cyan**

- Press the G button and then the B button for cyan light. Press the B button again to switch to green light.

- **White**

- Press the R button, the G button, and the B button for white light.

- **Alternating Colors (Slow)**

- Press and hold the R button for 3 seconds for slow alternation. Press the R button again to pause the display. Double press the R button to turn off the lights.

- **Alternating Colors (Fast)**

- Press and hold the G button for 3 seconds for fast alternation. Press the G button again to pause the display. Double press the G button to turn off the lights.

- **White Color strobe**

- Press and hold the B button for 3 seconds for white color strobe. Press the B button again to pause the display. Double press the B button to turn off the lights.

Cleaning and Maintenance

- Clean the refractory pipe after each use. We recommend an 80% water and 20% vinegar solution.
- Use a dry cloth to wipe down the machine.
- Refill the fog fluid.
- Store the machine in a clean, dry place.



- **G**
Press it for green light and again to turn off the light. Press and hold it for 3s for fast color alternation.
- **B**
Press it for blue light and again to turn off the light. Press and hold it for 3s for white color strobe.
- **R**
Press it once of red light and again to turn off the light. Press and hold it for 3s for slow color alternation.
- **FOG**
Press it to activate fog spraying and again to stop fog spraying.



WARNING:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

| | |
|--|------------|
| 名称/型号/SKU | YG-2200 |
| W07-0634A-41-Theefun 6灯烟雾机YG-2200美规- 英文说明书-不含FCC警示语 转曲 | |
| 品牌 | Theefun |
| 规格 | 140*88mm |
| 材质 | |
| 颜色 | 黑白 |
| 日期 | 2022 02 11 |
| 备注 | 骑马钉 |
| 设计师 | 邱嘉雯（余联智修改） |
| 主管确认 | |
| 领导确认 | |
| 采购确认 | |

此页备注信息

不作印刷



THOUSANDSHORES

千岸科技