

## WELCOME

Thank you for choosing the up-to-date CDM-8300, our new model, developed by top researchers to support the IS-95C system through Qualcomm-manufactured MSM5100 (Handset based GPS) chips and CDMA technologies. This product allows for high speed communication services, such as web browsing, data & fax services, GUI animation menu, and so on.

Among its many advanced features, the T9 input mode makes it much easier to enter letters. In addition, the VR (Voice Recognition) makes it more user friendly, with proven technologies in detail as follows:

- Full graphic display of 5 text input line and 1 icon line with variable font size.
- High capacity batteries allow for long talk time and 330 hours of standby time.
- Easy to dial through the VR feature.
- Easy to enter letters through the T9 text input mode.
- Multilingual (English and Spanish available)
- Enhanced for web browsing & data services (i.e. ; wireless internet access, wireless fax send/receive, Phone.com, Up browser)
- GUI & Animation display compliant with IS-95C.
- 4-Gray large LCD.
- Navigation key and 23 keys aligned for more convenience.
- Sophisticated features of speaker phone, USB, and voice recognition.
- Handset-based GPS feature.
- Additional services of SMS and Web browsing on top of authentication, call forwarding, call transfer, call waiting.

### IMPORTANT INFORMATION

This CDM-8300 user guide contains very important information about how to handle and use the product. So please read this manual thoroughly, pay attention to the warranty on the back page and be alert to the exclusions and limitations of your warranty, which are related with the unauthorized use of components.

## TABLE OF CONTENTS

<b>CHAPTER 1. BEFORE USING YOUR PHONE .....</b>	<b>5</b>
INSIDE THE PACKAGE .....	6
HANDSET DESCRIPTION .....	7
THE FUNCTION KEYS .....	8
DISPLAY INDICATORS .....	9
BATTERY USAGE .....	10
BATTERY INSTALLATION .....	10
BATTERY REMOVAL .....	10
BATTERY CHARGING .....	11
POWER CONNECTION .....	11
CHARGING THE BATTERY WITH THE HANDSET .....	11
CHARGING THE BATTERY ONLY .....	12
BATTERY LIFE (FOR NEW BATTERY) .....	12
BATTERY HANDLING INFORMATION .....	13
DOs .....	13
DON'Ts .....	13
<b>CHAPTER 2. BASIC OPERATION .....</b>	<b>15</b>
TURNING THE PHONE ON / OFF .....	16
TURNING THE PHONE ON .....	16
TURNING THE PHONE OFF .....	16
ACCESSING THE MENU .....	17
MENU SUMMARY .....	18
BASIC FUNCTIONS .....	20
MAKING A CALL .....	20
SPEAKER PHONE .....	21
PAUSE FEATURE .....	21
ANSWERING A CALL .....	22
CALLER ID FUNCTION .....	22
CALL WAITING FUNCTION .....	23
ANSWERING MACHINE DISPLAY .....	23
ADJUSTING VOLUME .....	24
ETIQUETTE .....	24
LOCK .....	24
DURING A CALL .....	25
MUTE(UNMUTE) .....	25
SILENT(QUIT) .....	25
SEND MY PHONE # .....	25
MY PROFILE .....	26
VOICE PRIVACY .....	26
LOCATION .....	26
MAKING AN EMERGENCY CALL .....	27
E911 IN LOCK MODE .....	27
E911 USING ANY AVAILABLE SYSTEM .....	27
<b>CHAPTER 3. MEMORY FUNCTIONS .....</b>	<b>29</b>
STORING A PHONE NUMBER .....	30
ENTERING LETTERS NUMBERS & CHARACTERS .....	31
STANDARD INPUT MODE .....	32
T9 INPUT MODE .....	33
NUMERIC MODE .....	34
SYMBOL MODE .....	35
MAKING A CALL THROUGH THE PHONEBOOK .....	36
SPEED DIALING .....	36

## TABLE OF CONTENTS

<b>CHAPTER 4. MENU FUNCTION.....</b>	<b>37</b>
CALL HISTORY .....	38
OUTGOING CALLS .....	38
INCOMING CALLS .....	39
MISSED CALLS .....	40
CALL TIMES.....	41
LAST CALL.....	41
ALL CALLS.....	41
HOME CALLS.....	42
ROAM CALLS.....	42
ACCUMALATED CALLS.....	42
PHONEBOOK.....	43
FIND .....	43
BY GROUP.....	43
BY NAME.....	44
BY NUMBER.....	45
EDIT PHONEBOOK .....	46
ADD NEW ENTRY.....	46
EDIT EXISTING ENTRY.....	46
EDIT GROUP.....	47
ADD NEW GROUP.....	47
CHANGE GROUP NAME.....	47
CHANGE GROUP BELL.....	48
CLEAR GROUP.....	48
SPEED DIAL.....	49
MY PROFILE.....	49
SCHEDULE.....	50
EVENT.....	50
ALARM.....	51
ROAMING .....	52
SET MODE.....	52
FORCE ANALOG .....	52
NAM SETTING .....	52
AUTO NAM.....	52
CHANGE NAM.....	53
CALL PROMPT.....	53
PRL ID.....	53
SETTING .....	54
SOUNDS.....	54
RINGER TYPE.....	54
RINGER MODE.....	54
VOLUME.....	55
ALERT .....	56
ROAM RINGER.....	59
TONE LENGTH .....	59
DISPLAY.....	60
ANIMATION SETTING .....	60
MAIN DISPLAY SETTING .....	61
LCD SETTING .....	62
SECURITY.....	63
RESTRICT .....	63
SPECIAL#S.....	67
CLEAR PHONEBOOK.....	68
RESET PHONE.....	68
CHANGE PASSWORD.....	69
OTHERS .....	70
ANSWER MODE.....	70

## TABLE OF CONTENTS

AUTO RETRY .....	70
AUTO ANSWER.....	71
VOICE PRIVACY.....	71
KEY GUARD.....	72
LANGUAGE.....	72
WEB IDLE TIME.....	72
S/W VERSION .....	73
UP PROXY IP .....	73
TOOLS.....	74
CALCULATOR.....	74
WORLD CLOCK .....	74
STOPWATCH.....	75
DATA SVC.....	76
CONNECTION.....	76
LOCATION .....	77
SETTING .....	77

<b>CHAPTER 5. VOICE SERVICE.....</b>	<b>79</b>
VR MODE .....	80
NAME.....	80
DIAL.....	81
REDIAL.....	82
VOICE MEMO .....	83
PHONEBOOK.....	84
CANCEL.....	84
VS MENU .....	85
VOICE MEMO .....	85
CALL ANSWER.....	86
CALL ANSWER.....	86
VOICE COMMAND.....	87
YES/NO.....	87
WAKE UP.....	88
TOP LEVEL .....	88
DIGIT DIAL .....	89
VOICE DIAL.....	90
LIST.....	90
ADD .....	91
CLEAR ALL .....	91
VOICE SETTING .....	92
UNTRAIN ALL.....	92
PROMPT MODE.....	92
DIGIT MODE.....	93
HFK MODE.....	93

<b>CHAPTER 6. SMS.....</b>	<b>95</b>
WHEN A NEW MESSAGE ARRIVES .....	96
VOICE MAIL .....	96
SEND NEW.....	97
SEND.....	97
EDIT RECIPIENT.....	97
EDIT MESSAGE.....	98
PRIORITY.....	98
CALL BACK.....	98
SAVE.....	98
DELIVERY ACK.....	98

TABLE OF CONTENT

INBOX..... 99

REPLY..... 99

ERASE..... 99

FORWARD..... 100

SAVE..... 100

SAVE ADDRESS..... 100

LOCK..... 100

OUTBOX..... 101

CHECKING SENT TEXT MESSAGE..... 101

RESEND..... 101

ERASE..... 101

SEND TO..... 102

SAVE..... 102

STATE..... 102

SETTINGS..... 103

SAVE SENT MESSAGE..... 103

DEFAULT CALL BACK NUMBER..... 103

ALERT..... 103

DISPLAY DELIV.ACK..... 104

AUTO ERASE..... 104

AUTO ERASE INBOX..... 104

AUTO ERASE OUTBOX..... 104

ENTRY MODE..... 105

FILED..... 106

ERASE ALL..... 107

CHAPTER 7. WEB BROWSING .....109

START INTERNET BROWSER.....110

ACCESS THE INTERNET.....110

BROWSER MENU.....110

RELOAD.....110

HOME.....110

BOOKMARKS.....111

MARK SITE.....111

ABOUT PHONE.COM.....111

ADVANCED.....112

SHOW URL.....112

HOMEPAGE.....112

SET UP LINK.....112

OFFLINE SERVICES.....113

OUTBOX.....113

RESTART UP. BROWSER.....114

ENCRYPTION.....114

CHAPTER 8. SAFETY AND WARRANTY .....115

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES.....116

DRIVING SAFETY.....117

ELECTRONIC DEVICES.....118

OTHER SAFETY GUIDELINES.....119

PRECAUTIONS.....120

SAFETY INFORMATION FOR FCC RF EXPOSURE.....121

CAUTIONS.....121

SAR INFORMATION.....122

PROTECT YOUR WARRANTY.....124

12 MONTH LIMITED WARRANTY.....125

Chapter 1

BEFORE USING  
YOUR PHONE

This chapter provides important information about using the  
the CDM-8300 including:

- Packing List
- Handset Description
- Installing, Charging and Removing the Battery

## INSIDE THE PACKAGE

This package should include all items pictured below.  
If any are missing or different, immediately contact the retailer where you purchased the phone.



Handset



Desktop Charger



Standard Battery



User Manual

 


Handstrap


## HANDSET DESCRIPTION



## HANDSET DESCRIPTION

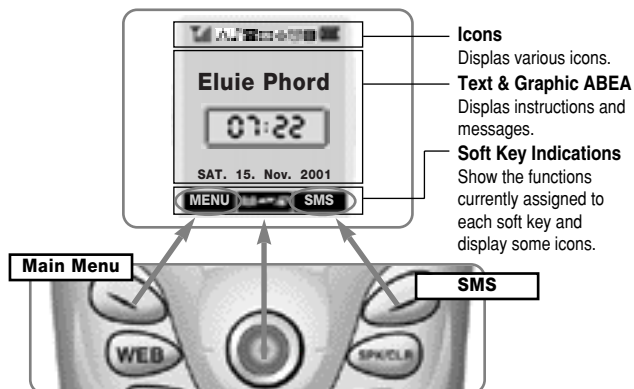

## THE FUNCTION KEYS

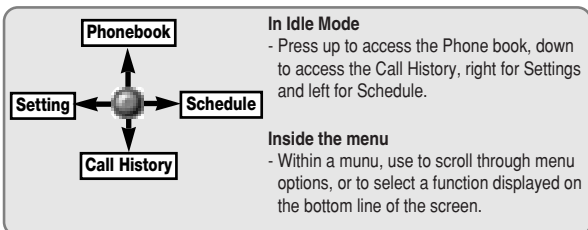 

Press to Press make or receive a call.  
Press and hold to turns to VR mode.



Press to turn the phone on/off, to terminate a call or to return to the initial page.



(Soft 1) Press to access the menu or function displayed on bottom line.



(Soft 2) Press to access a voice or text message, and access return to the previous page.



Press to Press access access internet service.



Press to clear a digit from the display or to enable the speakerphone mode.



Press and hold it to enter the Lock mode.

## HANDSET DESCRIPTION



Press and hold it to enter Lock Mode.

## DISPLAY INDICATORS

**Signal Strength**

Current signal strength – the more lines the stronger signal.

**Roaming**

Phone is out of home area.

**Service Indicator**

☎ Indicates call is in progress, ☎ indicates the phone is in standby mode, and ☎ indicates the phone cannot receive a signal from the system.

**Message**

New text or voice message.

**Digital mode**

Phone operating in digital mode.

**Battery**

Battery charging level – the more blocks the stronger the charge.

**Mute**

Phone is mute during a call.

**Silent**

Appears when Silent is selected as the ring mode.

**Emergency Call**

Blinks when an emergency call is in progress.

**Voice Memo**

New voice memo.

**Answering machine**

Phone in answering machine mode.



**911 Only** : Your location will be hidden from network & application except 911.



**Location On** : Your location is now available to the network.

**Etiquette**

Phone will vibrate when call is received.

**Schedule**

Appears when either an event or an alarm is set.

**Ring Mode**

 
Appears when a ringer is set as a ringer mode.

## BATTERY USAGE

1


### BATTERY INSTALLATION

- 1 Place the battery on the back of the handset and slide into place. 2 Push the battery down until it locks into place.

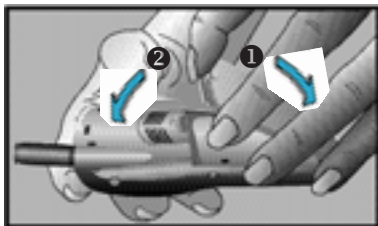

### BATTERY REMOVAL

 - 1 Pull down the release latch, lift up the battery and 2 remove the battery from the handset.

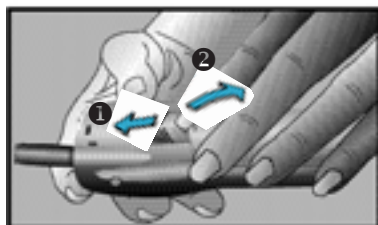


**NOTE** Securely place the battery to avoid slipping off during a call. Turn off the phone before removing the battery to avoid losing any unsaved features and messages.

## BATTERY USAGE
 
### BATTERY CHARGING

#### POWER CONNECTION

- 1 Plug the desktop charger into a standard outlet.

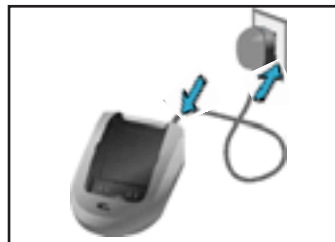

- The red LED indicates charging is in progress.
- The green LED indicates charging is completed.

**NOTE** Fully charge the battery before using – it is not charged when purchased.

#### CHARGING THE BATTERY WITH THE HANDSET

- 1 Place the handset (with battery attached) into the charger.



- NOTE**
- It is more efficient to charge the battery with the phone turned off.
  - If the red LED does not illuminate when charging, check the power connection and make sure the handset is securely in place.

## BATTERY USAGE

### CHARGING THE BATTERY ONLY

- 1 To charge the battery separately, detach it from the handset.

- The red LED indicates charging is in progress.
- The green LED indicates charging is completed.



### BATTERY LIFE (FOR NEW BATTERY)

The operating time is subject to your handset usage and configuration.

Status \ Type	PCS	CDMA	AMPS
Talk (min)	157	150	103
Stand by (hrs)	113	103	25

## BATTERY HANDLING INFORMATION

### DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F and 95°F .
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to four weeks to completely drain.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operatin time gradually gradually decreases after fully charging.
- Properly dispose of the battery according to local laws.

### DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.



MEMO

CH  
1

## Chapter 2

### BASIC OPERATION


CH  
2

This chapter addresses and explains the basic features of your phone including

- Accessing the Menu and Menu Options
- Making and Answering a Call
- Placing Emergency Calls

## TURNING THE PHONE ON / OFF

### TURNING THE PHONE ON

1 Press and hold , until the “Power On” logo appears and the tone sounds.

- To select a logo, refer to page 60 for more details. (Setting>Display>Animation setting) for more detail.
- When “Password” appears on the display enter your 4-digit password to unlock your phone.
- The default password is the last 4 digits of your phone number.

 
### TURNING THE PHONE OFF


1 Press and hold , until “Power Off” appears.

- Immediately change or recharge the battery when “Low Battery Warning Power Off” appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, data may be lost.

## ACCESSING THE MENU

Your phone can be customized via the menu. Each function can be accessed by scrolling with the Navigation key or by pressing the number that corresponds with the menu item.

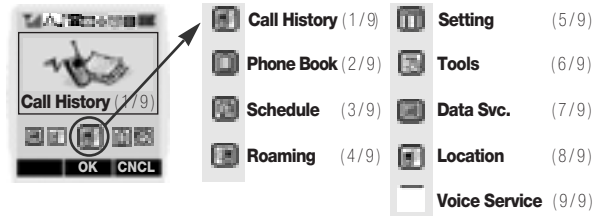



1 To access the menu in the idle mode, press .

- When the key guard is activated, press 1, 2, 3 to unlock the key guard. Please refer to page 24 for more details

2 Use the Navigation key to scroll through the menu.

- To search through the menu in numerical order, press down or to the right.

3 To return to the previous page, press . To exit the current menu and return to the idle mode, press .

4 Press the Navigation key to enter a function when its main page is displayed or press its assigned number to have a direct access to the function.

#### Hotkey

In the idle mode move the Navigation Key as follows to access these functions:

- Upward movement – Phonebook
- Downward movement – Call history
- Rightward movement – Schedule
- Leftward movement – Setting.

## MENU SUMMARY

## 1. Call History



1. Outgoing Calls
2. Incoming Calls
3. Missed Calls
4. Call Times

## 2. Phone Book



1. Find

2. Edit Phone Book
3. Edit Group

4. Speed Dial
5. My Profile
1. Event
2. Alarm

## 3. Schedule



## 4. Roaming



1. Set Mode(System)

2. Force Analog
3. NAM Setting
4. Call Prompt

## 5. Setting



5. PRL ID
1. Sounds

2. Display

3. Security

1. Last Call
2. All Calls
3. Home Calls
4. Roam Calls
5. Accumulated Calls
1. By Group

2. By Name
3. By Number
1. Add New Entry
2. Edit Existing Entry
1. Add New Group
2. Change Group Name
3. Change Group Bell
4. Clear Group

1. New Event
2. View Event List

1. Automatic-B
2. Automatic-A
3. Home Only

1. Auto NAM
2. Change NAM
1. Off
2. On
3. 7 Secs

1. Ringer Type
2. Ringer Mode

3. Volume

4. Alert

5. Roam Ringer
6. Tone Length
1. Animation Setting

2. Main Display Setting

3. LCD Setting

1. Restrict

1. Family
2. Friends
3. Work
4. Etc.
5. All

- Family, Friend, Work Etc, All
- Family, Friend, Work, Etc, All
- Family, Friend, Work Etc, All

1. Ringer
2. Vibrate
3. Ringer After Vibration
4. Silent
1. Ringer
2. Key
3. Voice Call
1. Minute Alert
2. Roam Alert
3. Connect Alert
4. Fade Alert
5. Low Signal Alert

1. Idle Display
2. Power On
3. Power Off
1. Greeting Input
2. Idle Clock
1. Backlighting
2. Contrast
1. Automatic Lock
2. Incoming Call
3. Outgoing Call
4. Incoming Call History
5. Outgoing Call History

## MENU SUMMARY

4. Others

5. UP Proxy IP
1. Calculator
2. World Clock
3. Stopwatch
1. Connection

## 6. Tools



## 7. Data Svc.



## 8. Location



## 9. Voice Svc



1. Setting

1. Voice Memo
2. Call Answer

3. Voice Command

4. Voice Dial

5. Voice Setting

2. Special #'s
3. Clear Phondbook
4. Reset Phone
5. Change Password
1. Answer Mode

2. Auto Retry

3. Auto Answer

4. Voice Privacy
5. Key Guard
6. Language

7. Web Idle Time
8. S/W Version

1. Voice Call
2. Data Only
3. Fax Only
1. 911 Only
2. Location On

1. On/Off
2. Inbox

3. Greeting

4. Call Speaker
5. Wait Time

1. Yes/No

2. Wake-Up

3. Top Level

4. Digit Dial

1. List
2. Add

3. Clear All
1. Untrain All
2. Prompt Mode
3. Digit Mode

4. HFK Mode

6. Menu
7. Phone Book
8. Data Call
9. 900#'s
10. Long Distance

1. Any Key
2. Send Key
1. Retry Time
2. Repeat
- Off, 5secs, 10Secs, 18Secs
1. Standard
2. Enhanced
- On, Off
1. English
2. Spanish

- Off, On
1. Play
2. Clear All
1. Record
2. Play
3. Clear
- Off, On
- NoRivfer, 5Secs, 10Secs, 18Secs
1. List Words
2. Train All
3. Untrain All
1. List Words
2. Train All
3. Untrain All
1. List Words
2. Train All
3. Untrain All
1. List Words1
2. List Words2
3. Train All
4. Untrain All

- Family, Friends, Work, Etc, ALL

- No, Yes
- Beginner, Expert
- Echo, Echo+Beep, Beep
- Off, On

## BASIC FUNCTIONS

### MAKING A CALL

- 1 Enter a phone number.



**To modify the phone number you have entered :**

- To erase one digit at a time press .
- To erase the entire number, press and hold .

- 2 Press .  
The indicator, , appears on the display

- If "CALL FAILED" appears on the display or the line is busy, press or .
- If you activate the AUTO RETRY function, the phone will automatically retry for the number of times you have selected. (refer to page 70)
- A phone number will appear with its name, if available in the phonebook when a call is placed.
- There is another way to make a call through the VR mode, which is called VAD(Voice Activated Dialing). Please REFER to page 80(Voice Service) for more details.

- 3 To end a call, press .

Please refer to page 84 (Voice Service) for more details on using Voice Activated Dialing to place a call.

## BASIC FUNCTIONS

### SPEAKER PHONE

- 1 To activate the speaker phone when the phone is in idle mode, answering mode, and calling mode Press and hold .
- 2 The phone returns to normal (speaker phone off) after ending or call or when the phone is turned off and back on.

### PAUSE FEATURE

You can dial or save a phone number with pauses for use in the automated systems where you need to enter a credit card number, a social security number, and so on. This feature will be convenient when you are linked to ARS (Advanced Record System)

- 1 Enter a phone number, then press .




- 2 Press to dial or to store.


Please refer to page 30 for more details about storing a phone number.


## BASIC FUNCTIONS

### ANSWERING A CALL

- 1 To answer a call, press any key except Clear, End or the Navigation key.


- In the Settings menu, you can select either "Any Key" or "Send Key" to answer a call. If "Send Key" is selected, the phone can only be answered by pressing . See page 70 for more information.

- 2 To end the call, press .

-  In Auto Answer Mode a call is automatically answered after a preset number of ring tones. See page 71 for more details.

### CALLER ID FUNCTION



Displays the caller's name and phone number, if available, in the phone book.

-  The caller ID is stored in the call history.

## BASIC FUNCTIONS


### CALL WAITING FUNCTION

 
Notifies of another incoming call when you are on the phone by making a beep sound and displays the caller's phone number on the screen.

- 1 To answer another call while on the phone, press . This places the first call on hold. To switch back to the first caller, press  again. first call.

### VOICE MEMO DISPLAY

Displays the number of voice memos recorded in the answering machine.

- 1 To play the recorded voice memos, press .

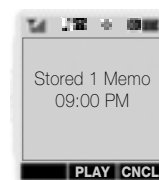

## BASIC FUNCTIONS


### ADJUSTING VOLUME

Adjusts the volume of the ringer, key and voice call Navigation key.

- 1 Press    and select one of the following.

- Ringer – Control the ringer volume
- Key – Control the keypad tone
- Voice call – Control the earpiece volume




- 2 Adjust volume and press  to save it.



Move the Navigation key upward or downward to adjust volume of earpiece during a call.

### ETIQUETTE


Mutes key tones and activates the vibration mode to alert you of an incoming call or message.

- 1 To turn etiquette mode on/off, press and hold .



### LOCK


Locks phone allowing it to only be used after the password is entered.

- 1 To lock the phone, press and hold .
- 2 To unlock the phone, input the password.



The default password is the last four digits of your phone number.


## DURING A CALL


To display menu options during a call, press .



### MUTE (UNMUTE)


The caller can not hear you and any sound from your side, while you can hear his or her voice.

- 1 Press .

- To deactivate, press .
- The phone will automatically un-mute in Emergency Call or Callback mode.

### SILENT(QUIT)



Prevents the other end from hearing tones if any key is pressed during a call.

- 1 Press .

- Press  to deactivate it.

### SEND MY PHONE #

Automatically transmits your phone number to a pager during a call without manually entering the number.

- 1 To transmit your phone number during a call, press  and .

## DURING A CALL



### MY PROFILE

Enables you to review and edit your profile that is entered through the phone book. Please see page 49 for more details.

- 1 Press  .

### VOICE PRIVACY

Enhances voice privacy during a call.

- 1 Press  .

- 2 Select “Standard” or “Enhanced” with the Navigation key.

### LOCATION

Enables phone to locate its current position through GPS. Please see page 49 for more details.


- 1 Press  .

## MAKING AN EMERGENCY CALL

This enhanced 911 feature puts phone in the Emergency Call Mode when you dial the preprogrammed emergency number, 911. It also operates in the lock mode and out of the service area.

### E911 IN LOCK MODE

The 911 call service is available even in the lock mode.

- 1 Enter “911” and press .




- 2 connects.

- 3 The phone exits the Lock Mode for 5 minutes.

When the call ends, the phone returns to the Lock Mode.

### E911 USING ANY AVAILABLE SYSTEM

- 1 Enter “911” and press .

- 2 connects.

- 3 The phone maintains the Emergenay Mode for 5 minutes.

- When the call ends, the phone returns to the Lock Mode.
- The phone continuously attempts to receive service from any available system.

MEMO

CH  
2

## Chapter 3

### MEMORY FUNCTION

CH  
3


This chapter addresses memory functions including:

- Storing Phone Numbers
- Entering Letters, Numbers and Characters
- Making Calls Through a Phonebook







## STORING A PHONE NUMBER

The phonebook stores up to 300 entries. The phone book stores up to 300 entries.


- 1 Enter a phone number and press .
- 2 Move to one of the following fields with the Navigation key and press it to select a field.  
(Home, Mobile, Office, Pager, Fax)
- 3 You are now able to fill in other fields and edit existing fields through the Navigation key.
- 4 Move the Navigation key leftward or rightward to view options of the following fields when they are highlighted.




-  Group – Family, Friends, Work, Etc
-  Voice dial – Home, Mobile, Office, Unassigned
-  Set Secret – Yes, No

- 5 Press  when necessary to enter letters in the following fields, and you will see Alpha Editor popping up. (E-mail, Wireless address, Name, Memo)


- The other fields are set to Numeric mode as a default.

- 6 Enter letters and symbols, and press . Please refer to page 31 about how to enter letters, numbers and symbols.

- 7 To store the entry, press .

## ENTERING LETTERS, NUMBERS & SYMBOLS

The input mode (Alpha editor) will be automatically activated when necessary to enter letters and numbers. As shown below, there are 4 available modes: Standard input mode (abc), T9 input mode (T9abc), Numeric mode (123), and Symbol mode.


The input mode indicator appears on the upper right of the display when letters and numbers are entered. To select the desired input mode among the 4 modes below, press , then enter letters and numbers.




### Input mode indicator







Abc : Abc mode

123 : Number mode

 : T9 mode

 : Symbol mode

The following illustrates the function assigned to each key in the Alpha Editor.

KEY	FUNCTION
 Case	Press to change mode. [T9Abc][Abc][123][Symbol mode]
[  Next	Press to view the next matching word if the highlighted word is not the word you intended.
[  Space	Press to accept a word and add a space.
[  Shift	Press to select a letter case of the standard text input or T9 text input mode. [Abc], [ABC], and [abc] indicate the standard text input. [T9Abc], [T9ABC], and [T9abc] indicate the predictive text input.
Clear 	Press to delete a character to the left of the cursor.
Sto 	Store the letters and numbers you enter.

## ENTERING LETTERS, NUMBERS & SYMBOLS


### STANDARD INPUT MODE

Uses digit keys to enter letters, numbers and characters.



1 Enter letters using the keypad as follows:


Keypad	1 Time	Repetitions 2 times	Repetitions 3 times	Repetitions 4 times	Repetitions 5 times
1	1	.	@	-	1
2ABC	A	B	C	2	A
3DEF	D	E	F	3	D
4GHI	G	H	I	4	G
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

To change the input mode, press .

2 To enter a space, press . After two seconds, the cursor will automatically move to the next column.

3 Repeat until letters are entered. There is a 16-letter limit.

4 To delete one digit, press . To delete the entire entry, press and hold .

Select Abc mode, by pressing [  ].

When you select this mode, the Abc icon appears as a visual confirmation.

- "Find the key that corresponds to the letter you want to enter."

- Press it as many times as needed for the letter to appear on the screen.

- To enter the name "John":

Press [  ] J

Press [  ] o

Press [  ] h

Press [  ] n



## ENTERING LETTERS, NUMBERS & SYMBOLS


### T9 INPUT MODE

The T9 input mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing a key once per character.



1 Select the T9Abc mode with .

2 Press a digit key once to enter the character you want and enter all the characters to input the word you want.


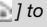
3 To view the next matching word, press .








4 To accept matching word and enter a space, press .




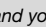
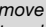
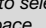
To enter a compound word.

- enter the first part of the word and press [  ] to accept it.
- enter the last part of the word and press [  ] to enter the word.

To enter "phone book" in the T9 input mode.

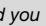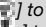- Press [  ] to select the T9 input mode and [  ] to choose the small letter case (T9abc).

- Press [  ] [  ] [  ] [  ] [  ] and you will see "phone" highlighted. Press [  ] to see the next matching word and [  ] to select it.


- Press [  ] [  ] [  ] [  ] and you will see "book" highlighted. Press [  ] to move to the next matching word and [  ] to select the compound word and enter a space.



## ENTERING LETTERS, NUMBERS & SYMBOLS

### NUMERIC MODE

Enters numbers.

- 1 Press  until the current input mode changes to the Numeric mode.




- 2 To enter a number, press a digit key.

## ENTERING LETTERS, NUMBERS & SYMBOLS

### SYMBOL MODE

Allows you to enter symbols.

- 1 Press  until the "Symbol mode" appears.
- 2 Press the number for the symbol you want to enter.

- Use the Navigation key to view a different line of symbols.

Press [    ],



Press [    ],



Press [    ],




## MAKING A CALL THROUGH THE PHONEBOOK

### SPEED DIALING

Dials a number by simply pressing its location number in the phone book. Please refer to page 49 for more information.



- "Unassigned" appears if the location pressed is available.
- A phone number that is set secret will not be displayed.
- A call can be made by pressing its entry number and .

CH  
3

## Chapter 4

### MENU FUNCTION

This chapter addresses accessing the menu and using its functions and features to customize your phone.

- Call History
- Phonebook
- Schedule
- Roaming
- Tools
- Data Svc
- Location

CH  
4

 
## CALL HISTORY

In the idle mode access through the . Move the Navigation Key up to access the phone book, down to access Call History, right to access Schedule and left to access Settings.

### OUTGOING CALLS

Displays information about the ten most recently dialed numbers. Saves the numbers and places call by simply pressing .

- 1 To see a list of the 10 most recently dialed numbers, press , and . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

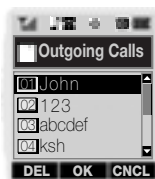

- 2 To view outgoing call details, press the Navigation Key.



The detail includes date, time, and phone number of outgoing calls.

- 3 Press again to save it or press to delete it.

"Phone # is already saved in phone book" or "Move to phone book save mode?" will appear.

After the tenth outgoing call, the oldest call will automatically be erased from the history.

## CALL HISTORY

### INCOMING CALLS

Displays information of the 10 most recently answered calls. Saves the numbers and places calls by simply pressing .

- 1 To see a list of the 10 most recently answered calls, press , and . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.



- 2 To view incoming call details, press the Navigation Key.



Call details include date, time and phone number.


- 3 Press again to save it or press to delete it.




"Phone # is already saved in phone book" or "Move to phone book save mode?" will appear.

After the tenth incoming call, the oldest call will automatically be erased from the history.

## CALL HISTORY

### MISSED CALLS



Displays information of the 10 most recently missed calls. Places calls by simply pressing .

**1** To see a list of the 10 most recently missed calls, press ,  and . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

**2** To view missed call details, press the Navigation Key.



Call details include date, time and phone number.

**3** Press  again to save it or press  to delete it.

"Phone # is already saved in phone book" or "Move to phone book save mode?" will appear.



After the tenth missed call, the oldest call will automatically be erased from the history.

## CALL HISTORY


### CALL TIMES

Checks the talk time and manages your calls within the limit you set. The four timers include:

#### LAST CALL

Displays talk time of last call.





**1** Press , ,  and .

**2** To return to the previous page, press .



#### ALL CALLS

Displays talk time of all incoming and outgoing calls, excluding web access calls.

**1** Press , ,  and  and the message "Not intended for billing purposes" appears for 5 seconds.

**2** Use the Navigation Key to view the time of the following items:

- Voice
- Web
- Data/Fax



**3** To return to the previous page, press .

## CALL HISTORY

### HOME CALLS

Displays talk time of all calls made within Home area.

- 1 Press and the message "Not intended for billing purposes" appears for 5 seconds.
- 2 Use the Navigation Key to view the time of the following items:  
- Voice, Web, Data/Fax
- 3 To reset the timer, press . To return to the previous page, press .

### ROAM CALLS

Displays talk time of roaming calls.

- 1 Press and the message "Not intended for billing purposes" appears for 5 seconds.
- 2 Use the Navigation Key to view the time of the following items:  
- Voice, Web, Data/Fax
- 3 To reset the timer, press . To return to the previous page, press .

### ACCUMULATED CALLS

Displays talk time of accumulated calls.

- 1 Press and the message "Not intended for billing purposes" appears for 5 seconds.
- 2 Use the Navigation Key to view the time of the following items:  
- Voice, Web, Data/Fax
- 3 To reset the timer, press . To return to the previous page, press .

## PHONEBOOK

 
 
Stores up to 300 entries, each of which can be assigned to a group. Entries can be retrieved by name, phone number or group.

### FIND

Retrieves an entry by group, voice name, name and number, and calls by simply pressing .

### BY GROUP

- 1 Press .
- 2 Select one of the following options(Family, Friend, Work, Etc, All) with the Navigation key.
- 3 To retrieve the phone book by, group, press the navigation key.
- 4 All group entries will be displayed. Select an entry and either delete it by pressing or view it by pressing the Navigation Key.

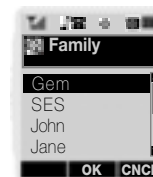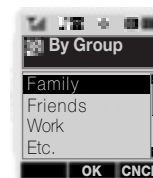

You are to be asked about "Password" when the entry is set secret.

- 5 To call a selected number, press .

## PHONEBOOK

BY NAME


- 1 Press     .




- 2 Enter a name or its character string and press the Navigation Key to display the names in alphabetical order. Please refer to page 31 about using the Alpha Editor.



If there is no match, "Cannot Find Name" will appear.

- 3 All matching entries will be displayed. Select an entry and either delete it by pressing  or view it by pressing the Navigation Key.

If the entry is set to secret, you will be asked for your password.

- 4 To call the selected number, press  .

 
## PHONEBOOK

BY NUMBER


- 1 Press     .



- 2 To search through the menu, enter a part of the phone number and press the Navigation Key.

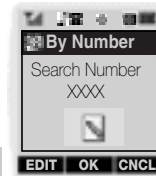

If there is no match, "Cannot Find Name" will appear.

- 3 All matching entries will be displayed. Select an entry and either delete it by pressing  or view it by pressing the Navigation Key.

If the entry is set to secret, you will be asked for your password.

- 4 To call the selected number, press  .





## PHONEBOOK

### EDIT PHONEBOOK



Adds a new entry or edits an existing one.

#### ADD NEW ENTRY





- 1 To add a new entry to the phone book, press  .



- 2 To enter a name or number, use the Navigation Key to select the phone book field.

- 3 To save the entry, press . To return to the previous page, press .


#### EDIT EXISTING ENTRY

- 1 To edit an existing entry, press    .



- 2 Use the Navigation Key to select a group.

Family, Friends, Work, Etc, All





- 3 Select an entry with the Navigation Key and press it to view and edit the entry, or  to delete it.

## PHONEBOOK

### EDIT GROUP

Adds, changes and deletes groups.

#### ADD NEW GROUP





- 1 To add a new group, press    . A maximum of seven groups is allowed.



- 2 Input a new group name.

- 3 Press  to save it.

#### CHANGE GROUP NAME

- 1 To change a new group, press    .







- 2 Select an existing group name with the joystick key.

- 3 Input a new name.

- 4 Press  to save it.




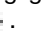


## PHONEBOOK

### CHANGE GROUP BELL

- 1 To change a group bell, press    .
- 2 Select the group to be changed and use the Navigation Key to select one of the bell options.
- 3 To save, press the Navigation Key.



### CLEAR GROUP




- 1 To delete an existing group, press    .
- 2 Use the Navigation Key to select, then delete the group. Press again to confirm.
- 3 Press  to delete it.
- 4 Press  again to confirm it.




## PHONEBOOK

### SPEED DIAL

In idle mode, calls a number stored in speed dial by pressing its location number on the keypad.

- 1 Press   .
- 2 To assign a phone number to a location, select the location and press the Navigation Key.






If a phone number is already assigned to the location, press  and the navigation key to delete.



- 3 Locate the entry in the group where it is saved and press the Navigation Key.
- 4 Select the entry and press the Navigation Key; select the phone number and press the Navigation Key again.

### MY PROFILE

Saves your personal information.

- 1 Press    to review and edit your personal information as follows. (Name, My Phone number, Birthday, Blood Type, Address, Home, E-Mail, Work Phone #, Memo, Set Secret)





- 2 Press  to edit on item when selected.
- 3 Press  to confirm and save it.

## SCHEDULE

Sets an event and reminds you when it's time to take place.

### EVENT

- 1 To display a calendar, press .


- 2 Move the Navigation key to choose a date in the calendar and press .



- Use left, right, up and down instead of leftward, upward, rightward and leftward.



- 3 1. To set a time for an event, press .

- Choose one of the following on the first line: On time, 10 Min before, 30 Min before, 1 Hour before, No alarm.
- Use the Navigation Key to move to year, month, day, time and input using the digit keys.


2. To set a melody for the event, press . Select a melody with the Navigation Key.

- 4 Press  to save it or  to return to the calendar.


- The date of the event will be marked on your calendar.


## SCHEDULE

### ALARM


- 1 To display alarm entries, press .


- 2 Select one of the entries with the Navigation key.

 
- 3 To edit the existing alarm or set a new alarm, press .

- To delete the existing one, press .





- 4 1. To set a time, press .

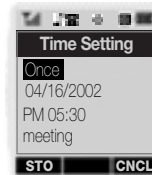- Use the Navigation Key to choose an alarm frequency (Once, Daily, Weekly, Monthly, Yearly). To save, press .



2. To set a melody, press .

- To set a snooze, press .

3. To set a snooze, press .

- Select one of the following:  
No use, 1 Time, After 3 minutes.







- It doesn't snooze if an alarm is stopped within a minute, but it will snooze in a minute an alarm goes off.

## ROAMING

Scans the channels to stay connected to any available Verizon system.

### SET MODE

Selects the Preferred System.





- 1 Press   .
- 2 Select one of the following options (Automatic A/Automatic B/Home only) with the Navigation key and press .

 


Auto A : Scan the radio channels based on the Automatic A setting.  
 Auto B : Scan the radio channels based on the Automatic B setting.  
 Home only : Only within your home area or home affiliated area.

### FORCE ANALOG

Temporarily forces phone to use Analog mode – mode automatically ends in 10 minutes.

- 1 Press   .
- 2 Select “Yes” or “No” with the Navigation key and press  to activate it.

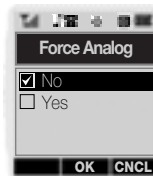






### NAM SETTING

Enables Auto NAM (Number Assignment Modules) or manually selects a NAM.

#### AUTO NAM

 Automatically switches phone to proper NAM when you have multiple NAM registrations.



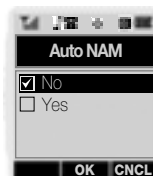

- 1 Press   .
- 2 Select “Yes” or “No”, then press  to save it.




## ROAMING
 
### CHANGE NAM



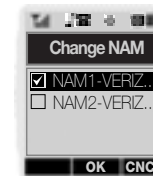

Changes the NAM used by the phone when you have multiple registrations.


- 1 Press   .
- 2 Select a NAM (NAM1,NAM2) with the Navigation key and press  to save it.



### CALL PROMPT

 Notifies you when you are in a roaming service area and will be charged for incoming calls.

- 1 Press   .
- 2 Select one of the following options and press  to confirm it.

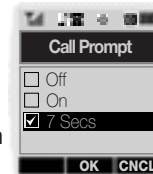


- Off : No display [TO BE CHARGED]
- On : Display [TO BE CHARGED] until the user answers an incoming call
- 7 seconds : Display [TO BE CHARGED] for only 7 seconds and return to normal.

### PRL ID

 Displays the phone's PRL (Preferred Roaming List)

- 1 Press   .

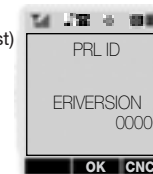

## SETTING

Customizes your phone and optimizes performance through a variety of settings.

### SOUNDS

Sets Ringer type, Ringer mode, Volume, Alert, Roam Ringer and Tone length.

#### RINGER TYPE

To select a ringer type for incoming calls:

1 Press    .

2 Select one ringer type from 40 melodies and 10 ringer tones.

3 To confirm, press .




#### RINGER MODE

Alerts you to incoming calls in the following modes:

1 Press    .

2 Select one of the following options with the Navigation key.

- Ringer
- Ringer after Vibrate – The ringer sounds off after vibration.
- Vibrator
- Silent – Mute the ringer

3 To confirm, press .



## SETTING

### VOLUME


Controls the Ringer, Key and Voice Call volume.

#### RINGER

To adjust Ringer volume:

1 Press    .

2 Adjust the ringer volume with the Navigation key.

3 To save, press .




#### KEY

To adjust keypad tone:

1 Press    .

2 Adjust the keypad tone with the Navigation key.

3 To save, press .



## SETTING


## VOICE CALL

To adjust earpiece volume:

1 Press .

2 Adjust the earpiece volume with the Navigation key.



3 To save, press .

## ALERT


Allows you to set an alert that sounds when any handset changes occur.

## MINUTE ALERT

Sounds an alert every minute of a phone call.

1 Press .



2 Select "OFF" or "ON" with the Navigation key and press  to save it.


## SETTING

## ROAM ALERT

Sounds an alert when leaving a service area and entering a roaming service area.

1 Press .




2 Select "OFF" or "ON" with the Navigation key and press  to save it.

## CONNECT ALERT

Notifies you that a call has been successfully placed.

1 Press .




2 Select "OFF" or "ON" with the Navigation key and press  to save it.

## SETTING

**FADE ALERT**

Sounds an alert entering an area where calls cannot be made due to weak signal strength. The alert sounds in standby mode.


1 Press    .

2 Select "Off" or "On" with the Navigation key and press  to save it.

**LOW SIGNAL ALERT**

Sounds an alert when you encounter low signal strength during a call.

1 Press    .

2 Select "Off" or "On" with the Navigation key and press  to save it.




## SETTING

**ROAM RINGER**

Sounds a different ringer when you are in a roaming service area.

1 Press    .

2 Select "Distinctive" or "Normal" with the Navigation key and press  to save it.




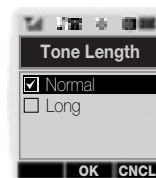 
- Distinctive – Sounds a different ringer type
- Normal – Sounds the same ringer type as used in Home area.

**TONE LENGTH**

To adjust tone length:

1 Press    .

2 Select "Normal" or "Long" with the Navigation key and press  to save it.



## SETTING

## DISPLAY

Allows you to customize display.

## ANIMATION SETTING

To select an LCD display:

## IDLE DISPLAY

- 1 Press
- 2 Select a display from the Animation list by moving the Navigation Key up, down, left or right.
- 3 Press to save it.



## POWER ON DISPLAY

- 1 Press
- 2 Select a display from the Animation list by moving the Navigation Key up, down, left or right.
- 3 To save, press .

## POWER OFF DISPLAY

- 1 Press
- 2 Select a display from the Animation list by moving the Navigation Key up, down, left or right.
- 3 To save, press .

## SETTING

## MAIN DISPLAY SETTING

## GREETING INPUT

To input a personal greeting:

- 1 Press
- 2 To edit the greeting, press the Navigation Key.
- 3 Input your personal greeting, using the Alpha Editor.(Refer to page 33)
- 4 To save, press the Navigation Key.



## IDLE CLOCK

To display a clock on the LCD:

- 1 Press
- 2 Select one of the following options and press the Navigation Key to save it.

- Digital Clock
- Analog Clock
- Greeting Clcok
- Animation Clock





## SETTING

### LCD SETTING


Controls backlight and LCD contrast for a better view and more efficient use.

#### BACKLIGHTING

Backlights the display and keypad for easy viewing in dark places.

1 Press     .

2 Select one of the following options; 5sec, 10 sec, 20 sec, Off.

To save, press .




- Off : Turn the backlight off.
- 5 sec, 10 sec, 20 sec : Backlight on for 5, 10, or 20seconds respectively after a touch of the keypad.

#### CONTRAST

To adjust the display contrast:

1 Press     .

2 Adjust the LCD contrast for better view.

3 To save, press .



## SETTING

### SECURITY

Prevents the unauthorized use of the handset and only allows access to certain features to those who have the password.




#### RESTRICT

When you attempt to make a restricted call, "This phone is restricted" appears on the screen.

#### AUTOMATIC LOCK



Prevents others from using your phone without permission.

When locked, the menu can not be accessed without password.

 
1 Press    and enter "Password".




The default password is the last 4 digits of your phone number.

2 Press   and select "Off", "Lock Now" or "Power Up".

- Off – Do not lock the phone
- Lock Now – Lock the phone now
- Lock On Power Up – Lock the phone whenever it is turned on.

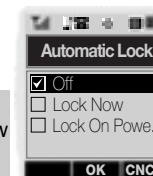

3 To save, press .

## SETTING

### INCOMING CALL

Blocks all incoming calls but allows outgoing calls to be placed.

1 Press and enter "Password".

2 Press and select "Allow" or "Restrict" with the Navigation key.

- Restrict : Restricts incoming calls
- Allow : Allows incoming calls



3 To save, press .

### OUTGOING CALL

Blocks all outgoing calls – except emergency calls – but allows incoming calls to be placed.

1 Press and enter "Password".

2 Press and select "Allow" or "Restrict" with the Navigation key.

- Restrict : Restricts outgoing calls
- Allow : Allows outgoing calls



3 To save, press .

### INCOMING CALL HISTORY

1 Press and enter "Password".

2 Press and select "Allow" or "Restrict" with the Navigation key.

- Restrict : Restrict an incoming call history
- Allow : Allow an incoming call history



3 Press to save it.

 
## SETTING

### OUTGOING CALL HISTORY

1 Press and enter "Password".

2 Press and select "Allow" or "Restrict" with the Navigation key.

- Restrict : Restrict access to the outgoing call history.
- Allow : Allow access to the outgoing call history.

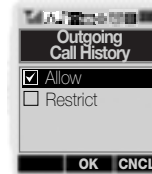

3 Press to save it.

### MENU

Restricts access to the menu.

1 Press and enter "Password".

2 Press and select "Allow" or "Restrict" with the Navigation key.

- Restrict : Restrict access to the menu
- Allow : Allow access to the menu



3 To save, press .

### PHONEBOOK

Blocks access to, and protects data in your phonebook.

1 Press and enter "Password".

2 Press and select "Allow" or "Restrict" with the Navigation key.

- Restrict : Restrict access to the phonebook
- Allow : Allow access to the phonebook.



3 To save, press .

## SETTING

## DATA CALL

Restricts data calls from being placed.

- 1 Press and enter "Password".
- 2 Press and select "Allow" or "Restrict" with the Navigation key.

- Restrict : Restricts data calls
- Allow : Allows data calls



- 3 To save, press .

## 900 #'S

Restricts calling 900 dial service numbers.

- 1 Press and enter "Password".
- 2 Press and select "Allow" or "Restrict" with the Navigation key.



- Restrict : Restricts calls 900-dial services
- Allow : Allows 900-dial services

- 3 To save, press .

## SETTING

## LONG DISTANCE CALLS

Restricts calling long distance numbers – the phone is limited to calling numbers within the area.

- 1 Press and enter "Password".
- 2 Press and select "Allow" or "Restrict" with the Navigation key.

- Restrict : Restricts calls 900-dial services
- Allow : Allows 900-dial services



- 3 To save, press .

 


A phone number over 7 digits is to be restricted.

## SPECIAL #'S

Stores 3 phone numbers that can be called even in the lock mode.

- 1 Press and enter "Password".
- 2 Press and select a location with the Navigation key.
- 3 Press the Navigation Key and input a phone number; press again to save.

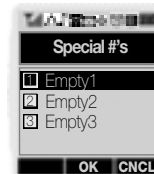

## SETTING

**CLEAR PHONEBOOK**

Clears all phonebook entries.

- 1 Press and enter "Password".
- 2 Press .
- 3 Select "Yes" or "No" with the Navigation key. Press .

**RESET PHONE**

Resets phone to default settings.

- 1 Press and enter "Password".
- 2 Press .
- 3 Select "Yes" or "No" with the Navigation key. Press .



When you select "Yes", you will see "Wait a moment" on the display and the phone will return to idle mode.

## SETTING

**CHANGE PASSWORD**

Changes your 4-digit password

- 1 Press and enter "Password".
- 2 Press .



- 3 The default password is the last 4 digits of your phone number.

- 3 Enter a new password and press .

- 4 Enter the new password again and press .







## SETTING





## OTHERS


## ANSWER MODE

To select an answer mode:

- 1 Press    .
- 2 Select "Any Key" or "Send Key" with the Navigation key



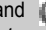





- Any Key – Press any key to answer an incoming call except , , and .
- Send Key – Press only  to answer a call.

- 3 To save, press .

## AUTO RETRY







Automatically retries a call up to 5 times after a set time interval.

## RETRY TIME

- 1 Press     .
- 2 Select a time interval option (Off, 3, 5, 7, 10 seconds) with the Navigation key. To save, press .



## REPEAT





- 1 Press     .
- 2 Select one of the options (1 time, 3 times, 5 times) with the Navigation key. To save, press .



 
## SETTING

## AUTO ANSWER


Automatically answers a call after a preset number of rings. An ideal setting for the hands-free car kit.

- 1 Press    .
- 2 Select one of the following with the Navigation key:

- Off/5/10/18 seconds.

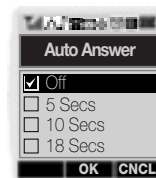






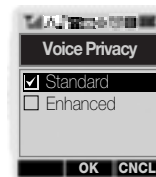 
This function will not be active when you select Vibrate, Silent, or Ringer after vib as a ringer mode.

- 3 To save, press .

## VOICE PRIVACY

Enhances voice privacy and avoids tapping during a call.






- 1 Press    .
- 2 Select "Standard" or "Enhanced", if available. To save, press .







- "Enhanced" - Makes it more difficult to wire tap.

## SETTING

## KEY GUARD






- 1 Press    .
- 2 Select "On" or "Off" with the Navigation key.
  - On: Prevents accidentally pressing the keypad
  - Off: Key guard off
- 3 To save, press .



-  To unlock the key guard, press   .

## LANGUAGE






Selects the language in which letters are displayed on screen.

- 1 Press    .
- 2 Select either "English" or "Spanish".
- 3 To save, press .



## WEB IDLE TIME

Disconnects from a network when there is no key input for a certain amount of time.





- 1 Press    .
- 2 Use the Navigation key to set the web idle timer or press digit keys one by one to enter the time.
  - Time cannot exceed 3 digits
- 3 To save, press .



## SETTING

## S/W VERSION

To display the version of your phone:

 
- 1 Press    .
- 2 You are to see the version of software and hardware.



## UP PROXY IP

The phone can have up to 3 sets of server IP (Internet Protocol) addresses and Port numbers to access your service provider's website. These may already be preset or be separately programmed by your service provider. Please note that any change to these settings may disable the Web access capability.

- 1 Press   .

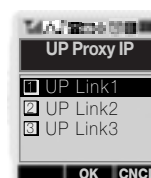

## TOOLS

**CALCULATOR**

To access the calculator:

1 Press .

2 Follow the instructions below to calculate  $(8 \times 6) / 4 - 2.5$



Input 8  
Move the Navigation key leftward  
Input 6 and press the Navigation key  
Move it rightward  
Input 4 and press the Navigation key  
Move it downward  
Input 2 and press the to input (.)  
Press 5, then .

3 To reset, press .

**WORLD CLOCK**

Notifies you of the time in a specific preprogrammed city.

1 Press .

2 Select a city with the Navigation key and press .

3 The world map is to be displays with the city, its date and time.

Use the Navigation key to select another city.

## TOOLS

**STOPWATCH**

Simultaneously times up to six different events. To operate the stopwatch:

1 Press .



2 To measure a time period.

1. To start the stopwatch, press .
2. To pause it, press .
3. To resume it or to return to the previous page press, .

3 To time up to six events at once:

1. To start, press .
2. To stop a time period and continue measuring another one, press .
3. To stop the second and continue measuring a third one, press .
4. To measure up to six time periods, repeat the above steps.
5. To stop, press . To review the results, press .
6. To return to the stopwatch, press or .
7. To reset it, press .

## DATA SVC

Transfers data from to PC.

### CONNECTION


Select a connection mode based on how the handset will be used.

1 Press   .

2 Select one of the following connection modes with the Navigation key.



- Voice Call : To receive a voice call
- Data Only : To receive data when connected to PC.
- Fax Only : To function as a fax when connected to PC.




3 To save, press .



 
This function is available only when the phone is connected to data cable.

### DATA SPEED


Select a speed that best optimizes data flow.

1 Press   .

2 Select one of the following data speed with the Navigation key.

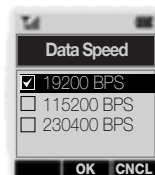

- 19,200 BPS, 115,200BPS, 230,400BPS

3 To save, press .

## LOCATION

Enables Verizon network system to locate your position and allows the use of some Verizon wireless applications.

### SETTING

To determine whether or not the network system can detect your position:

1 Press   .

2 Press any key when you see a message.

3 Select "Location On" or "911 Only" with the Navigation key.

- 911 Only - Your location will be hidden from network & application except 911
- Location On - Your location is now available to the network.



MEMO

# Chapter 5


## VOICE SERVICE

This chapter addresses Voice Service, an advanced feature that allows you to place calls using your voice. With Voice Memo (VM) you can record voice messages and set the Answering Machine. Topics include:

- VR Mode
- VOICE MEMO (VM)
- Call Answer
- Voice Command
- Voice Dial
- Voice Setting

## VR MODE

Voice Recognition (VR) enables you to place calls using your voice and to record voice memos.

- 1 Press and hold  until your phone turns to VR mode.



- 2 The display to the right will appear when the phone turns on VR mode.

Depending on the prompt mode, expert or beginner, you will hear either of the following prompts. The second prompt automatically plays when nothing is said. (Please see page 92 for more information on prompt modes.)

### Beginner Mode


- 1st : "Main Menu"
- 2nd : "Speak a name to call, or say dial, redial, voice memo, phonebook or cancel".

### Expert Mode

- 1st : "Main Menu"
- 2nd : "Main Menu"

Once you say your selection, you will be taken through each of the procedures (name, dial, redial, voice memo, phone book, cancel).

## NAME


- 1 Press and hold  until your phone turns to VR mode.



- 2 If you say a name or tag that is already in the phone book, the number and name will appear on the display, and you will hear "Calling <name>".

## VR MODE

### DIAL

- 1 Press and hold  until your phone turns to VR mode.

- 2 Say "Dial" in the VR mode and you will see the display on the right.

Depending on the prompt mode, expert or beginner, you will hear either of the following prompts. The second prompt automatically plays when nothing is said. (Please see page 92 for more information on prompt modes.)



- 3 Press or say the digits of the phone number.

- 4 Say "Call" after entering the entire number.

### Beginner mode


- 1st prompt : "Digit menu"
- 2nd prompt : "Say digits or verify, cancel, clear, or call".

### Expert mode

- 1st prompt : A sequence of high and low tones sound
- 2nd prompt : "Digit menu"

## VR MODE




## REDIAL

- 1 Press and hold  until your phone turns to VR mode.
- 2 Say "Redial" to dial the last dialed number.

CH  
5

## VR MODE

## VOICE MEMO

- 1 Press and hold  until your phone turns to VR mode.
- 2 Say "Voice Memo" and follow the steps as instructed in the display.
- 3 To stop recording a memo, press  and .
- 4 After recording a voice memo you can REVIEW, RE-RECORD, or SAVE.



To pause, press . To resume, press .

CH  
5

## VR MODE

 
### PHONE BOOK

- 1 Press and hold until your phone turns to VR mode.



- 2 Say "Phone book"

All phone book entries with voice tags will appear and be played.

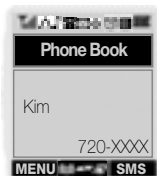

- To call a phone number with an attached voice tag, say "yes" while the voice tag is playing.

### CANCEL

- 1 Press and hold until your phone turns to VR mode.

- 2 To exit the VR mode or return to the standby mode, say "cancel."

## VS MENU

### VOICE MEMO

- 1 Press to start VS menu.



- 2 To enter a voice memo, press .



- 3 To record a voice memo, press . Instructions will be displayed and you will hear "Please record at the tone."

- To view and play voice memos, press .
- To erase all voice memos, press .



- 4 To stop recording a memo, press .



- To pause, press . To resume, press .

- 5 After recording a voice memo you can REVIEW, RE-RECORD, or SAVE.



## VS MENU


## CALL ANSWER

Helps operate the answering machine.

1 Press  .

2 Press .



3 Select one of the following options with the Navigation key and press .

ON/OFF : Turns the Auto Answering machine on/off.  
 INBOX : Play or erase a recorded memo.  
 GREETING : Add an "s" to the end of "record"; delete the word "your"  
 personalized greeting. You have the maximum 30 seconds to record a greeting.  
 CALL SPEAKER ON (OFF): change "recorded" to "recording"  
 WAIT TIME : No Ringer, 5s, 10s, 18s.  
 The answering machine will be operated in a specific time.

## Icons in the stored memo list

- ☒ : A recorded memo in Answering machine that you have not checked yet.
- ☐ : A recorded memo in Answering machine that you have already checked.



## Recording limitation :

There is a 10 voice memo limit including those in Auto Answering.  
 Each voice memo has a 60 second limit.

## VS MENU

## VOICE COMMAND

 
Trains the Control Words into categories as follows.


## YES/NO



Use the Yes/No to train or untrain the VR with the control words, yes and no.

1 Press  .

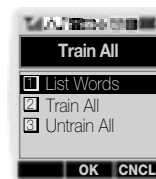2 Press  .



3 Select one of the following options with the Navigation key and press .






List Words : Displays list of control words in the Yes/No set. Select acontrol word, press  and either train, untrain or view the status of the word. To train with a word, press  and follow the voice prompts.

Untrain All : Untrain Yes/No set to recognize trained control words.



## VS MENU

**WAKE UP**

Use the Wake-Up to train or untrain the VR with the control word, wake up.

- 1 Press  .
- 2 Press  .
- 3 Select one of the following options with the Navigation key and press .








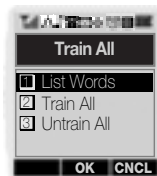 
List Words : Displays list of control words in the Yes/No set. Select a control word, press  and either train, untrain or view the status of the word. To train with a word, press  and follow the voice prompts.



Untrain All: Untrain Wake-up to recognize trained control words.

CH  
5**TOP LEVEL**

Use the Top Level to train or untrain the VR with your control words. (Dial, Redial, Voice memo, Phonebook, Cancel)

- 1 Press  .
- 2 Press  .
- 3 Select one of the following options with the Navigation key and press .








List Words : Displays list of control words in the Yes/No set. Select a control word, press  and either train, untrain or view the status of the word. To train with a word, press  and follow the voice prompts.


Untrain All : Untrain Top level set to recognize trained control words.



## VS MENU

 **DIGIT DIAL**

Use the Digit dial to train or untrain the VR with the control words (1 to 9, Zero, Oh, Verify, Clear, Call)

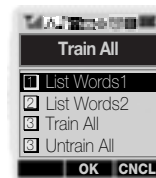- 1 Press  .
- 2 Press  .
- 3 Select one of the following options with the Navigation key and press .



List Words : Displays list of control words in the Yes/No set. Select a control word, press  and either train, untrain or view the status of the word. To train with a word, press  and follow the voice prompts.

Untrain All : Untrain Digit dial set to recognize trained control words.

CH  
5

## VS MENU

## VOICE DIAL

Lists, adds, or erases phone book entry voice tags.

## LIST

- 1 To list phone book entries with attached voice tags, press



- 2 Select one with the Navigation key and press .



EDIT : Retrain / Voice Setting / Clear  
PLAY : Voice tag play.

- 3 To play a voice tag, press (this key is missing – insert)
- 4 To edit an existing voice tag, press .

- 1) Retrain - "Retrain Voice Name" displays. Press then say a name.
- 2) Voice Setting - "Change" displays. Press , select a phone number, then press again.
- 3) Clear - "Removing voice names proceed" displays. Press and "All voice tags were deleted successfully" appears.

## VS MENU

## ADD

- 1 To add a voice tag to a phone book entry, press .



 
- 2 Select one group with the Navigation key and press .

- 3 Select a phone number with the Navigation key and press .

- 4 To add the voice tag, say the name.

## CLEAR ALL

- 1 To erase all voice tags in the list, press .

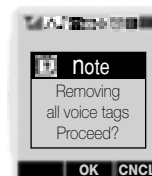

- 2 You will see "Removing all voice tags proceed?"

- 3 Press and you will see a message.

OK : Proceed to erase all the voice tags.  
CNCL : Return to the previous page.






- 4 To clear all voice tags, press .

## VS MENU

## VOICE SETTING

## UNTRAIN ALL






Use the Untrain All to untrain all trained control words.

- 1 Press  .
- 2 Press  .
- 3 Select "Yes" or "No" with the Navigation key and press .



## PROMPT MODE

Use the prompt mode to select either beginner or expert mode. The expert mode consists of shorter texts and just beeps as opposed to the beginner mode that gives full instructions.

- 1 Press  .
- 2 Press  .
- 3 Select one from Beginner/Expert with the Navigation key. Press .



## &lt;Beginner mode&gt;

1<sup>st</sup> prompt : "Main Menu "followed by a short beep.  
2<sup>nd</sup> prompt : "Speak a name to call, or say dial, redial, voice memo, phone book, or cancel", followed by a short beep.

## &lt;Expert mode&gt;






1<sup>st</sup> prompt : A sequence of low tone and high tone.  
2<sup>nd</sup> prompt : "Main menu".

 
If nothing is said after the 1<sup>st</sup> and 2<sup>nd</sup> prompts are heard, VR will time out and the phone will return to standby mode.

## VS MENU

## DIGIT MODE

Use the digit mode to select one of the following options ; ECHO, BEEP, ECHO+BEEP.



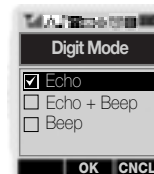


- 1 Press  .
- 2 Press  .
- 3 Select one option with the Navigation key and press .



ECHO : In VR mode, digit echoes when entered.  
BEEP : In VR mode, digit beeps when entered.  
ECHO+BEEP : In VR mode, digit echoes and beeps when entered.

## HFK MODE

Activates VR feature when phone is in hands free car kit (HFK) mode.

- 1 Press  .
- 2 Press  .
- 3 Select "Off" or "On" with the Navigation key and press .



A beep sounds the first time "Wake-up" is said. The second time, "Wake-up" is said, the phone changes to VR mode.



MEMO

## Chapter 6

### VOICE MAIL AND TEXT MESSAGE

This chapter addresses Voice Mail and Text Messaging functions including:

- Sending Messages
- Inbox Functions
- Outbox Functions
- Settings
- Filing Messages
- Erasing Messages

CH  
5

CH  
6

## WHEN A NEW MESSAGE ARRIVES

- 1 The following display appears when a new message arrives.



- 2 To display the message, press .

 


## VOICE MAIL

Displays the number of voice mails and accesses them by pressing .

- 1 Press .

The screen displays the number of new voice mails in your voice mailbox.

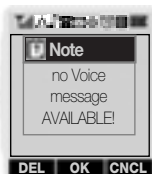

To access your voice mailbox, press .


- If there are no messages, "No Voice Message Available" appears.

## SEND NEW

 To send a new message:

- 1 Press .

- 2 Input a phone number and press .

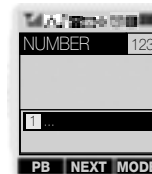

You can look it up from the phone book by pressing .

- 3 Input a text message and press .

(Please refer to page 31 for more details on entering letters and numbers.)

### 1. SEND

- 1 To send the text message, press .

If "Delivery Failed. Retry in 3 mins?" appears, press to select Auto Retry.

### 2. EDIT RECIPIENT

Edits the recipient's information – select if a wrong number is entered.

- 1 To change the recipient, press .
- 2 Input a new phone number, and press .
- 3 Input a new text message, and press .
- 4 To send, press .

## SEND NEW

 
### 3. EDIT MESSAGE

- 1 Press to change the text message.
- 2 Input a new text message, and press .

### 4. PRIORITY

Marks messages urgent.

- 1 To send an urgent message, press and select "Urgent" with the Navigation Key. Press .

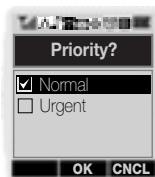

### 5. CALL BACK

Allows you to input a specific call back number. Your phone number is the default.

- 1 To change the call back number, press .
- 2 Input a call back number and press .



### 6. SAVE

This allows you to save the message into 'Outbox' folder to use later.

 
- 1 To save the text message, press .



### 7. REQUEST DELIVERY ACK

When activated, confirms if message was successfully delivered.


- 1 To confirm that your message is delivered, press and select "Yes" with the Navigation Key. Press .
- 2 Press .

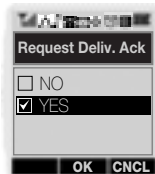

## INBOX

Manages received text messages.

 - 1 Press and .

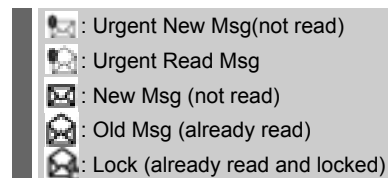

- 2 Select a message and press . The message is displayed.

- 3 press .

### 1. REPLY

- 1 To reply to the text message, press .
- 2 Type your reply and press . (See page 31 for more information on entering letters, numbers and characters.)


### 2. ERASE

- 1 To erase the text message, press .
- 2 When you see "Delete Msg?" press .




## INBOX


### 3. FORWARD

- 1 To erase a text message, press .



### 4. SAVE

- 1 To save a text message in the Filed Folder, press .

### 5. SAVE ADDRESS

- 1 To save the call back number of a message into the phonebook, press .

### 6. LOCK




- 1 To lock or unlock a text message, press .
- 2 Select "Lock" or "Unlock" with the Navigation key. Then, press .

 


## OUTBOX

Manages sent text messages or messages waiting to be sent.

### CHECKING SENT TEXT MESSAGES


- 1 Press  and . Select a message with the Navigation key. Then, press .

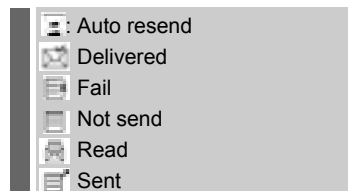



- 2 The text message is displayed.

- 3 press .

### 1. RESEND

- 1 To resend a text message, press .




### 2. ERASE

- 1 To erase a text message, press .
- 2 When you see "Delete Msg?" press .




## OUTBOX


### 3. SEND TO

 
- 1 To send a message to another person, press .
- 2 Input phone number and press .
- 3 Input a text message and press .

### 4. SAVE

- 1 To save the outbox text message in the Filed Folder, press .

### 5. STATE

- 1 To display the status of an outbox message, press .

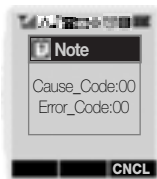






## SETTINGS

Manages messaging features through various features.
 
### SAVE SENT MESSAGES



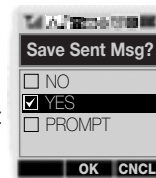

Saves every sent message.

- 1 Press  then, .
- 2 Press .  
Select one from No/Yes/Prompt with the Navigation key.  
Press .



### DEFAULT CALL BACK NUMBER




Edits a default call back number so that the recipient can call back or reply.

- 1 Press  and, .
- 2 Press .  
Input a call back number.  
Then press .




### ALERT

Enables phone to alert you of an incoming message..

- 1 Press  then .
- 2 Press .  
Select one from the Ringer/Vibrate/Silent/Ringer & Remind/Vibrate & Remind with the Navigation key.



 
The Ringer & Remind or Vibrate & Remind rings or vibrates every 2 minutes to remind you of an incoming message. They will be cleared when any key is pressed.

- 3 Press .

## SETTINGS

### DISPLAY DELIV.ACK

- 1 Press and, .
- 2 Press .  
Select one from No/Yes with the Navigation key.  
Press .

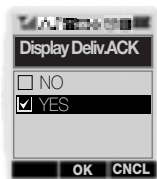

### AUTO ERASE

Automatically erases inbox/outbox messages when new messages arrive.

#### 1. AUTO ERASE INBOX

- 1 Press .
- 2 Press .  
Select "Disable" or "Old Inbox" with the Navigation key.
- 3 Press .



#### 2. AUTO ERASE OUTBOX

- 1 Press .
- 2 Press .  
Select "Disable" or "Old Outbox" with the Navigation key.
- 3 Press .

 


## SETTINGS

### ENTRY MODE

Sets an Entry Mode as a default.  
The T9 mode indicator will appear whenever the input mode is activated if the T9 mode is the default.

- 1 Press and .
- 2 Then press .  
Select "T9 Mode" or "Alpha Mode" with the Navigation key.
- 3 Press .

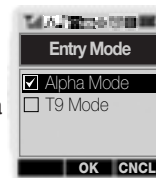

## FILED

## FILED

 
Manages saved messages from the Inbox/Outbox.

- 1 Press and .  
Select a text message with the Navigation key.  
Press .




- 2 The text message is displayed.  
Press .

- 3 If the text message is saved from the "Inbox" menu, this screen will be displayed.

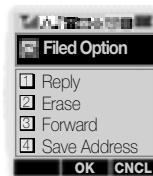

 If the text message is saved from the "Outbox" menu, this screen will be displayed.

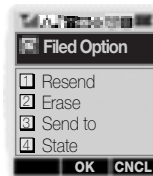

- 4 Select one by pressing .

## ERASE ALL

Erases all the messages from the Inbox, Outbox or Filed folder.

## ERASE MESSAGES

- 1 Press .



- 2 1. To erase all the inbox messages, press .

Erases entire inbox or old inbox.

2. To erase all the outbox messages, press .

Erases entire outbox or old outbox.

3. To erase the filed messages, press .

- 3 Select "Yes" or "No" with or .

MEMO

# Chapter 7

## WEB BROWSING

This chapter addresses Internet services and web browsing.  
For more detailed information contact your service provider.


CH  
6

CH  
7




## START INTERNET BROWSER

### ACCESS THE INTERNET



- 1 To start your Internet browser and access websites through your wireless handset Press and hold  .



## BROWSER MENU



The browser menu lists the actions necessary to operate the browser. Press and hold  to access the browser menu.

### RELOAD

- 1 To reload the current page Press hold  then, press  .





### HOME

- 1 to display the homepage Press and hold  then, press  .





## BROWSER MENU

### BOOKMARKS

- 1 To view your bookmark list, press and hold  , then press  . This provides easy website access without entering its URL.





### MARK SITE

- 1 To add the current page to your bookmark list Press hold  then, press  .

"No bookmark service site "is displayed when the Internet site cannot support the bookmark service.





### ABOUT OPENWAVE

- 1 to view the browser version and copyright information Press hold  then, press  .




## BROWSER MENU

### ADVANCED...

- 1 To display the following Advanced menu, press and hold , then press .




### SHOW URL

- 1 To display the URL (Uniform Resource Locator) of the current page.  
The URL is the address of a website Press and hold .




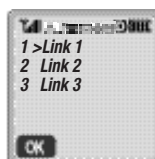 
### HOMEPAGE

- 1 To change your homepage, press . This is the first page you will see when you access the Internet.




### SET UP.LINK

- 1 To select an alternate up.Link Press .




## BROWSER MENU

 
 
### OFFLINE SERVICES

- 1 To navigate through the list of installed channel applications and guide you to the entry point of the applications Press .




### OUTBOX


- 1 To display the number of items that are delivery-pending and how long they have been there Press .

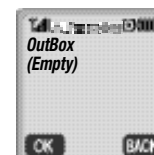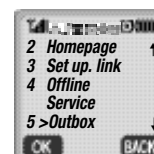


## BROWSER MENU

### RESTART UP.BROWSER

 - 1** To clear the history of viewed pages and start a new session with up.Link Press .

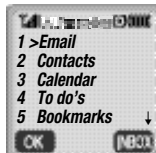

### ENCRYPTION

- 1** Press  to use for security.



## Chapter 8

### SAFETY AND WARRANTY

This chapter addresses the safety guidelines and precautions to follow when operating your phone. Please make sure to be aware of all the details about the safety to operate your phone in the way that you are supposed to.

This chapter contains the terms and conditions of services and the warranty for your phone. Please review them thoroughly.

- Antenna Care
- Driving and Talking on the Phone
- Use Around Electronic Devices
- Precautions
- SAR Information

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Read This Information Before Using Your Handheld  
Portable Cellular Telephone

### EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*  
NCRP Report 86 (1986) \*  
ICNIRP (1996) \*

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

### ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

1\* : American National Standards Institute.  
2\* : National Council on Radiation protection and measurements.  
3\* : International Commission on Nonionizing Radiation Protection.

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

### DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



**WARNING:** Failure to follow these instructions may lead to serious personal injury and possible property damage.

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

### ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers :

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

### OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

### POSTED FACILITIES

Turn your phone OFF where posted notices so require.

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

### OTHER SAFETY GUIDELINES

### AIRCRAFT

FCC and Transport Canada Regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

### BLASTING AREAS

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

### POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

### PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.



DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.



DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.



DO NOT expose this equipment to rain or spilled beverages.



DO NOT use unauthorized accessories.



DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.



DO NOT short-circuit the battery terminals with metal items etc.

## SAFETY INFORMATION FOR FCC RF EXPOSURE



**WARNING! Read this Information before using**

### CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

### BODY-WORN OPERATION

This device was tested for typical body-worn operation with the back of the phone kept 1 inches (2.54cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1 inches (2.54cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. All belt-clips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

### VEHICLE MOUNTED EXTERNAL ANTENNA (OPTIONAL, IF AVAILABLE)

A minimum separation distance of 7.9 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.



For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

## SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.989 W/kg and when worn on the body, as described in this user guide, is 0.388 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on PP4TX-30B.

## SAR INFORMATION

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling misuse, neglect or accident”.

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Audiovox product. Be careful. Some of these products may not be compatible to use with your Audiovox product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Audiovox accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Audiovox product.



### AUDIOVOX COMMUNICATIONS CORP.

555 Wireless Blvd., Hauppauge, New York 11788, 800-229-1235  
16808 Marquardt Avenue, Cerritos, California 90703, 562-802-5100  
Audiovox Canada  
5155 Spectrum Way, Unit #5, Mississauga, Ontario  
Canada L4W 5A1, 800-465-9672

## 12 MONTH LIMITED WARRANTY

AUDIOVOX COMMUNICATIONS CORP. (the Company) warrants to the original retail purchaser of this Audiovox Handheld Portable Cellular Telephone, that should this product or any part thereof(except the items listed below), under normal use and conditions, be proven defective in material or workmanship within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect (s).

The keypad and display are similarly warranted for ninety (90) days from date of purchase.

The accessories consisting of the antenna and rechargeable battery pack, desktop charger are similarly warranted for twelve (12) months from original purchase.

This Warranty does not apply to batteries, fuses, or costs incurred for testing or checking, or to any product or part hereof which has suffered through alteration, serial number defacement, improper installation, excessive temperature or humidity, environmental conditions, mishandling misuse, neglect or accident. This Warranty is not assignable or transferable.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of warranty coverage, specification of defect(s), transportation prepaid, to the Company at the address shown below. For TRAVELERS WARRANTY SERVICE.

Call toll free to (800) 229-1235 for reference to an Authorized Warranty Station in your area.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

The Company disclaims liability for geographic coverage, inadequate signal to antenna, communications range or operation of the Cellular System as a whole.



## 12 MONTH LIMITED WARRANTY

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**IN U.S.A.:** Audiovox Communications Corp.  
555 Wireless Blvd.  
Hauppauge, NY 11788  
(800)229-1235

**IN CANADA:** Audiovox Canada Ltd.  
5155 Spectrum Way, Unit #5  
Mississauga, Ontario L4W 5A1  
(800)465-9672