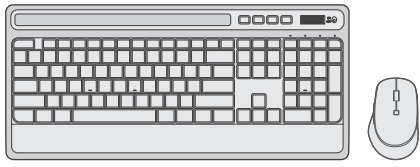 
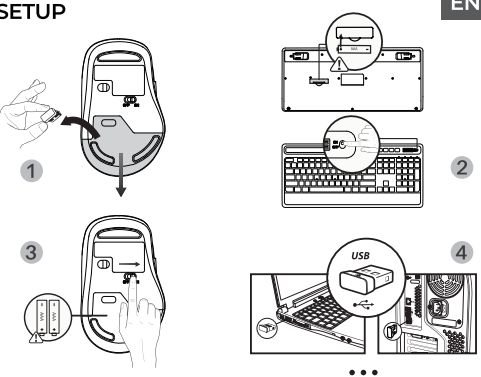 
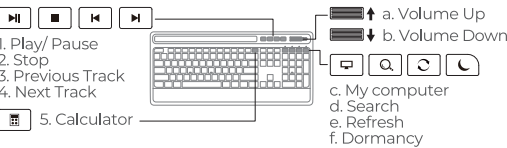 
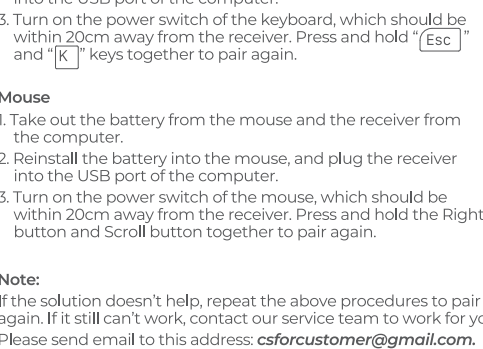 
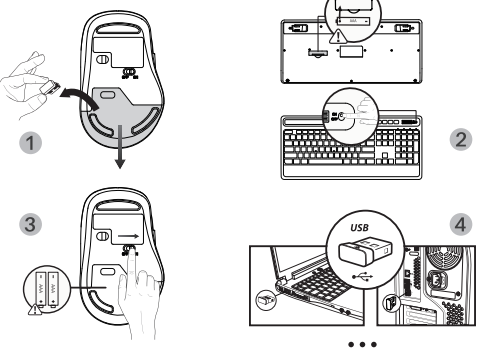 
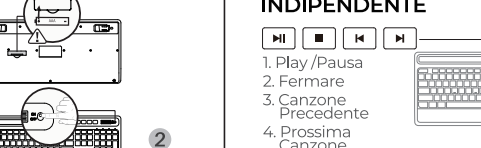 


<div> <div>WIRELESS KEYBOARD AND MOUSE COMBO</div> <div>USER MANUAL</div> <div>  </div> <div> <div>EN</div> <div>DE</div> <div>FR</div> <div>ES</div> <div>IT</div> </div> </div>	<div> <div>SETUP</div> <div>  </div> <div> <ol style="list-style-type: none"> <li>Remove the keyboard and mouse out of the box, and remove the USB receiver from the mouse battery compartment.</li> <li>Install 1 AAA battery properly into the keyboard. Switch the power on.</li> <li>Install 2 AAA batteries properly into the mouse. Switch the power on.</li> <li>Plug the USB receiver into the USB port of the computer.</li> <li>The mouse and keyboard are ready to use after the driver is installed automatically on the computer.</li> </ol> </div> <div> <div>SHORTCUT KEYS FOR MULTIMEDIA PLAYER</div> <div> <div>FN+F1=Media Player</div> <div>FN+F2=Volume +</div> <div>FN+F3=Volume -</div> <div>FN+F4=Mute</div> <div>FN+F5=Previous Track</div> <div>FN+F6=Next Track</div> </div> <div> <div>FN+F7=Play/Pause</div> <div>FN+F8=Stop</div> <div>FN+F9=Home Page</div> <div>FN+F10=Email</div> <div>FN+F11=My Computer</div> <div>FN+F12=Favorites</div> </div> </div> <div> <div>- 01 -</div> </div> </div>	<div> <div>INDEPENDENT MULTIMEDIA KEYS</div> <div>  </div> <div> <ol style="list-style-type: none"> <li>1. Play / Pause</li> <li>2. Stop</li> <li>3. Previous Track</li> <li>4. Next Track</li> <li>5. Calculator</li> </ol> </div> <div> <div>FEATURES</div> <div> <ol style="list-style-type: none"> <li>The mouse and keyboard share one receiver, and the receiver is in the battery compartment at the bottom of the mouse.</li> <li>Adjustable mouse DPI levels: 800-1200-1600 (the default setting is 1200).</li> <li>It has automatic sleep mode and wake-up mode. When it is not used for 8 min, the mouse will enter the sleep mode. Press any button to wake up the mouse. Turn off the power switch to save power if the mouse is left unused for a long time.</li> </ol> </div> <div> <div>CONSIDERATIONS</div> <div> <ol style="list-style-type: none"> <li>Use 1.5V AAA battery only. To protect internal components from damage, avoid using batteries of high voltage. If the product is unused for a long time, take out the battery to prevent the components from being corroded.</li> <li>The product adopts 2.4GHz wireless transmission with a 10-meter transmission distance. The distance may be shortened due to big obstructions and low battery.</li> <li>For the first use, the product may fail to work (connection error etc.) for it has been unused for a long time. Try pairing again.</li> </ol> </div> </div> <div> <div>SOLUTION TO CONNECTION FAILURES</div> <div>Keyboard</div> <ol style="list-style-type: none"> <li>1. Take out the battery from the keyboard and the receiver from the computer.</li> </ol> <div>- 02 -</div> </div> </div></div>	<div> <div>GEBRAUCHSANWEISUNG</div> <div>  </div> <div> <ol style="list-style-type: none"> <li>2. Reinstall the battery into the keyboard, and plug the receiver into the USB port of the computer.</li> <li>3. Turn on the power switch of the keyboard, which should be within 20cm away from the receiver. Press and hold "[Esc]" and "[K]" keys together to pair again.</li> </ol> </div> <div> <div>Mouse</div> <ol style="list-style-type: none"> <li>1. Take out the battery from the mouse and the receiver from the computer.</li> <li>2. Reinstall the battery into the mouse, and plug the receiver into the USB port of the computer.</li> <li>3. Turn on the power switch of the mouse, which should be within 20cm away from the receiver. Press and hold the Right button and Scroll button together to pair again.</li> </ol> <div>Note:</div> <p>If the solution doesn't help, repeat the above procedures to pair again. If it still can't work, contact our service team to work for you. Please send email to this address: <a href="mailto:csforcustomer@gmail.com">csforcustomer@gmail.com</a>.</p> </div> <div> <div>KOMBIERTE MULTIMEDIAFUNKTIONEN</div> <div> <div>FN+F1=Spiele</div> <div>FN+F2=Laustärke -</div> <div>FN+F3=Laustärke +</div> <div>FN+F4=Stumm</div> <div>FN+F5=Vorheriger Song</div> <div>FN+F6=Nächster Song</div> </div> <div> <div>FN+F7=Wiedergabe/Pause</div> <div>FN+F8=Wiedergabestopp</div> <div>FN+F9=Startseite</div> <div>FN+F10=Mail</div> <div>FN+F11=Mein Computer</div> <div>FN+F12=Favorite</div> </div> </div> <div> <div>- 03 -</div> </div> </div>	<div> <div>INSTRUCCIONES DE USO</div> <div>  </div> <div> <ol style="list-style-type: none"> <li>1. Saque el teclado y el ratón de la caja de embalaje y saque el receptor del compartimento de la batería del ratón.</li> <li>2. Inserte una batería seca AAA de 1.5V en el teclado de acuerdo con la polaridad correcta y encienda el interruptor del teclado.</li> <li>3. Inserte 2 pilas secas AAA de 1.5V en el mouse de acuerdo con la polaridad correcta y encienda el interruptor del mouse.</li> <li>4. Inserte el receptor en el puerto USB de la computadora.</li> <li>5. Espere a que la computadora instale automáticamente el controlador antes de poder comenzar a usarlo.</li> </ol> </div> <div> <div>FUNCIONES MULTIMEDIA COMBINADAS</div> <div> <div>FN + F1 = Jugar</div> <div>FN + F2 = Volumen -</div> <div>FN + F3 = Volumen +</div> <div>FN + F4 = Silencio</div> <div>FN + F5 = Canción anterior</div> <div>FN + F6 = Siguiente canción</div> </div> <div> <div>FN + F7 = Reproducir / Pausar</div> <div>FN + F8 = Parada de reproducción</div> <div>FN + F9 = Página de inicio</div> <div>FN + F10 = Correo</div> <div>FN + F11 = Mi computadora</div> <div>FN + F12 = Favorito</div> </div> </div> <div> <div>- 04 -</div> </div> </div>	<div> <div>LA CONNESSIONE È ANOMALA SOLUZIONE</div> <div>Tastiera</div> <ol style="list-style-type: none"> <li>1. Rimuovere la batteria dalla tastiera del computer e dal ricevitore.</li> <li>2. Sostituire la batteria nella tastiera e reinserire il ricevitore nella base del computer.</li> <li>3. Accendere l'interruttore della tastiera a una distanza di 20cm dal ricevitore. Premere contemporaneamente i tasti "[Esc]" + "[K]" sulla tastiera per verificare il codice.</li> </ol> <div>Mouse</div> <ol style="list-style-type: none"> <li>1. Rimuovere la batteria dal mouse e il ricevitore dal computer.</li> <li>2. Reinserrire la batteria nel mouse e ricollegare il ricevitore alla presa del computer.</li> <li>3. Accendere l'interruttore del mouse a una distanza di 20cm dal ricevitore. Premere contemporaneamente il tasto destro del mouse e la rotella di scorrimento per continuare. Abbina il codice.</li> </ol> <div>Nota:</div> <p>Il prodotto continua a non rispondere dopo la codifica secondo il metodo di cui sopra. Puoi provare a ripetere le azioni precedenti per ricodificare. Se non ricevi ancora risposta dopo aver provato, contatta i nostri colleghi del servizio clienti per aiutarli a risolverlo. L'e-mail dell'assistenza clienti è: <a href="mailto:csforcustomer@gmail.com">csforcustomer@gmail.com</a>.</p> <div>- 05 -</div> </div>	<div> <div>FCC STATEMENT</div> <p>Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <p>(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>FCC Radiation Exposure Statement</p> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.</p> <div>- 06 -</div> </div>	<div> <div>CORRECT DISPOSAL OF THIS PRODUCT</div> <p>(Waste Electrical&amp; Electronic Equipment)</p> <p>This Marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life.</p> <p>To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.</p> <p>Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.</p> <div>- 07 -</div> </div>	<div> <div>CAUTION</div> <div>RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.</div> <p>Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.</p> <p>Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.</p> <p>A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.</p> <div>- 08 -</div> </div>	<div> <div>FUNZIONE CHIAVE MULTIMEDIALE INDEPENDENTE</div> <div>  </div> <div> <ol style="list-style-type: none"> <li>1. Play / Pause</li> <li>2. Ferma</li> <li>3. Canzone Precedente</li> <li>4. Prossima Canzone</li> <li>5. Calcolatore</li> </ol> </div> <div> <div>MARCHIO DEL PRODOTTO</div> <ol style="list-style-type: none"> <li>Il mouse e la tastiera condividono un ricevitore, che si trova nel vano batterie sul lato inferiore del mouse.</li> <li>DPI del mouse regolabile: 800-1200-1600 (impostazione predefinita 1200).</li> <li>Il mouse ha una modalità di sospensione e riattivazione automatica. Il mouse entrerà in modalità di sospensione 8 minuti dopo aver smesso di usarlo. Puoi toccare qualsiasi pulsante per svegliarlo. Se non lo utilizzerai per molto tempo, spegni l'interruttore per risparmiare energia.</li> </ol> <div>PRECAUZIONI</div> <ol style="list-style-type: none"> <li>Questo prodotto può utilizzare solo batterie AAA da 1.5V. Si prega di evitare di utilizzare batterie ad alta tensione per evitare danni ai componenti interni. Se non si utilizza il prodotto dopo un lungo periodo, rimuovere la batteria e conservarla in un luogo sicuro per prevenire la corrosione delle parti.</li> <li>Questo prodotto utilizza onde radio a 2.4GHz per trasmettere i dati. La distanza di utilizzo effettiva è di 10 metri. Se nell'ambiente operativo sono presenti oggetti di grandi dimensioni che interferiscono o la carica della batteria è insufficiente, la portata può essere ridotta.</li> <li>Potrebbe non esserci alcuna reazione la prima volta che lo usi, come ad esempio B, si verifica una caduta del codice. Ciò è causato dal mancato utilizzo per lungo tempo. Puoi provare a ricodificare.</li> </ol> <div>- 09 -</div> </div> </div>
---	---	--	--	--	--	---	---	---	--

<div> <div>创享</div> <div>COUSO</div> </div>	<div> <div>技术要求：（材质，工艺，尺寸，公差等）</div> <div> <div>1）材质：80g书写纸</div> <div>2）工艺：单色 双面印刷，十字风琴折</div> <div>3）尺寸：75*110mm，展开:375*220mm</div> <div>4）公差：+/-0.1mm</div> </div> </div>	<div> <div>名称</div> <div>产品型号</div> <div>客户</div> <div>比例</div> </div>	<div> <div>说明书</div> <div>K200+668</div> <div>帕拓逊</div> <div>1:1</div> </div>	<div> <div>设计</div> <div>日期</div> <div>产品料号</div> <div>备注</div> </div>	<div> <div>丽</div> <div>2021-09-11</div> <div>405-000248</div> <div></div> </div>	<div> <div>审核</div> <div>批准</div> <div>版本</div> <div>A1</div> </div>