

折后尺寸：68*100mm；105G双铜+单K，双面印刷。



radioshack™

WIRELESS POWER BANK


model 2309279

USER MANUAL



PDF

Adobe

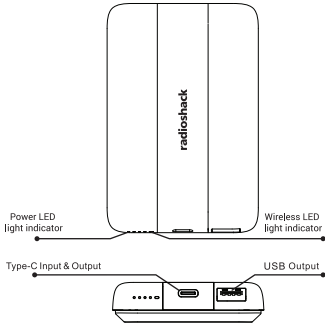

Power LED light indicator

Wireless LED light indicator

Type-C Input & Output

USB Output

Specifications

Size	4.2*2.7*0.8 inch
Model No.	2309279
Capacity	10000mAh/38.5Wh
Type-C Input	PD18W(DC 5V/3A,9V/2A,12V/1.5A)
Type-C Output	PD20W(DC 5V/3A,9V/2.22A,12V/1.67A)
USB-A Output	QC3.0 18W(DC 5V/3A,9V/2A,12V/1.5A)
Wireless Output	15W Max.
Total Output	5V/3A

Operation Instructions

Indicator description:

Working Status	Wireless Charging Indicator	Battery Level Indicator
Wireless charging actived	The green LED flashes 3 times and goes out	The white LED indicate the current power
Charging	The green LED light breathing flashing	the white LED indicate the current power, always On
Metal or abnormal objects detected	Flashing Green	Off after 30s
When charging the power bank	The green LED flashes 3 times and goes out	The white LED indicate the current power, flashing
Fully charged	The white LED is always on	Always On
Power off	Off after 37s	Off after 37s


Wireless charging: Put a wireless charging phone on 2309279 (iPhone 12 and above series can be attracted by magnetic force directly), Shake the power bank the indicator light will turn on, and start charging automatically after 4.5s, Igiths o (wireless LED indicator) after 3 ashes and just the power LED keeps on.



Type-C charging: Use a Type- C cable to connect with the 2309279, the other end connect to the mobiles, the 2309279 will charge for the mobiles automatically.

USB charging: Use a USB cable to connect with the 2309279, the other end connect to the mobiles, the 2309279 will charge for the mobiles automatically.

Recharge the power bank 2309279: Connect a USB cable to USB adapter, connect the other end of the Type-C port on the input port on the power bank. Plug the USB adapter into the outlet to begin charging

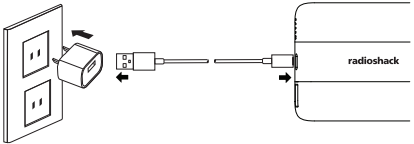

Attention

Read all the instructions before using the product.

Do not subject the product to direct sun and high temperatures.

Do not place on a surface that is wet from water or cleaning solvents.

Do not puncture, throw, drop, bend or modify.

Stop using the product when it generates unusual smell, heating, distortion of any other abnormalities.

Please keep it out of the reach of children.

CORRECT DISPOSAL FOR THIS PRODUCT

This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

CAUTION

Risk of Fire and Burns, Do Not Open, Crush, Heat Above 60℃ or Incinerate.

Follow Manufacturer's Instructions.

FCC WARNING:

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

⚠ The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.