成品尺寸: 80X115mm

材质: 128G 双铜, 4色印刷, 折页





PCMPSB1BK Portable Wireless BT Streaming Speaker

IPX6 Waterproof Wireless Speaker with TWS Function for Outdoor Play, Built-in Microphone



 
WIRELESS BT SPEAKER AND ACCESSORIES

- A. Wireless BT Speaker
- **B.** Charging Cable
- C. 3.5mm AUX Cable
- D. User Manual












BASIC FUNCTIONS

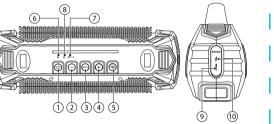



- 1. ① Power Button
- 2. Volume- (press and hold for previous song)
- 3. ►IIJ Play/Pause Call
- 4. + Volume+ (press and hold for next song)
- 5. TWS connection (short press) BT disconnection (press and hold) **EQ mode** (quick press 2 times to choose different 3 EQ modes: Standard/ Extra bass/ Outdoor. There will be a "BEEP" sound when you change the EQ successfully.)
- 6. Blue: BT indicator light Green: AUX indicator light
- 7. White: TWS indicator light **Red:** Charging/power indicator light

- 8. Microphone
- 9. AUX audio input port
- 10. W USB charging port

OPERATION GUIDE

 - 1. Power on/off: Press and hold power button " \circlearrowleft " for 2-3 seconds to power on/off.
- 2. Wireless BT Mode: It will enter to BT mode after power on, and the blue indicator light will flash. Then choose "Pyle PCMPSB1BK" from devices list. You will hear voice prompt once connected, and the blue indicator light will stay on. Now you can start to play your music. Press and hold " 2" for 2-3 seconds to disconnect BT connection.



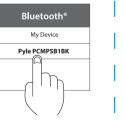


- 3. **Volume control:** Short press "+" to increase volume, short press "—" to decrease volume; when the volume is increased to maximum you will hear a "Beep" voice prompt.
- Previous/Next song control: Press and hold "+" for 2 seconds to play next song, press and hold "—" for 2 seconds to play previous song on BT
- Operation on playing status: Short press "▶IIJ" to pause playing, press again to start playing on BT mode; Short press "▶ID" to mute, press again to un-mute on Aux mode.
- 4. Handsfree Call: Using your mobile phone to call when connected with PCMPSB1BK. PCMPSB1BK will enter handfree call mode automatically. When you have incoming call, short press "►ID" to pick up call/short press again to hang up call/press and hold to reject call. When you picking up a call, short press "O" can transfer the handsfree call to your mobile phone, which can protect your privacy in time. Press "♥" again, your phone call will become handsfree call again.





 5. TWS connection: If you have two PCMPSB1BK, power on both of them, they will enter to BT mode. Short press each of their " button, the white TWS indicator light will flash. Then they will connect with each other automatically. After successful connection, both of their white indicator light will stay on. The master **PCMPSB1BK**s blue indicator light will keep flashing, the sub-master speaker's blue indicator light will stay lit. After the two PCMPSB1BK successful connection with your phone, both of them will play music at the same






6. AUX audio input: Put the 3.5mm audio cable into AUX port of **PCMPSB1BK**, it will turn into AUX mode automatically and the green indicator light will be on. Connect the other side with your phone or PC, then you can start to play music.

a. This function needs two PCMPSB1BK, and both

of them should be powered on and into BT mode.

 b. Do not connect with other BT devices if you want



7. Charging

 
Remark:

to make TWS connection.

- Do not use non-certificated power adapter to
- Suggest to use output 5V/2A (or above 2A) adapter to charge.

2 www.PyleUSA.com www.PyleUSA.com **3 4** www.PyleUSA.com www.PyleUSA.com **5 6** www.PyleUSA.com www.PyleUSA.com 7

- 1. Please charge your **PCMPSB1BK** ASAP after your heard low battery voice prompt.
- 2. The red indicator light will be on while charging and will turn off when charging is finished.



8. Energy Saving: If your PCMPSB1BK does not connect with any BT devices in 10 minutes on BT mode, it will power off automatically. You need to press and hold "O" for 2-3 seconds to power on.

FUNCTIONS INDICATOR

Blue: BT indicator light

White: TWS indicator light Green: AUX indicator light Red: Charging/ power indicator light





Power ON

- Blue indicator light will be ON when powered ON and enters BT mode automatically. Blue indicator light will flash quickly (on BT searching devices status).
- Green indicator light will **ON** when connected by 3.5mm audio cable.

Wireless BT mode

- Blue indicator light be ON once connected successfully.
- Blue indicator light keeps flashing if your BT device is out of range or disconnected. (on searching status)

AUX mode

Green indicator light will on when connected by 3.5mm audio cable.

TWS mode

- TWS indicator light will flash quickly when it is on TWS mode.
- TWS indicator light stays ON once connected successfully.

Charging mode

Red indicator light will on while charging; red indicator light will off when charging finished.

Low battery

Red indicator light will quick flash when battery

Low battery power off

PCMPSB1BK will power off automatically when battery is lower than 10%. You will hear a power off voice prompt.

Technical Specs:

- Speaker Unit: 20W*2/4Ω
- Frequency Response: 70Hz-18KHz
- S/N Ratio: ≥70dB
- Built-in Rechargeable Battery Capacity: Li-ion 7200mAh
- Charging Time: 3~4 hours
- Working Time: 7~8 hours 70% volume level
- Charging Current: 5V/2A
- Dimensions (L x W x H): 12.48" x 6.38" x 3.94"-in.

FREQUENTLY ASKED OUESTIONS

- **Q:** What kind of charger should we use for the
- A: All common USB chargers can be used, while we suggest the ones 5V/2A or above 2A.
- O: What if there's noise or discontinuous sound during playing?
- A: The speaker can be normally used within 10m under no obstruction environment. If it is beyond 10m or with obstruction, there might be noise or discontinuous sound.
- Q: Why the speaker powers off automatically after power on but no BT disconnection?
- A: When there is no BT pairing in 10 minutes, the speaker will shut down automatically to reduce power consumption.
- Q: Why does the speaker cannot connect the oncepaired cellphone?
- A: First, remove the speaker's paired name from the cellphone's BT List and then restart pairing.
- **Q:** What is the working sequence of the speaker?
- A: Default mode is BT mode but when inserted in AUX in cable, it will be AUX IN mode.

- **Q:** The speaker doesn't start up in a normal situation.
- A: Please plug-in the charger and try in a few minutes or try to press and hold power button 10-30s to reset.

Notes:

- 1. Before using this product, please read this manual carefully and keep it for future reference.
- 2. For the first use, please fully charge the product.
- 3. Use certified adapter that has passed national safety certification.
- 4. If you will not use the product for a long time, be sure to charge it once a month at least to maintain its performance.
- 5. Do not use this product in an extremely cold or hot environment, such as temperature beyond the range of 41°F-95°F. If using it beyond the above range, the product may stop automatically to protect the internal circuit.
- 6. When charging in a high temperature environment, the product may automatically stop charging to protect the battery. At this time, the charging indicator usually flashes quickly to indicate that the charging environmental temperature or the product internal temperature is too high.
- 7. Storage environment temperature: $-41\sim95$ °F RH <70% (recommended 77°F ±5).

Important Safety Instructions:

- 1. Do not disassemble or repair this speaker personally, otherwise it may cause damage or personal injury.
- 2. Do not use it in dusty, humid, dry, and hightemperature environment.
- 3. Do not place this product near heat source, or a place with direct sunlight, a lot of dust, or mechanical vibration.
- 4. In order to reduce the risk of fire, please do not cover this product with newspapers, table cloths, curtains etc., during use.
- 5. If the product has a waterprooff feature. DO NOT exceed the nominal parameter range when using it.
- 6. When the product is damaged such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls, it must be repaired.
- 7. When the product is fully charged, **DO NOT** connect it to the charger for further long time charging.
- 8. The maximum ambient temperature should not exceed 104°F.

California Prop 65 Warning

This product contains Phthalates which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

PYLE PyleUSA.com



Ouestions? Issues?

We are here to help! Phone: (1) 718-535-1800 Email: support@pyleusa.com

8 www.PyleUSA.com www.PyleUSA.com **9 10** www.PyleUSA.com www.PyleUSA.com 11 12 www.PyleUSA.com www.PyleUSA.com 13 Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following twoconditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one ormore of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **Sound Around INC** may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.